



# COMBIVERT F6

INSTRUCTIONS FOR USE | INSTALLATION F6 HOUSING 2

Translation of the original manual Document 20099887 EN 12





## **Preface**

The hardware and software described in this document are products of KEB. The information contained in this document is valid at the time of publishing. KEB reserves the right to update this document in response to misprints, mistakes or technical changes.

### Signal words and symbols

Certain procedures within this document can cause safety hazards during the installation or operation of the device. Refer to the safety warnings in this document when performing these procedures. Safety signs are also located on the device where applicable. A safety warning is marked by one of the following warning signs:

**A** DANGER

Dangerous situation, which will cause death or serious injury iif this safety warning is ignored.

**WARNING** 

Dangerous situation, which may cause death or serious injury if this safety warning is ignored.

**A** CAUTION

Dangerous situation, which may cause minor injury if this safety warning is ignored.

**NOTICE** 

Situation, which can cause damage to property if this safety warning is ignored.

#### **RESTRICTION**

Used when the following statements depend on certain conditions or are only valid for certain ranges of values.



Used for informational messages or recommended procedures.

#### More symbols

- This arrow starts an action step.
- / Enumerations are marked with dots or indents.
- => Cross reference to another chapter or another page.





#### Laws and guidelines

KEB Automation KG confirms with the EC declaration of conformity and the CE mark on the device nameplate that it complies with the essential safety requirements.

The EC declaration of conformity can be downloaded on demand via our website.

### Warranty and liability

The warranty and liability on design, material or workmanship for the acquired device is given in the general sales conditions.



Here you will find our general sales conditions. https://www.keb-automation.com/terms-conditions



Further agreements or specifications require a written confirmation.

### **Support**

Although multiple applications are referenced, not every case has been taking into account. If you require further information or if problems occur which are not referenced in the documentation, you can request the necessary information via the local KEB agency.

The use of our units in the target products is outside of our control and therefore lies exclusively in the area of responsibility of the customer.

The information contained in the technical documentation, as well as any user-specific advice in spoken and written and through tests, are made to best of our knowledge and information about the intended use. However, they are regarded as being only informal and changes are expressly reserved, in particular due to technical changes. This also applies to any violation of industrial property rights of a third-party. Selection of our units in view of their suitability for the intended use must be done generally by the user.

Tests can only be done within the intended end use of the product (application) by the customer. They must be repeated, even if only parts of hardware, software or the unit adjustment are modified.

## Copyright

The customer may use the instructions for use as well as further documents or parts from it for internal purposes. Copyrights are with KEB and remain valid in its entirety.

This KEB product or parts thereof may contain third-party software, including free and/ or open source software. If applicable, the license terms of this software are contained in the instructions for use. The instructions for use are already available to you, can be downloaded free of charge from the KEB website or can be requested from the respective KEB contact person.

Other wordmarks or/and logos are trademarks ( $^{\text{TM}}$ ) or registered trademarks ( $^{\text{R}}$ ) of their respective owners.



## **Table of Contents**

	Pretace	3
	Signal words and symbols	3
	More symbols	3
	Laws and guidelines	4
	Warranty and liability	4
	Support	4
	Copyright	
	Table of Contents	
	List of Figures	
	List of Tables	
	Glossary	
	Standards for drive controllers	
	Product standards that apply directly to the drive controller	
	Basic standards to which drive controller standards refer directly	
	Standards that are used in the environment of the drive controller	15
1	Basic Safety Instructions	16
1		
	1.1 Target group	
	1.2 Transport, storage and proper use	
	1.4 Electrical connection	
	1.4.1 EMC-compatible installation	
	1.4.2 Voltage test	
	1.4.3 Insulation measurement	
	1.5 Start-up and operation	
	1.6 Maintenance	
	1.7 Repair	
	1.8 Disposal	
_		<b>.</b> -
2	Product Description	24
	2.1 Specified application	24
	2.1.1 Residual risks	24
	2.2 Unintended use	24
	2.3 Product features	25
	2.4 Part code	
	2.5 Nameplate	
	2.5.1 Configurable options	29
3	Technical data	30
	3.1 Operating conditions	30
	3.1.1 Climatic environmental conditions	
	3.1.2 Mechanical environmental conditions	
		_

## TABLE OF CONTENTS

	3.1.3 Chemical / mechanical active substances	31
	3.1.4 Electrical operating conditions	32
	3.1.4.1 Device classification	
	3.1.4.2 Electromagnetic compatibility	32
	3.2 Device data of the 230 V devices	33
	3.2.1 Overview of the 230 V devices	33
	3.2.2 Voltage and frequencies for 230V devices	34
	3.2.2.1 Example of the calculation of the possible motor voltage 230V:	35
	3.2.3 Input and output currents / overload for 230 V devices	35
	3.2.3.1 Overload characteristic (OL) for 230 V devices	36
	3.2.3.2 Frequency-dependent maximum current (OL2) for 230V devices	38
	3.2.4 Power dissipation at rated operation of the 230V devices	42
	3.2.5 Fusing of the 230 V devices	43
	3.3 Device data of the 400 V devices	44
	3.3.1 Overview of the 400 V devices	44
	3.3.2 Voltage and frequencies for 400V devices	45
	3.3.3 Input and output currents / overload for 400 V devices	46
	3.3.2.1 Example of the calculation of the possible motor voltage:	46
	3.3.3.1 Overload characteristic (OL) for 400 V devices	47
	3.3.3.2 Frequency-dependent maximum current (OL2) for 400V devices	49
	3.3.4 Overview of rectifier data for 400 V devices	54
	3.3.5 Power dissipation at rated operation of the 400 V devices	54
	3.3.6 Fusing of the 400 V devices	55
	3.3.6.1 Fuse protection of the 400 V units ati AC-supply	55
	3.3.6.2 Fuse protection of the 400 V units ati DC-supply	56
	3.4 General electrical data	57
	3.4.1 Switching frequency and temperature	57
	3.4.2 Switching frequency and temperature of the 230 V devices	57
	3.4.3 Switching frequency and temperature of the 400 V devices	57
	3.4.4 DC link / braking transistor function	58
	3.4.4.1 DC link / braking transistor function of the 230 V devices	59
	3.4.4.2 DC link / braking transistor function of the 400 V devices	60
	3.4.5 Fan	60
	3.4.5.1 Switching behaviour of the fans	61
	3.4.5.2 Switching points of the fans	61
4	Installation	62
•	4.1 Dimensions and weights	
	4.1.1 Built-in version air cooler	
	4.1.2 Push-through version air cooler IP20-ready	
	4.1.3 Push-through version air-cooling IP54-ready	
	4.1.4 Push-through version convection cooler	



	4.2 Control cabinet installation	66
	4.2.1 Mounting instructions	66
	4.2.2 Mounting distances	67
	4.2.3 Installation of IP54-ready devices	68
	4.2.4 Control cabinet ventilation	69
	4.2.5 Airflow of the drive converter	69
5	Installation and connection	70
	5.1 Overview of the COMBIVERT F6	70
	5.2 Connection of the power unit	73
	5.2.1 Connection of the voltage supply	73
	5.2.1.1 Terminal block X1A	74
	5.2.2 Protective earth and functional earth	75
	5.2.2.1 Protective earth	75
	5.2.2.2 Functional earthing	75
	5.3 Mains connection	76
	5.3.1 Supply cable	76
	5.3.2 AC mains connection	76
	5.3.2.1 AC supply 3-phase	76
	5.3.2.2 Note on hard power systems	77
	5.3.3 DC mains connection	78
	5.3.3.1 Terminal block X1A DC connection	78
	5.3.3.2 Connection at DC voltage supply	79
	5.3.3.3 Wiring of the motor	80
	5.3.3.4 Terminal block X1A motor connection	81
	5.3.3.5 Selection of the motor line	82
	5.3.3.6 Motor cable length and conducted interferences at AC supply	82
	5.3.3.7 Motor cable length for parallel operation of motors	83
	5.3.3.8 Motor cable cross-section	83
	5.3.3.9 Interconnection of the motor.	83
	5.3.3.10 Connection of the temperature monitoring and brake control (X1C)	84
	5.3.4 Connection and use of a braking resistor	86
	5.3.4.1 Terminal block X1A connection braking resistor	87
	5.3.4.2 Use of intrinsically safe braking resistors	88
	5.3.4.3 Use of non-intrinsically safe braking resistors	88
	5.3.5 DC-bus connection	89
	5.4 Accessories	91
	5.4.1 Filters and chokes	91
	5.4.2 Mounting kit shield connection brackets	91
	5.4.3 Seal for IP54-ready devices	91
	5.4.4 Side-mounted braking resistors	92

## **TABLE OF CONTENTS**

6	Certification	93	
	6.1 CE-Marking	93	
	6.2 UL certification		
	6.3 Further informations and documentation	96	
7	Revision history	97	



## **List of Figures**

Figure 1:	Nameplate	28
Figure 2:	Configurable options	29
Figure 3:	Switch-off time t depending on the overload I/IN at OC level 216%	36
Figure 4:	Switch-off time t depending on the overload I/IN at OC level 180%	37
Figure 5:	Typical overload characteristics in the lower output frequencies (OL2) example device size 10	39
Figure 6:	Switch-off time t depending on the overload I/IN at OC level 216%	47
Figure 7:	Switch-off time t depending on the overload I/IN at OC level 180%	48
Figure 8:	Typical overload characteristics in the lower output frequencies (OL2) example device size 15	50
Figure 9:	Block diagram of the energy flow	58
Figure 10:	Switching behaviour of the fan example heat sink fan	
Figure 11:	Dimensions built-in version air cooler	
Figure 12:	Dimensions push-through version air cooler IP20-ready	63
Figure 13:	Dimensions push-through version air cooler IP54-ready	
Figure 14:	Dimensions push-through version convection cooler	65
Figure 15:	Mounting distances	67
Figure 16:	Installation of IP54-ready devices	68
Figure 17:	Control cabinet ventilation	69
Figure 18:	Airflow of the drive converter	69
Figure 19:	F6 housing 2 top view	70
Figure 20:	F6 housing 2 front view	71
Figure 21:	F6 housing 2 rear view with control board APPLICATION	72
Figure 22:	Input circuit	73
Figure 23:	Terminal block X1A	74
Figure 24:	Connection for protective earth	75
Figure 25:	Connection of the mains supply 3-phase	76
Figure 26:	Terminal block X1A DC connection	78
Figure 27:	Connection at DC voltage supply	79
Figure 28:	Wiring of the motor	80
Figure 29:	Terminal block X1A motor connection	81
Figure 30:	Symmetrical motor line	82
Figure 31:	Terminal block X1C for control board APPLICATION and COMPACT	84
Figure 32:	Terminal block X1C for control board PRO	84
Figure 33:	Connection of the brake control	85
Figure 34:	Connection of a KTY sensor	85
Figure 35:	Terminal block X1A connection braking resistor	87
Figure 36:	Wiring of an intrinsically safe braking resistor	88
Figure 37.	DC-bus connection	90

## **List of Tables**

Table 1:	Part code	27
Table 2:	Climatic environmental conditions	30
Table 3:	Mechanical environmental conditions	31
Table 4:	Chemical / mechanical active substances	31
Table 5:	Device classification	32
Table 6:	Electromagnetic compatibility	32
Table 7:	Overview of the 230 V device data	34
Table 8:	Input voltages and frequencies of the 230V devices	34
Table 9:	DC link voltage for 230V devices	
Table 10:	Output voltages and frequencies of the 230V devices	
Table 11:	Example of the calculation of the possible motor voltage 230V:	35
Table 12:	Input and output currents / overload of the 230 V device	35
Table 13:	Frequency-dependent maximum current for device size 10	
Table 14:	Frequency-dependent maximum current for device size 12	41
Table 15:	Frequency-dependent maximum current for device size 13	41
Table 16:	Frequency-dependent maximum current for device size 14	42
Table 17:	Power dissipation of the 230 V devices	42
Table 18:	Fusing of the 230 V / 240 V devices	43
Table 19:	Overview of the 400 V device data	45
Table 20:	Input voltages and frequencies of the 400V devices	45
Table 21:	DC link voltage for 400V devices	45
Table 22:	Output voltages and frequencies of the 400V devices	45
Table 24:	Input and output currents / overload of the 400 V device	46
Table 23:	Example of the calculation of the possible motor voltage:	46
Table 25:	Frequency-dependent maximum current for device size 12	51
Table 26:	Frequency-dependent maximum current for device size 13	
Table 27:	Frequency-dependent maximum current for device size 14	52
Table 28:	Frequency-dependent maximum current for device size 15	
Table 29:	Frequency-dependent maximum current for device size 16 (2kHz)	53
Table 30:	Frequency-dependent maximum current for device size 16 (4 kHz)	53
Table 31:	Overview of rectifier data for 400 V devices	54
Table 32:	Power dissipation of the 400 V devices	
Table 33:	Fusing of the AC 400 V / 480 V devices	55
Table 34:	DC Fusing of the 400 V / 480 V devices	56
Table 35:	Switching frequency and temperature of the 230 V devices	57
Table 36:	Switching frequency and temperature of the 400 V devices	57
Table 37:	DC link / braking transistor function of the 230 V devices	59
Table 38:	DC link / braking transistor function of the 400 V devices	60
Table 39:	Fan	
Table 40:	Switching points of the fans	61
Table 41:	Mounting instructions for built-in version / push-through version convection cooler	66
Table 42:	Mounting instructions for push-through version	66

## LIST OF TABLES



Table 43:	Filters and chokes for 230V devices	.91
Table 44:	Filters and chokes for 400 V devices	.91
Table 45:	Mounting kit shield connection brackets	.91
Table 46:	Seal for IP54-ready devices	. 91

## Glossary

0V	Earth-potential-free common point		Software-generated encoder output
1ph	1-phase mains	lation	
3ph	3-phase mains	End customer	The end customer is the user of the
AC	AC current or voltage		customer product
AFE	From 07/2019 AIC replaces the previous name AFE	Endat	Bidirectional encoder interface of the company Heidenhain
AFE filter	From 07/2019 AIC filter replaces the previous name AFE filter	EtherCAT	Real-time Ethernet bus system of the company Beckhoff
AIC	Active Infeed Converter	Ethernet	Real-time bus system - defines pro-
AIC filter	Filter for Active Infeed Converter		tocols, plugs, types of cables
Application	The application is the intended use	FE	Functional earth
	of the KEB product	FSoE	Functional Safety over Ethernet
ASCL	Asynchronous sensorless closed	FU	Drive controller
	loop	GND	Reference potential, ground
Auto motor	Automatically motor identification;	GTR7	Braking transistor
ident.	calibration of resistance and inductance	HF filter	KEB specific term for an EMC filter (for description see EMC filter).
AWG	American wire gauge	Hiperface	Bidirectional encoder interface of the
B2B	Business-to-business		company Sick-Stegmann
BiSS	Open source real-time interface for	НМІ	Human machine interface (touch
	sensors and actuators (DIN 5008)		screen)
CAN	Fieldbus system	HSP5	Fast, serial protocol
c.d.f.	Cyclic duration factor	HTL	Incremental signal with an output
CDM	Complete drive module including		voltage (up to 30V) -> TTL
	auxiliary equipment (control cabinet)	IEC	IEC xxxxx stands for an international
COMBIVERT	KEB drive controller		standard of the International Electro-
COMBIVIS	KEB start-up and parameterizing		technical Commission
	software	IPxx	Protection class (xx for class)
Customer	The customer has purchased a KEB product from KEB and integrates the	KEB product	The KEB product is subject of this manual
	KEB product into his product (cus-	KTY	Silicium temperature sensor (pola-
	tomer product) or resells the KEB		rized)
	product (dealer)	Manufacturer	The manufacturer is KEB, unless
DC	DC current or voltage		otherwise specified (e.g. as ma-
DI	Demineralized water, also referred to as deionized (DI) water	•	nufacturer of machines, engines, vehicles or adhesives)
DIN	German Institut for standardization	MCM	American unit for large wire cross
DS 402	CiA DS 402 - CAN device profile for		sections
	drives	Modulation	Means in drive technology that the
ELV	Extra-low voltage		power semiconductors are controlled
EMC filter	EMC filters are used to suppress	MTTF	Mean service life to failure
	conducted interferences in both di-	NHN	Standard elevation zero; based on
	rections between the drive controller		the specified height definition in Ger-
_	and the mains		many (DHHN2016). The internatio-
Emergency	Shutdown of a drive in emergency		nal data generally deviate from this by only a few cm to dm, so that the
stop	case (not de-energized)		specified value can be applied to the
Emergency	Switching off the voltage supply in		regionally applicable definition.
switching off	emergency case	ОС	Overcurrent
EMS EN	Energy Management System	OH	Overheat
LIN	European standard	OL	Overload
	ı		



**OSSD** Output signal swithching device; - an output signal that is checked in regular intervals on its shutdown. (safety technology) **PDS** Power drive system incl. motor and measuring probe PΕ Protective earth **PELV** Protective Extra Low Voltage PFD Term used in the safety technology (EN 61508-1...7) for the size of error probability PFH Term used in the safety technology (EN 61508-1...7) for the size of error probability per hour PLC Programmable logic controller Pt100 Temperature sensor with R0=100Ω Pt1000 Temperature sensor with R0=1000 $\Omega$ PTC PTC-resistor for temperature detection **PWM** Pulse width modulation RJ45 Modular connector with 8 lines Synchronous sensorless closed loop SCL **SELV** Safe extra-low voltage, unearthed SIL The safety integrity level is a measure for quantifying the risk reduction. Term used in the safety technology (EN 61508 -1...7) SS1 Safety function "Safe stop 1" in accordance with IEC 61800-5-2 SSI Synchronous serial interface for encoder STO Safety function "Safe Torque Off" in accordance with IEC 61800-5-2 TTL Logic with 5 V operating voltage **USB** Universal serial bus VARAN Real-time Ethernet bus system

## Standards for drive controllers

## Product standards that apply directly to the drive controller

EN61800-2	Adjustable speed electrical power drive systems - Part 2: General requirements - Rating specifications for low voltage adjustable frequency a.c. power drive systems (VDE 0160-102, IEC 61800-2)
EN 61800-3	Speed-adjustable electrical drives. Part 3: EMC requirements and specific test methods (VDE 0160-103, IEC 61800-3)
EN 61800-5-1	Adjustable speed electrical power drive systems - Part 5-1: Safety requirements - Electrical, thermal and energy (IEC 61800-5-1); German version EN 61800-5-1
EN 61800-5-2	Adjustable speed electrical power drive systems - Part 5-2: Safety Requirements - Functional (IEC 22G/264/CD)
UL61800-5-1	American version of the IEC 61800-5-1 with "National Deviations" for USA and Canada
EN 61800-9-2	Adjustable speed electrical power drive systems - Part 9-2: Ecodesign for power drive systems, motor starters, power electronics and their driven applications - Energy efficiency indicators for power drive systems and motor starters

## Basic standards to which drive controller standards refer directly

	•
EN 55011	Industrial, scientific and medical equipment - Radio frequency disturbance characteristics - Limits and methods of measurement (IEC 55011/CISPR 11); German version EN 55011
EN 60529	Degrees of protection provided by enclosures (IP Code) (IEC 60529)
EN 60664-1	Insulation coordination for equipment within low-voltage systems Part 1: Principles, requirements and tests (IEC 60664-1)
EN 60721-3-1	Classification of environmental conditions - Part 3-1: Classification of groups of environmental parameters and their severities - Section 1: Storage (IEC 60721-3-1); German version EN 60721-3-1
EN 60721-3-2	Classification of environmental conditions - Part 3: Classification of groups of environmental parameters and their severities - Section 2: Transportation and handling (IEC 104/670/CD)
EN 60721-3-3	Classification of environmental conditions - Part 3: Classification of groups of environmental parameters and their severities; section 3: Stationary use at weatherprotected locations; Amendment A2 (IEC 60721-3-3); German version EN 60721-3-3   1994)
EN 61000-2-1	Electromagnetic compatibility (EMC) - Part 2: Environment - Section 1: Description of the environment - Electromagnetic environment for low-frequency conducted disturbances and signalling in public power supply systems (IEC61000-2-1)
EN 61000-2-4	Electromagnetic compatibility (EMC) - Part 2-4: Environment; Compatibility levels in industrial plants for low-frequency conducted disturbances (IEC 61000-2-4); German version EN 61000-2-4
EN61000-4-2	Electromagnetic compatibility (EMC) - Part 4-2: Testing and measurement techniques - Electrostatic discharge immunity test (IEC 61000-4-2); German version EN 61000-4-2
EN 61000-4-3	Electromagnetic compatibility (EMC) - Part 4-3: Testing and measurement techniques - Radiated, radio-frequency, electromagnetic field immunity test (IEC 61000-4-3); German version EN 61000-4-3
EN 61000-4-4	Electromagnetic compatibility (EMC) - Part 4-4: Testing and measurement techniques - Electrical fast transient/burst immunity test (IEC 61000-4-4); German version EN 61000-4-4



EN 61000-4-5	Electromagnetic compatibility (EMC) - Part 4-5: Testing and measurement techniques - Surge immunity test (IEC 61000-4-5); German version EN 61000-4-5
EN 61000-4-6	Electromagnetic compatibility (EMC) - Part 4-6: Testing and measurement techniques - Immunity to conducted disturbances, induced by radio-frequency fields (IEC 61000-4-6); German version EN 61000-4-6
EN 61000-4-34	Electromagnetic compatibility (EMC) - Part 4-34: Testing and measurement techniques - Voltage dips, short interruptions and voltage variations immunity tests for equipment with mains current more than 16 A per phase (IEC 61000-4-34); German version EN 61000-4-34
EN 61508-17	Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 17 (VDE 0803-17, IEC 61508-17)
EN 62061	Safety of machinery - functional safety of electrical, electronic and program-mable electronic safety-related systems (VDE 0113-50, IEC 62061)
EN ISO 13849-1	Safety of machinery - safety-related parts of control systems - Part 1: General principles for design (ISO 13849-1); German version EN ISO 13849-1

## Standards that are used in the environment of the drive controller

DGUV regulation 3	Electrical installations and equipment
DNVGL-CG-0339	Environmental test specification for electrical, electronic and programmable equipment and systems
EN 1037	Safety of machinery - Prevention of unexpected start-up; German version EN 1037
EN 12502-15	Protection of metallic materials against corrosion - Part 15
EN 60204-1	Safety of machinery - electrical equipment of machines Part 1: General requirements (VDE 0113-1, IEC 44/709/CDV)
EN 60439-1	Low-voltage switchgear and controlgear assemblies - Part 1: Type-tested and partially type-tested assemblies (IEC 60439-1); German version EN 60439-1
EN 60947-7-1	Low-voltage switchgear and controlgear - Part 7-1: Ancillary equipment - Terminal blocks for copper conductors (IEC 60947-7-1:2009); German version EN 60947-7-1:2009
EN 60947-8	Low-voltage switchgear and controlgear - Part 8: Control units for built-in thermal protection (PTC) for rotating electrical machines (IEC 60947-8:2003 + A1:2006 + A2:2011)
EN 61373	Railway applications - Rolling stock equipment - Shock and vibration tests (IEC 61373); German version EN 61373
EN 61439-1	Low-voltage switchgear and controlgear assemblies - Part 1: General rules (IEC 121B/40/CDV); German version FprEN 61439-1
VGB S 455 P	Water treatment and use of materials in cooling systems
VDE 0100	Erection of low-voltage systems – Compliance with all parts (IEC 60364-x-x)
DIN EN 60939-1	Passive filter units for electromagnetic interference suppression - Part 1: Generic specification (IEC 60939-1:2010); German version EN 60939-1:2010

## 1 Basic Safety Instructions

The products are designed and constructed in accordance with state-of-the-art technology and the recognized safety rules and regulations. However, the use of such devices may cause functional hazards for life and limb of the user or third parties, or damages to the system and other material property.

The following safety instructions have been created by the manufacturer for the area of electric drive technology. They can be supplemented by local, country- or application-specific safety instructions. This list is not exhaustive. Violation of the safety instructions by the customer, user or other third party leads to the loss of all resulting claims against the manufacturer.

#### **NOTICE**

#### Hazards and risks through ignorance!



- Read the instructions for use!
- ▶ Observe the safety and warning instructions!
- ▶ If anything is unclear, please contact KEB Automation KG!

#### 1.1 Target group

This instruction manual is determined exclusively for electrical personnel. Electrical personnel for the purpose of this instruction manual must have the following qualifications:

- Knowledge and understanding of the safety instructions.
- Skills for installation and assembly.
- Start-up and operation of the product.
- Understanding of the function in the used machine.
- Detection of hazards and risks of the electrical drive technology.
- Knowledge of VDE 0100
- · Knowledge of national safety regulations.

#### 1.2 Transport, storage and proper use

The transport is carried out by qualified persons in accordance with the environmental conditions specified in this manual. Drive controller shall be protected against excessive strains.



#### Transport of drive controllers with an edge length >75 cm

The transport by forklift without suitable tools can cause a deflection of the heat sink. This leads to premature aging or destruction of internal components.

- ► Transport of drive controllers on suitable pallets.
- ▶ Do not stack drive controllers or burden them with other heavy objects.

## **NOTICE**

#### Damage to the coolant connections

#### Bending of the tubes!

▶ Never place the device on the coolant connections





#### Drive controllers contain electrostatic sensitive components.

- Avoid contact.
- Wear ESD-protective clothing.

#### Do not store drive controllers

- in the environment of aggressive and/or conductive liquids or gases.
- · with direct sunlight.
- · outside the specified environmental conditions.

#### 1.3 Installation

## **A** DANGER

#### Do not operate in an explosive environment!



The product is not intended for the use in potentially explosive environment.

### **A** CAUTION

#### Design-related edges and high weight!



#### Contusions and bruises!

- ► Never stand under suspended loads.
- Wear safety shoes.
- ► Secure drive controller accordingly when using lifting gear.

#### To prevent damages to the device:

- Make sure that no components are bent and/or isolation distances are changed.
- The device must not be put into operation in case of mechanical defects.
- Do not allow moisture or mist to penetrate the unit.
- Avoid dust permeating the device. Allow for sufficient heat dissipation if installed in a dust-proof housing.
- Note installation position and minimum distances to surrounding elements. Do not cover the ventilation openings.
- Mount the drive controller according to the specified degree of protection.
- Make sure that no small parts fall into the COMBIVERT during assembly and wiring (drilling chips, screws etc.). This also applies to mechanical components, which can lose small parts during operation.
- Check the reliable fit of the device connections in order to avoid contact resistances and sparking.
- Do not walk-on drive controller.
- · Follow all safety instructions!

#### 1.4 Electrical connection

#### **A** DANGER

#### Voltage at the terminals and in the device!

#### Danger to life due to electric shock!

- ▶ Never work on the open device or never touch exposed parts.
- ► For any work on the unit switch off the supply voltage, secure it against switching on and check absence of voltage by measuring at the input terminals.
- ► Wait until all drives has been stopped in order that no regenerative energy can be generated.
- ➤ Await capacitor discharge time (5 minutes). Check absence of voltage by measuring at the DC terminals.
- ▶ If personal protection is required, install suitable protective devices for drive converters.
- Never bridge upstream protective devices (even for testing purposes).
- Connect the protective earth conductor always to drive converter and motor.
- ▶ Install all required covers and protective devices for operation.
- ► The control cabinet shall be kept closed during operation.
- ▶ Residual current: This product may cause a dc current in the protective earth conductor. When a residual current protective device (RCD) or a residual current monitoring device (RCM) is used for the protection against direct or indirect contact, only a RCD or RCM type B is permitted on the power supply side of this product.
- ▶ Drive converters with a leakage current > 3.5 mA AC current (10 mA DC current) are intended for a stationary connection. Protective earth conductors must be designed in accordance with the local regulations for equipment with high leakage currents according to EN 61800-5-1, EN 60204-1 or VDE 0100.









If personnel protection is required during installation of the system, suitable protective devices must be used for drive controllers

www.keb.de/fileadmin/media/Techinfo/dr/tn/ti\_dr\_tn-rcd-00008\_en.pdf



Installations which include drive controller shall be equipped with additional control and protective devices in accordance with the relevant applicable safety requirements, e.g. act respecting technical equipment, accident prevention rules etc. They must always be complied with, also for drive controller bearing a CE marking.



For a trouble-free and safe operation, please pay attention to the following instructions:

- The electrical installation shall be carried out in accordance with the relevant requirements.
- Cable cross-sections and fuses must be dimensioned by the user according to the specified minimum/maximum values for the application.
- Connection of the drive converter is only permissible on symmetrical networks with a maximum line voltage (L1, L2, L3) with respect to earth (N/PE) of max. 300 V, USA UL: 480 / 277 V. An isolating transformer must be used for supply networks which exceed this value! In case of non-compliance the control is not longer considered to be a PELV circuit.
- With existing or newly wired circuits the person installing the units or machines must ensure that the PELV requirements are met.
- For drive converters that are not isolated from the supply circuit (in accordance with *EN 60721-3-2*) all control lines must be included in other protective measures (e.g. double insulation or shielded, earthed and insulated).
- When using components without isolated inputs/outputs, it is necessary that equipotential bonding exists between the components to be connected (e.g. by the equipotential line). Disregard can cause destruction of the components by equalizing currents.

#### 1.4.1 EMC-compatible installation

Observance of the limit values required by EMC law is the responsibility of the customer.



Notes on EMC-compatible installation can be found here. www.keb.de/fileadmin/media/Manuals/dr/emv/0000neb0000.pdf



#### 1.4.2 Voltage test

Testing with AC voltage (in accordance with *EN 60204-1* chapter 18.4) may not be executed, since there is danger for the power semiconductors in the drive controller.



Due to the radio interference suppression capacitors, the test generator will switch off immediately with a current fault.



According to *EN 60204-1* it is permissible to disconnect already tested components. Drive controllers of the KEB Automation KG are delivered ex works voltage tested to 100% according to product standard.

#### 1.4.3 Insulation measurement

An insulation measurement (in accordance with *EN 60204-1* chapter 18.3) with DC 500V is permissible, if all power unit connections (grid-connected potential) and all control connections are bridged with PE. The insulation resistance of the respective device can be found in the technical data.

#### 1.5 Start-up and operation

The start-up (i.e. for the specified application) is forbidden until it is determined that the installation complies with the machine directive; account is to be taken of *EN* 60204-1.

#### **WARNING**

#### Software protection and programming!

#### Hazards caused by unintentional behavior of the drive!



- ► Check especially during initial start-up or replacement of the drive controller if parameterization is compatible to application.
- ➤ Securing a unit solely with software-supported functions is not sufficient. It is imperative to install external protective measures (e.g. limit switch) that are independent of the drive controller.
- ► Secure motors against automatic restart.

#### **A** CAUTION

#### High temperatures at heat sink and coolant!

#### Burning of the skin!



- Cover hot surfaces safe-to-touch.
- If necessary, attach warning signs on the system.
- ▶ Before touching, check the surface and coolant lines.
- ▶ Before working let the unit cool down.
- During operation, all covers and doors shall be kept closed.
- · Use only approved accessories for this device.
- Never touch terminals, busbars or cable ends.

#### **A** CAUTION

#### High sound level during operation!



#### Hearing damage possible!

▶ Wear hearing protection!

#### NOTICE

Continuous operation (S1) with load > 60 % or from a rated motor power of 55 kW!

#### Premature ageing of the electrolytic capacitors!

▶ Mains choke with  $U_k = 4\%$  absolutely necessary.



If a drive controller with electrolytic capacitors in a DC link has not been in operation for more than one year, observe the following instructions.

www.keb.de/fileadmin/media/Techinfo/dr/tn/ti\_dr\_tn-format-capaci-tors-00009 en.pdf





#### Switching at the output

Switching between motor and drive controller is prohibited for single drives during operation as this may trigger the protection gear of the device. Function ,speed search' must be activated if switching can not be avoided. Speed search may only be triggered after closing the motor contactor (e.g. by switching the control release).

Connecting and disconnecting is permissible with multiple motor drives if at least 1 motor is running during the switch-over process. The drive controller must be dimensioned to the occurring starting currents.

The ,speed search' function must be activated if the motor is still running during a restart of the drive controller (mains on) (e.g. due to large rotating masses).

#### Switching at the input

For applications that require cyclic switching off and on of the drive controller, maintain an off-time of at least 5 min after the last switch on. If you require shorter cycle times please contact KEB Automation KG.

#### Short-circuit resistance

The drive converters are conditional short-circuit proof. After resetting the internal protection devices, the function as directed is guaranteed.

#### **Exceptions:**

- If an earth-leakage fault or short-circuit often occurs at the output, this can lead to a
  defect in the unit.
- If a short-circuit occurs during regenerative operation (2nd or 4th quadrant, regeneration into the DC link), this can lead to a defect in the unit.

#### 1.6 Maintenance

The following maintenance work has to be carried out when required, but at least once per year by authorized and trained personnel. Check unit for loose screws and plugs and tighten if necessary.

- ► Check system for loose screws and plugs and tighten if necessary.
- ► Clean drive controller from dirt and dust deposits. Pay attention especially to cooling fins and protective grid of the fans.
- ► Examine and clean extracted air filter and cooling air filter of the control cabinet.
- Check the function of the fans of the drive controller. The fan must be replaced in case of audible vibrations or squeak.
- ▶ In the case of liquid-cooled drive controllers a visual test of the cooling circuit for leaks and corrosion must be carried out. The cooling circuit must be completely empty if a unit shall be switched off for a longer period. The cooling circuit must be blown out additionally with compressed air at temperatures below 0°C.

### 1.7 Repair

In case of malfunction, unusual noises or smells inform a person in charge!

## **A** DANGER

#### Unauthorized exchange, repair and modifications!

#### **Unpredictable malfunctions!**



- ► The function of the drive controller is dependent on its parameterization. Never replace without knowledge of the application.
- ► Modification or repair is permitted only by KEB Automation KG authorized personnel.
- ► Only use original manufacturer parts.
- ▶ Infringement will annul the liability for resulting consequences.

In case of failure, please contact the machine manufacturer. Only the machine manufacturer knows the parameterisation of the used drive controller and can provide an appropriate replacement or induce the maintenance.



### 1.8 Disposal

Electronic devices of the KEB Automation KG are exclusively professional devices for further industrial processing (so-called B2B devices).

Manufacturers of B2B devices are obliged to take back and recycle devices manufactured after 14.08.2018. These devices may not be disposed at the collection centres of public sector disposal organisations.



If no deviating agreement has been made between the customer and KEB or no deviating mandatory legal regulation exists, KEB products marked in this way can be returned. Company and keyword to the return point can be taken from the list below. Shipping costs are paid by the customer. Thereupon the devices will be professionally recycled and disposed.

The entry numbers are listed country-specific in the following table. The corresponding KEB return addresses can be found on our website.

Withdrawal by	WEEE-Reg.	-No.	Keyword
Austria			
KEB Automation GmbH	ERA:	51976	Stichwort "Rücknahme WEEE"
France			
RÉCYLUM - Recycle point	ADEME:	FR021806	Mots clés "KEB DEEE"
Germany			
KEB Automation KG	EAR:	DE12653519	Stichwort "Rücknahme WEEE"
Italy			
COBAT	AEE: (IT)	19030000011216	Parola chiave "Ritiro RAEE"
Spain			
KEB Automation KG	RII-AEE	7427	Palabra clave "Retirada RAEE"
Česko			
KEB Automation KG	RETELA	09281/20 ECZ	Klíčové slovo: Zpětný odběr OEEZ
Slowakei			
KEB Automation KG	ASEKOL:	RV22EEZ0000421	Klíčové slovo: "Spätný odber OEEZ"

The packaging must be feed to paper and cardboard recycling.

## 2 Product Description

The device series COMBIVERT F6 concerns to drive controllers, which are optimized for operation at synchronous and asynchronous motors.

The COMBIVERT can be extended with a safety module for the use in safety-oriented applications. The COMBIVERT F6 series are drive converters with functional safety, optimized for operation at synchronous and asynchronous motors.

Various safety functions are available for different applications. It can be operated with a fieldbus module at different fieldbus systems. The control board has a system comprehensive operating concept.

The COMBIVERT complies with the requirements of the Machinery Directive. The possible functions are certified via a type test.

The COMBIVERT is a product of limited availability in accordance with *EN 61800-3*. This product may cause radio interference in residential areas. In this case the operator may need to take corresponding measures.

The Machinery Directive, EMC Directive, Low Voltage Directive and other directives and regulations must be observed

#### 2.1 Specified application

The COMBIVERT serves exclusively for the control and regulation of three-phase motors. It is intended for the installation into electrical systems or machines in the industrie.

Technical data and information for connection conditions shall be taken from the nameplate and from the instructions for use and must be strictly observed.

The used semiconductors and components of the KEB Automation KG are developed and dimensioned for the use in industrial products.

#### Restriction

If the product is used in machines, which work under exceptional conditions or if essential functions, life-supporting measures or an extraordinary safety step must be fulfilled, the necessary reliability and security must be ensured by the machine builder.

#### 2.1.1 Residual risks

Despite intended use, the drive converter can reach unexpected operating conditions in case of error, with wrong parameterization, by faulty connection or unprofessional interventions and repairs. This can be:

- · wrong direction of rotation
- motor speed too high
- motor is running into limitation
- motor can be under voltage even in standstill
- automatic start

#### 2.2 Unintended use

The operation of other electric consumers is prohibited and can lead to the destruction of the devices. The operation of our products outside the indicated limit values of the technical data leads to the loss of any liability claims.



#### 2.3 Product features

These instructions for use describe the power units of the following devices:

Device type: Drive controller
Series: COMBIVERT F6
Power range: 2.2...7.5 kW / 230 V

4...15 kW / 400 V

Housing: 2

The COMBIVERT F6 is characterized by the following features:

- Operation of three-phase asynchronous motors and three-phase synchronous motors, in operating modes open-loop or closed-loop with and without speed feedback
- Following fieldbus systems are supported:
   EtherCAT, VARAN, PROFINET, POWERLINK or CAN
- · System-overlapping operating concept
- · Wide operating temperature range
- · Low switching losses by IGBT power unit
- Low noise development due to high switching frequencies
- · Different heat sink concepts
- Temperature-controlled fan, easily replaceable
- · Torque limits and s-curves are adjustable to protect gearboxes
- General protection functions of the COMBIVERT series against overcurrent, overvoltage, ground fault and overtemperature
- Analog inputs and outputs, digital inputs and outputs, relay output (potential-free), brake control and -supply, motor protection by l²t, KTY- or PTC input, two encoder interfaces, diagnostic interface, fieldbus interface (depending on the control board)
- Integrated safety function according to EN 61800-5-2

## 2.4 Part code

xxF6xxx-xxx	
Heat sink version	1: Air-cooler, mounted version 2: Liquid cooler (water), mounted version 3: Air-cooler, through-mount version IP54-ready 4: Liquid cooler (water), through-mount version IP54-ready 5: Air-cooler, through-mount version IP20 6: Liquid cooler (water), trough-mount version IP54-ready, sub-mounted braking resistors 7: Liquid cooler (oil), through-mount version IP54-ready 9: Liquid cooler (water), mounted version, sub-mounted braking resistors A: Liquid cooler (water), mounted version, High Performance, sub-mounted braking resistors B: Liquid cooler (water), through-mount version, IP54-ready, High Performance, sub-mounted braking resistors C: Air-cooler, mounted version, Version 2 D: Air-cooler, mounted version, High-Performance E: Liquid cooler (water), mounted version, High-Performance F: Air-cooler, through-mount version IP54-ready, High-Performance G: Liquid cooler (water), trough-mount version IP54-ready, High-Performance H: Air-cooler,, Convektion, trough-mount version IP54-ready
Control board variant	APPLIKATION  1: Multi Encoder Interface, CAN® 2), Real-Time Ethernet-busmodule 3)  B Multi Encoder Interface, CAN® 2), Real-Time Ethernet-busmodule 3), Alternative connector  KOMPAKT  1: Multi Encoder Interface, CAN® 2), STO, EtherCAT® 1)  2: Multi Encoder Interface, CAN® 2), STO, VARAN  PRO  0: No Encoder, CAN® 2), Real-Time Ethernetinterface 3)  1: Multi Encoder Interface, CAN® 2), Real-Time Ethernet interface 3)  3: Multi Encoder Interface, CAN® 2), Real-Time Ethernet interface 3), RS485-potential free  4: No Encoder, CAN® 2), Real-Time Ethernet interface 3), Safe relay  5: Multi Encoder Interface, CAN® 2), Real-Time Ethernet interface 3), safety relay  B: Multi Encoder Interface, CAN® 2), Real-Time Ethernet interface 3), alternative connector  Continued on the next page



xxF6xx	<b>x</b> - <b>x x x</b>	x				
			0: 2kHz/125%/150%	8: 2kHz/180%/216%		
			1: 4kHz/125%/150% 9: 4kHz/180%/216%			
	Swite		2: 8kHz/125%/150% A: 8kHz/180%/216%			
		Switching frequency,	3: 16 kHz/125%/150% B: 8 kHz / HSD			
		•	4: 2kHz/150%/180% C: 6kHz/HSD			
		Software current limit,		Non standard switching		
		Turn-off current	5: 4kHz/150%/180%	D: frequency / Overload		
				characteristic		
			6: 8kHz/150%/180%	E: Special Device		
			7: 16 kHz/150%/180%			
			1: 3ph 230 V AC/DC with bra	king transistor		
		3: 3ph 230 V AC/DC without braking transistor     3: 3ph 400 V AC/DC with braking transistor				
		4: 3ph 400 V AC/DC with braking transistor				
		Voltage/ Connection type	A: 3ph 400 V AC/DC incl. GTR7 / max. rectifier / max.			
			A: pre-charging			
			3ph 400 V AC/DC without GTR7 / max. rectifier / max.			
			B: pre-charging			
			C: 3ph 400 V AC/DC, GTR7-variant 2			
			3ph 400 V AC/DC GTR7-variant 2 / max. rectifier /			
			D: max. pre-charging			
		Harris n	29			
		Housing				
			1: Safety module type 1/ST	O at control type K		
		Equipment	3: Safety module type 3			
		Equipment	4: Safety module type 4			
			5: Safety module type 5			
			A: APPLICATION			
		Control type	K: COMPACT			
		71	P: PRO			
		Series	COMBIVERT F6			
		Inverter size	1033			
Table 1: P	art code					



EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany




CANopen® is registered trademark of CAN in AUTOMATION - International Users and Manufacturers Group e.V.

<sup>3)</sup> The Real-Time Ethernetbusmodul / Real-Time Ethernet interface contains various fieldbus control types which can be adjusted by software (parameter fb68)



The part code may not be used as order code, but only for identification!

#### 2.5 Nameplate

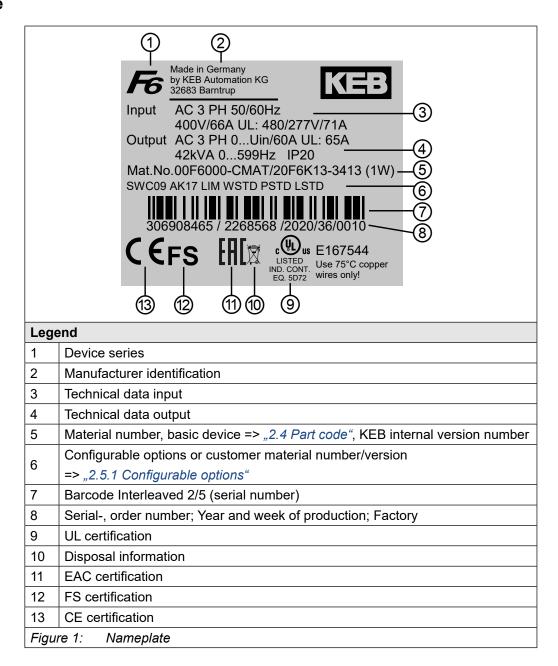



## 2.5.1 Configurable options

Features	Feature values	Description		
Software	SWxxx 1)	Software status of the drive converter		
Accessories	Axxx 1)	Selected accessories		
Accessories	NAK	No accessories		
Output frequency	LIM	Limitation to 599 Hz		
activation ULO		> 599 Hz activated		
Morronty	WSTD	Warranty - Standard		
Warranty	<b>W</b> xxx 1)	Warranty extension		
Parameterization	PSTD	Parameterization - Standard		
Parametenzation	Pxxx 1)	Parameterization - Customer-specific		
Namanlata laga	LSTD	Logo - Standard		
Nameplate logo	Lxxx 1)	Logo - Customer-specific		
Figure 2: Configurable options				

<sup>1) &</sup>quot;x" indicates a variable value

## 3 Technical data

Unless otherwise indicated, all electrical data in the following chapter refer to a 3-phase AC mains.

## 3.1 Operating conditions

#### 3.1.1 Climatic environmental conditions

Storage		Standard	Class	Descriptions
Ambient temperature	•	EN 60721-3-1	1K4	-2555°C
Relative humidity		EN 60721-3-1	1K3	595% (without condensation)
Storage height		_	-	Max. 3000 m above sea level
Transport		Standard	Class	Descriptions
Ambient temperature	)	EN 60721-3-2	2K3	-2570°C
Relative humidity		EN 60721-3-2	2K3	95% at 40°C (without condensation)
Operation		Standard	Class	Descriptions
Ambient temperature	)	EN 60721-3-3	3K3	540°C (extended to -1045°C)
Coolant inlet temperature	Air	-	_	540°C (extended to -1045°C)
Relative humidity EN 60721-3-3 3K3 5		585% (without condensation)		
Version and degree of protection		EN 60529	IP20	Protection against foreign material > ø12.5 mm  No protection against water
				Non-conductive pollution, occasional condensation when PDS is out of service.
				Drive controller generally, except power connections and fan unit (IPxxA)
				Max. 2000 m above sea level
Site altitude		_		With site altitudes over 1000 m a derating of 1% per 100 m must be taken into consideration.
		_	_	<ul> <li>With site altitudes over 2000 m, the con- trol board to the mains has only basic isolation. Additional measures must be taken when wiring the control.</li> </ul>



## 3.1.2 Mechanical environmental conditions

Storage	Standard	Class	Descriptions		
Vibration limits	EN 60721-3-1	1M2	Vibration amplitude 1.5 mm (29 Hz)		
Vibration limits	EN 60721-3-1	I IVIZ	Acceleration amplitude 5 m/s² (9200 Hz)		
Shock limit values	EN 60721-3-1	1M2	40 m/s²; 22 ms		
Transport	Standard	Class	Descriptions		
			Vibration amplitude 3.5 mm (29 Hz)		
Vibration limits	EN 60721-3-2	2M1	Acceleration amplitude 10 m/s² (9200 Hz)		
			(Acceleration amplitude 15 m/s² (200500 Hz)) 1)		
Shock limit values	EN 60721-3-2	2M1	100 m/s <sup>2</sup> ; 11 ms		
Operation	Standard	Class	Descriptions		
	EN 60721-3-3	3M4	Vibration amplitude 3.0 mm (29 Hz)		
Vibratian limita	EN 60721-3-3	31014	Acceleration amplitude 10 m/s² (9200 Hz)		
Vibration limits	ration limits		Vibration amplitude 0.075 mm (1057 Hz)		
	EN 61800-5-1	_	Acceleration amplitude 10 m/s² (57150 Hz)		
Shock limit values	EN 60721-3-3	3M4	100 m/s²; 11 ms		
Table 3: Mechanical env	Table 3: Mechanical environmental conditions				

<sup>1)</sup> Not tested

#### 3.1.3 Chemical / mechanical active substances

Storage		Standard	Class	Descriptions
Contamination	Gases	EN 60721-3-1	1C2	_
Contamination	Solids	EN 00721-3-1	1S2	_
Transport		Standard	Class	Descriptions
Contamination	Gases	EN 60721-3-2	2C2	_
Contamination	Solids		2S2	_
Operation		Standard	Class	Descriptions
Contamination	Gases	EN 60721-3-3	3C2	_
Contamination	Solids	EN 00721-3-3	3S2	_
Table 4: Che	emical / mech	anical active subs	stances	

## 3.1.4 Electrical operating conditions

#### 3.1.4.1 Device classification

Requirement	Standard	Class	Descriptions			
Overvoltage category	EN 61800-5-1	III	_			
Pollution degree	EN 60664-1	2	Non-conductive pollution, occasional condensation when PDS is out of service			
Table 5: Device classification						

## 3.1.4.2 Electromagnetic compatibility

For devices without an internal filter, an external filter is required to comply with the following limits.

EMC emitted interference	Standard	Class	Descriptions
Conducted interference emission	EN 61800-3	C2 / C3	The specified value is only maintained in connection with a filter. Information on interference suppression (rated switching frequency, max. motor cable length) can be found in the corresponding filter instructions.
Radiated emitted interference	EN 61800-3	C2	_
Immunity	Standard	Level	Descriptions
Static discharges	EN 61000-4-2	8kV	AD (air discharge)
Static discharges	EN 61000-4-2	4 kV	CD (contact discharge)
Burst - Ports for process measurement control lines and signal interfaces	EN 61000-4-4	2kV	_
Burst - AC - Power ports	EN 61000-4-4	4 kV	-
Surge - Power ports	EN 61000-4-5	1kV	Phase-phase
Surge - Fower ports	EN 01000-4-3	2kV	Phase-ground
Conducted immunity, induced by high-frequency fields	EN 61000-4-6	10 V	0.1580 MHz
		10 V/m	80 MHz1 GHz
Electromagnetic fields	EN 61000-4-3	3 V/m	1.42 GHz
		1 V/m	22.7 GHz
Voltage fluctuations/	EN 61000-2-1		-15%+10%
voltage dips	EN 61000-4-34	_	Class 3
Frequency changes	EN 61000-2-4	_	≤ 2 %
Voltage deviations	EN 61000-2-4	_	±10%
Voltage unbalances	EN 61000-2-4		≤ 3 %
Table 6: Electromagnetic c	ompatibility		



## 3.2 Device data of the 230 V devices

#### 3.2.1 Overview of the 230 V devices

The technical data are for 2/4-pole standard motors. With other pole numbers the drive controller must be dimensioned onto the rated motor current. Contact KEB for special or medium frequency motors.

Device size			10	12	13	14
Housing		2	2	<u>'</u>		
Rated apparent output power		Sout / kVA	4,4	7	9,6	13
Max. rated motor power	1)	Pmot / kW	2,2	4	5,5	7,5
Rated input voltage		Un / V		230 (U	L: 240)	
Input voltage range		Uin / V		170.	264	
Mains phases				3	3	
Mains frequency		f <sub>N</sub> / Hz		50 / 6	60 ±2	
Rated input current		I. / A	45.0	00	24	40
@ U <sub>N</sub> = 230V		Iin / A	15,3	23	31	43
Rated input current		I / A	45.0	00	24	42
@ U <sub>N</sub> = 240V		Iin_UL / A	15,3	23	31	43
Insulation resistance @ Udc = 500V		Riso / MΩ	> 20			
Output voltage		Uout / V		0	<b>U</b> in	
Output frequency	2)	fout / Hz		0	599	
Output phases				3	3	
Rated output current		In / A	11	17.5	24	33
@ Un = 230 V		INTA	11	17,5	24	33
Rated output current		I	11	17.5	24	33
@ UN = 240 V		IN_UL / A	11	17,5		) 
Rated output overload (60s)	3) 4)	160s / %		15	50	
Software current limit	3)	Ilim / %	18	30	1:	50
Overcurrent	3)	loc / %	2′	16	18	30
Rated switching frequency		fsn / kHz	8	8	4	4
Max. switching frequency	5)	fs_max / kHz		1	6	
Power dissipation at rated operation	1)	P <sub>D</sub> / W	123	168	186	267
Overload current over time	3)	IOL / %	=> "3.2.3.1 Overload characteristic (OL) for 230 devices"			L) for 230 V
Maximum current 0Hz/50Hz at fs=2kHz		lout_max/ %	216/216	216/216	171/180	170/180
Maximum current 0Hz/50Hz at fs=4kHz		lout_max/ %	200/216	206/216	150/180	155/180
Maximum current 0Hz/50Hz at fs=8kHz		lout_max/ %	173/216	171/216	125/180	120/180
Maximum current 0Hz/50Hz at fs = 16 kHz		lout_max/ %	127/216	126/216	92/180	94/180
				C	ontinued on t	he next page

#### **DEVICE DATA OF THE 230 V DEVICES**

Device size		10	12	13	14
Housing	2				
Max. braking current	I <sub>B_max</sub> / A		21,5		33,6
Min. braking resistor value	RB_min / Ω		19		12
Braking transistor <sup>6)</sup>		Max. cycle time: 120 s; Max c.d.f.: 50 %			
Protective function for braking transistor		No	protection fu	ınction availa	ble
Max. motor cable length shielded 7 // m			10	00	
Table 7: Overview of the 230 V dev	ice data				

<sup>&</sup>lt;sup>1)</sup> Rated operation corresponds to  $U_N = 230V$ , rated switching frequency, output frequency =  $50 \, \text{Hz}$  (4-pole standard asynchronous motor).

#### 3.2.2 Voltage and frequencies for 230V devices

Input voltages and frequencies				
Rated input voltage	Un / V	230		
Rated mains voltage (USA)	UN_UL / V	240		
Input voltage range	UIN / V	170264		
Input phases		3		
Mains frequency	f∧ / Hz	50/60		
Mains frequency tolerance ±fN / Hz 2				
Table 8: Input voltages and frequencies of the 230V devices				

DC link voltage				
DC link rated voltage @ $U_N = 400V$ $U_{N\_dc} / V$ 325				
DC link rated voltage @ Un_uL = 480V	UN_UL_dc / V	339		
DC link voltage working voltage range	UIN_dc / V	240373		
Table 9: DC link voltage for 230V devices				

The output frequency is to be limited in such a way that it does not exceed 1/10 of the switching frequency. Notice! Devices with a maximum output frequency higher than 599Hz are subject to export restrictions.h

The values refer in % to the rated output current In.

<sup>4)</sup> Observe limitations "3.2.3.1 Overload characteristic (OL) for 230 V devices".

<sup>&</sup>lt;sup>5)</sup> A detailed description of the derating "3.4.2 Switching frequency and temperature of the 230 V devices".

<sup>&</sup>lt;sup>6)</sup> The cyclic duration factor is additionally limited by the used braking resistor.

<sup>7)</sup> The maximum cable length depends on various factors. Further information can be found in the corresponding filter instructions.



Output voltages and frequencies				
Output voltage at AC supply	1) Uout / V	0 <i>U</i> in		
Output frequency	2) fout / Hz	0599		
Output phase		3		
Table 10: Output voltages and frequencies of the 230V devices				

The voltage to the motor is dependent on the actual input voltage and the control method ("Example of the calculation of the possible motor voltage 230V:").

#### 3.2.2.1 Example of the calculation of the possible motor voltage 230V:

The motor voltage for dimensioning of the drive is depending on the used components. The motor voltage reduces according to the following table:

Component	Reduction / %	Example
Mains choke Uk	4	Example:
Drive converter open-loop	4	open-loop drive converter with mains- and motor choke at
Drive converter closed-loop	8	non-rigid supply system:
Motor choke Uk	1	230 V mains voltage - 11 % = 204,7 V motor voltage
Non-rigid supply system	2	
Table 11: Example of the ca	alculation of the po	ssible motor voltage 230V:

#### 3.2.3 Input and output currents / overload for 230 V devices

Device size			10	12	13	14	
Rated input current @ UN = 230V	1)	lin / A	15,3	23	31	43	
Rated input current @ Un_uL = 240V	1)	Iin_UL / A	15,3	23	31	43	
Rated output current @ UN = 230V		In / A	11	17,5	24	33	
Rated output current @ UN_UL = 240V		IN_UL / A	11	17,5	24	33	
Rated output overload (60s)	2)	160s / %	150				
Overload current	2)	IOL / %	"3.2.3.1 Overload characteristic (OL) for 230 V devices"				
Software current limit	2) 3)	Ilim / %	180 150		50		
Overcurrent	2)	loc / %	216 180		30		
Table 12: Input and output currents / overload of the 230 V device							

The values resulting from rated operation with B6 rectifier circuit and mains choke 4% Uk.

The output frequency is to be limited in such a way that it does not exceed 1/10 of the switching frequency. Devices with a maximum output frequency higher than 599Hz are restricted for exportt.

<sup>&</sup>lt;sup>2)</sup> The values refer in % to the rated output current In.

<sup>3)</sup> Limitation of the current setpoint in closed-loop operation. This setpint limit is not active in v/f operation.

#### 3.2.3.1 Overload characteristic (OL) for 230 V devices


All drive controllers can be operated at rated switching frequency with an utilization of 150 % for 60 s.

The OL overload function is a root mean square (RMS) function. The greater the difference between the overload and underload phases, the greater the deviation of the RMS from the arithmetic mean value.


For extreme overloads (=> "Figure 3: Switch-off time t depending on the overload I/IN at OC level 216%" or "Figure 4: Switch-off time t depending on the overload I/IN at OC level 180%") the load is weighted more heavily. This means the load is provided with a factor for the calculation of the RMS value, by way that the overload protection function triggers, even if the RMS value does not reach 100%.

#### **Restrictions:**

- The thermal design of the heat sink is based on the rated operation. The following values are taken into account: Rated output current, ambient temperature, rated switching frequency, rated voltage.
- At high ambient temperatures and/or high heat sink temperatures (for example, by preceding utilisation nearby 100%) the drive controller can change to overtemperature error before triggering the protective function OL.
- At low output frequencies or switching frequencies higher than the rated switching frequency, the frequency-dependent maximum current can be exceeded before triggering the overload error OL and error OL2 can be triggered (=> "3.2.3.2 Frequency-dependent maximum current (OL2) for 230V devices").

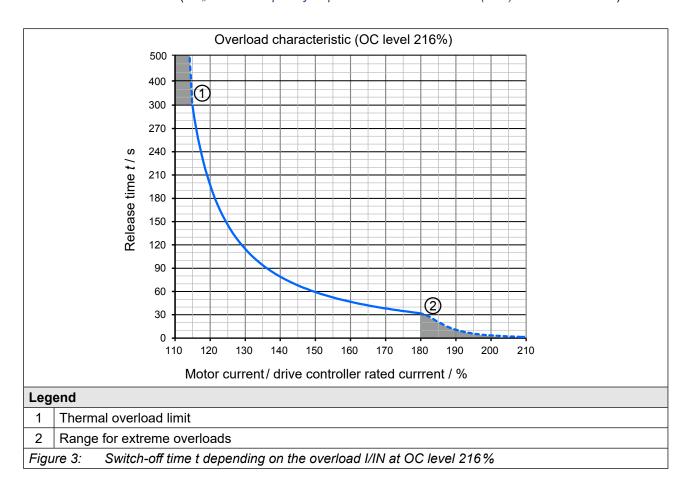



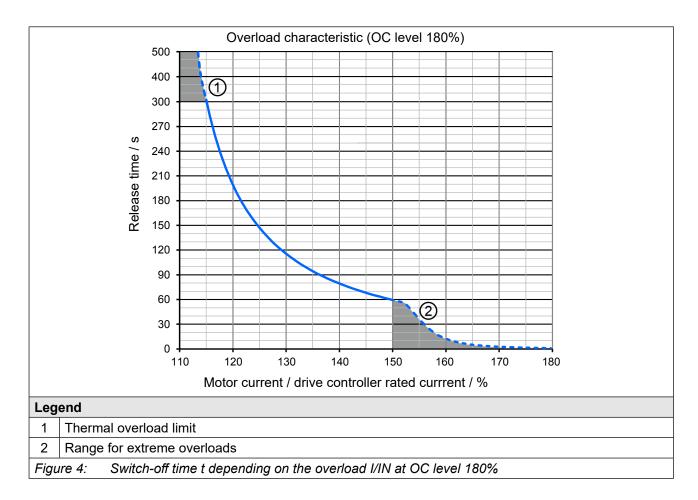

- On exceeding a load of 105 % the overload integrator starts.
- · When falling below the integrator counts backwards.
- If the integrator reaches the overload characteristic "Error overload (OL)" is triggered.

After a cooling down period, the integrator can be reset now. The drive controller must remain switched on during the cooling down phase.

# Operation in the range of the thermal overload limit

Due to the high steepness of the overload characteristic, the duration of a permissible overload in this range ① cannot be determined exactly. Therefore, the design of the drive controller should be assumed to have a maximum overload time of 300 s.

#### **DEVICE DATA OF THE 230 V DEVICES**

#### 3.2.3.2 Frequency-dependent maximum current (OL2) for 230V devices

The characteristics of the maximum currents for a switching frequency which are depending on the output frequency are different for each drive controller, but the following rules are generally applicable:

- Applies for the rated switching frequency: at 0 Hz the drive controller can provide at least the rated output current and from 6 Hz the overcurrent *loc*.
- Lower maximum currents apply for switching frequencies > rated switching frequency.

If error (OL2) shall be triggered on exceeding the maximum currents or if the switching frequency is automatically reduced "derating" can be adjusted in the drive controller parameters.



The following characteristic curve indicates the permissible maximum current for the output frequency values 0 Hz, 3.1 Hz, 6.2 Hz, 12.5 Hz, 25 Hz and 50 Hz. Device size 10 is represented exemplary.

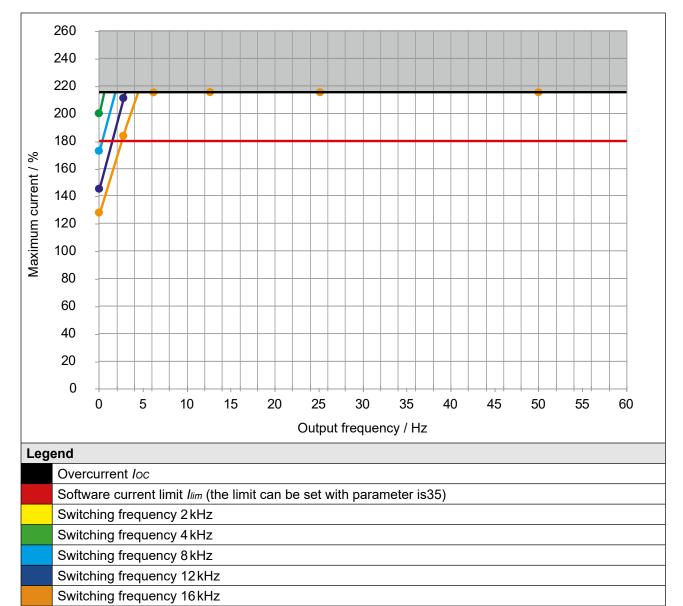




Figure 5:

Not available for modulation. Error OC is triggered at 216% overload.

The frequency-dependent maximum current *lout\_max* refers in % to the rated output current *ln*.

Typical overload characteristics in the lower output frequencies (OL2) example device size 10

The current remains constant from the last specified output frequency value.



The values for the respective device size are listed in the following tables.

# Frequency-dependent maximum current

Device size				10				
Rated switching frequency	8 kHz							
Output frequency	fout / Hz	0	3,1	6,2	12,5	25	50	
	2 kHz	216	216	216	216	216	216	
Fraguency dependent maximum augrent @ fe / / .	, 4kHz	200	216	216	216	216	216	
Frequency-dependent maximum current @ fs lout_max/ 9	8kHz	173	216	216	216	216	216	
Basic Time Period = 62.5 μs (Parameter is22=0)	16 kHz	127	191	216	216	216	216	
	1.75 kHz	216	216	216	216	216	216	
Francisco de nondert moviment & fall de la	3.5 kHz	205	216	216	216	216	216	
Frequency-dependent maximum current @ fs lout_max/ 9	7 kHz	180	216	216	216	216	216	
Basic Time Period = 71.4 µs (Parameter is22=1)	14 kHz	136	205	216	216	216	216	
	1.5 kHz	216	216	216	216	216	216	
Fraguency dependent maximum augrent @ fe / / .	, 3kHz	209	216	216	216	216	216	
Frequency-dependent maximum current @ fs   lout_max  9 Basic Time Period = 83.3 µs (Parameter is 22=2)	6kHz	186	216	216	216	216	216	
Basic Time Period – 65.5 µs (Parameter 1522–2)	12 kHz	146	216	216	216	216	216	
	1.25 kHz	216	216	216	216	216	216	
Francisco de la contrata de la contr	2.5 kHz	214	216	216	216	216	216	
Frequency-dependent maximum current @ fs lout_max/ 9	5kHz	193	216	216	216	216	216	
Basic Time Period = 100 µs (Parameter is22=3)	10 kHz	159	216	216	216	216	216	
Table 13: Frequency-dependent maximum current for co								



Device size	12									
Rated switching frequency					4 kHz					
Output frequency		fout / Hz	0	3	6	12,5	25	50		
		2kHz	216	216	216	216	216	216		
Francisco de condest massimos assument @ fa /	. / 0/	4 kHz	206	216	216	216	216	216		
Frequency-dependent maximum current @ fs //	out_max/ %	8 kHz	171	206	216	216	216	216		
Basic Time Period = 62.5 µs (Parameter is22=0)		16kHz	126	149	194	216	216	216		
		1.75 kHz	216	216	216	216	216	216		
Francisco de la condesta considerata como esta esta esta esta esta esta esta esta		3.5 kHz	213	216	216	216	216	216		
Frequency-dependent maximum current @ fs /	out_max/ %o	7 kHz	180	214	216	216	216	216		
Basic Time Period = 71.4 µs (Parameter is22=1)		14 kHz	134	160	206	216	216	216		
		1.5 kHz	216	216	216	216	216	216		
Francisco de condest massimos assument @ fa /	. / 0/	3 kHz	216	216	216	216	216	216		
Frequency-dependent maximum current @ fs /	out_max/ %	6 kHz	189	216	216	216	216	216		
Basic Time Period = 83.3 µs (Parameter is22=2)		12kHz	143	171	216	216	216	216		
		1.25 kHz	216	216	216	216	216	216		
Francisco de mandant maggins um aussist & fall	/ 0/	2.5 kHz	216	216	216	216	216	216		
Frequency-dependent maximum current @ fs //	out_max/ %	5 kHz	197	216	216	216	216	216		
Basic Time Period = 100 μs (Parameter is22=3)		10 kHz	157	189	216	216	216	216		
Table 14: Frequency-dependent maximum current for device size 12										

Device size			1	3					
Rated switching frequency				4kHz					
Output frequency		fout / Hz	0	3,1	6,2	12,5	25	50	
		2kHz	171	180	180	180	180	180	
Eroquency dependent maximum augrent @ fe		4 kHz	150	175	180	180	180	180	
Frequency-dependent maximum current @ fs	lout_max/ %	8 kHz	125	150	180	180	180	180	
Basic Time Period = 62.5 µs (Parameter is22=0)		16 kHz	92	108	142	180	180	180	
		1.75 kHz	171	180	180	180	180	180	
Francisco de nondont massimos massimos de fe	lout_max/ %	3.5 kHz	155	180	180	180	180	180	
Frequency-dependent maximum current @ fs		7kHz	131	156	180	180	180	180	
Basic Time Period = 71.4 µs (Parameter is22=1)		14 kHz	98	117	150	180	180	180	
		1.5 kHz	171	180	180	180	180	180	
Fraguency dependent maximum augrent @ fe	1 , 10/	3kHz	160	180	180	180	180	180	
Frequency-dependent maximum current @ fs Basic Time Period = 83.3 µs (Parameter is22=2)	Iout_max/ 70	6kHz	138	163	180	180	180	180	
Basic Time Period – 65.5 µs (Parameter 1822–2)		12kHz	104	125	158	180	180	180	
		1.25 kHz	171	180	180	180	180	180	
Francisco de nondont massimos massimos de fe	1 . /0/	2.5 kHz	166	180	180	180	180	180	
Frequency-dependent maximum current @ fs	lout_max/ %	5kHz	144	169	180	180	180	180	
Basic Time Period = 100 μs (Parameter is22=3)		10 kHz	115	138	171	180	180	180	
Table 15: Frequency-dependent maximum cur	rent for devi	ice size 13							

# **DEVICE DATA OF THE 230 V DEVICES**

Device size	14									
Rated switching frequency					4kHz					
Output frequency		fout / Hz	0	3,1	6,2	12,5	25	50		
		2 kHz	170	180	180	180	180	180		
Fraguency dependent maximum augrent @ fe	laut may/ 0/a	4 kHz	155	179	180	180	180	180		
Frequency-dependent maximum current @ fs	lout_max/ %	8 kHz	130	155	180	180	180	180		
Basic Time Period = 62.5 µs (Parameter is22=0)		16 kHz	94	115	148	180	180	180		
		1.75 kHz	170	180	180	180	180	180		
Francisco de mandant massimos massimos de fe	1	3.5kHz	158	180	180	180	180	180		
Frequency-dependent maximum current @ fs	lout_max/ %	7 kHz	136	161	180	180	180	180		
Basic Time Period = 71.4 µs (Parameter is22=1)		14 kHz	103	124	158	180	180	180		
		1.5 kHz	170	180	180	180	180	180		
Fraguency dependent maximum augrent @ fe	1 , 10/	3 kHz	162	180	180	180	180	180		
Frequency-dependent maximum current @ fs	lout_max/ %	6 kHz	142	167	180	180	180	180		
Basic Time Period = 83.3 µs (Parameter is22=2)		12kHz	112	133	167	180	180	180		
		1.25 kHz	170	180	180	180	180	180		
Francisco de condest massimo en consest @ f	1	2.5kHz	166	180	180	180	180	180		
Frequency-dependent maximum current @ fs	Iout_max/ %	5 kHz	149	173	180	180	180	180		
Basic Time Period = 100 μs (Parameter is22=3)		10 kHz	121	144	179	180	180	180		
Table 16: Frequency-dependent maximum cur										

# 3.2.4 Power dissipation at rated operation of the 230V devices

Device size		10	12	13	14
Rated switching frequency	fsn / kHz	8	8	4	4
Power dissipation at rated operation	1) <i>P</i> <sub>D</sub> / W	123	168	186	267
Table 17: Power dissipation of the 230	V devices				

<sup>&</sup>lt;sup>1)</sup> Rated operation corresponds to  $U_N = 230 \, \text{V}$ ;  $f_{SN}$ ;  $f_N = 50 \, \text{Hz}$  (typically value)



# 3.2.5 Fusing of the 230 V devices

			Max. size of th	e fuse / A	
Device size	<i>U</i> <sub>N</sub> = 230 V gG (IEC)	<i>U</i> <sub>N</sub> = 240 V class "J"	<i>U</i> <sub>N</sub> = 240 V		
	SCCR 30 kA	SCCR 5kA	SCCR 30 kA	Туре	
				SIBA 501xy06.25	
10	20	25	25	COOPER BUSSMANN 170M1xy1	
				LITTELFUSE L25S025	
	32	40		SIBA 501xy06.40	
12			40	COOPER BUSSMANN 170M1xy3	
				LITTELFUSE L25S040	
				SIBA 501xy06.50	
13	35	50	50	COOPER BUSSMANN 170M1xy4	
				LITTELFUSE L25S050	
			63	SIBA 501xy06.63	
14	50	70		COOPER BUSSMANN 170M1xy5	
			70	LITTELFUSE L25S070	
Table 18:	Fusing of the	230 V / 240 V d	evices		

<sup>1) &</sup>quot;x" stands for various indicators. "y" stands for different connection variants.



# **Short-circuit capacity**

After requests from *EN 60439-1* and *EN 61800-5-1* the following is valid for the connection to a network: The devices are suitable for use in a circuit capable of delivering not more than 30 kA eff. unaffected symmetrical short-circuit current.

# 3.3 Device data of the 400 V devices

# 3.3.1 Overview of the 400 V devices

The technical data are for 2/4-pole standard motors. With other pole numbers the drive controller must be dimensioned onto the rated motor current. Contact KEB for special or medium frequency motors.

Device size			12	13	14	15	1	6
Housing						2		
Rated apparent output power		Sout / kVA	6,6	8,3	11,4	16,6	22,9	22,9
Max. rated motor power	1)	Pmot / kW	4	5,5	7,5	11	15	15
Rated input voltage		Un / V			400 (UL:	480/277)		
Input voltage range		Uin / V			280.	550		
Mains phases					:	3		
Mains frequency		f <sub>N</sub> / Hz			50 / 6	60 ±2		
Rated input current @ U <sub>N</sub> = 400V		lin / A	13	17	21	31	43	43
Rated input current @ U <sub>N</sub> = 480V		lin_UL / A	11	15	18	27	35	35
Insulation resistance @ <i>Udc</i> = 500 V		Riso / MΩ			>	20		
Output voltage		Uout / V			0	. <b>U</b> in		
Output frequency	2)	fout / Hz			0	599		
Output phases					•	3		
Rated output current		In / A	0.5	12	16.5	24	33	33
@ <i>U</i> N = 400 V		IN / A	9,5	12	16,5	24	33	33
Rated output current		In_UL / A	7,6	11	14	21	27	27
@ <i>U</i> N = 480 V		IN_UL I A	7,0	11	14	21	21	21
Rated output overload (60s)	3) 4)	160s / %			15	50		
Software current limit	3)	Ilim / %		180			150	
Overcurrent	3)	loc / %		216			180	
Rated switching frequency		fsn / kHz	8	8	4	4	2	4
Max. switching frequency	4)	fs_max / kHz			1	6		
Power dissipation at rated operation	3)	<i>P</i> <sub>D</sub> / W	155	180	175	250	275	330
Overload current over time	3)	IOL / %	=> "3.3.3.1 Overload characteristic (OL) for 400 V devices"					
Maximum current 0Hz/50Hz at fs=2kHz		lout_max/ %	211/216	216/216	157/216	108/180	100/180	127/180
Maximum current 0Hz/50Hz at fs=4kHz		lout_max/ %	168/216	200/216	145/216	100/180	75/166	100/180
Maximum current 0Hz/50Hz at fs=8kHz		lout_max/ %	116/216	100/216	72/187	50/129	48/118	91/180
Maximum current 0Hz/50Hz at fs=16kHz		lout_max/ %	63/168	58/150	42/109	29/75	24/69	58/124
						ontinued	on the n	ext page



Device size	12	13	14	15	16			
Housing				2	2			
Max. braking current	IB_max / A		2	1,5		33,6		
Min. braking resistor value	R <sub>B_min</sub> / Ω 39				39 25			
Braking transistor	6)	Max. cycle time: 120s; Max c.d.f.: 50 %						
Protective function for braking transis- tor			No pro	tection fu	nction a	/ailable		
Max. motor cable length shielded 7) // m				10	00			
Table 19: Overview of the 400 V de								

<sup>&</sup>lt;sup>1)</sup> Rated operation corresponds to  $U_N = 400V$ , rated switching frequency, output frequency = 50 Hz (4-pole standard asynchronous motor).

#### 3.3.2 Voltage and frequencies for 400V devices

Input voltages and frequencies		
Rated input voltage	Un / V	400
Rated mains voltage (USA)	Un_ul / V	480
Input voltage range	Uin / V	280550
Input phases		3
Mains frequency	f <sub>N</sub> / Hz	50/60
Mains frequency tolerance	± f <sub>N</sub> / Hz	2
Table 20: Input voltages and frequencies of	the 400V devices	

DC link voltage		
DC link rated voltage @ Un = 400V	UN_dc / V	565
DC link rated voltage @ Un_uL = 480V	UN_UL_dc / V	680
DC link voltage working voltage range	UIN_dc / V	390780
Table 21: DC link voltage for 400V devices		

Output voltages and frequencies			
Output voltage at AC supply	1)	Uout / V	0U <i>N_ac</i>
Output frequency	2)	fout / Hz	0599
Output phase			3
Table 22: Output voltages and frequencies	s of the 400V devic	es	

The voltage to the motor is dependent on the actual input voltage and the control method ("3.3.2.1 Example of the calculation of the possible motor voltage:").

The output frequency is to be limited in such a way that it does not exceed 1/10 of the switching frequency. Notice! Devices with a maximum output frequency higher than 599Hz are subject to export restrictions

<sup>&</sup>lt;sup>3)</sup> The values refer in % to the rated output current IN.

<sup>4)</sup> Observe limitations => "3.3.3.1 Overload characteristic (OL) for 400 V devices".

<sup>&</sup>lt;sup>5)</sup> A detailed description of the Derating => "3.4.3 Switching frequency and temperature of the 400 V devices".

<sup>&</sup>lt;sup>6)</sup> The cyclic duration factor is additionally limited by the used braking resistor.

<sup>7)</sup> The maximum cable length depends on various factors. Further information can be found in the corresponding filter instructions.

The output frequency is to be limited in such a way that it does not exceed 1/10 of the switching frequency. Devices with a maximum output frequency higher than 599Hz are restricted for export.

#### **DEVICE DATA OF THE 400 V DEVICES**

#### 3.3.2.1 Example of the calculation of the possible motor voltage:

The motor voltage for dimensioning of the drive is depending on the used components. The motor voltage reduces according to the following table:

Component	Reduction / %	Example				
Mains choke Uk	4					
Drive converter open-loop	4	Open-loop drive converter with mains- and motor choke				
Drive converter closed-loop	8	at non-rigid supply system:				
Motor choke U <sub>k</sub> 1		400 V mains voltage (100%) - 36 V reduced voltage (11%)				
Non-rigid supply system 2 = 356 V motor voltage						
Table 23: Example of the calculation of the possible motor voltage:						

# 3.3.3 Input and output currents / overload for 400 V devices

Device size			12	13	14	15	16	16
Device Size			12	13	14	13	(2 kHz)	(4kHz)
Rated input current @ Un = 400 V	1)	Iin / A	13	17	21	31	43	43
Rated input current @ UN_UL = 480277 V	1)	lin_UL / A	11	15	18	27	35	35
Rated input current DC @ U <sub>N</sub> = 230 V		lin_dc / A	16	20	26	38	52	52
Rated input current DC @ UN_UL = 240 V		lin_UL_dc / A	13	19	22	33	43	43
Rated output current @ U <sub>N</sub> = 400 V		In / A	9,5	12	16,5	24	33	33
Rated output current @ UN_UL = 480 V		IN_UL / A	7,6	11	14	21	27	27
Rated output overload (60s)	2)	160s / %			15	50		
Overload current	2)	IOL / %	=> "3.3.3.1 Overload characteristic (OL) for 400 V devices"					
Software current limit	2) 3)		180 150					
Overcurrent	2)	loc / %	216 180					
Table 24: Input and output current	s / over	load of the 4	00 V dev	vice .				

The values resulting from rated operation with B6 rectifier circuit and mains choke 4% Uk.

<sup>&</sup>lt;sup>2)</sup> The values refer in % to the rated output current In.

<sup>3)</sup> Limitation of the current setpoint in closed-loop operation. This setpint limit is not active in v/f operation.



#### 3.3.3.1 Overload characteristic (OL) for 400 V devices


All drive controllers can be operated at rated switching frequency with an utilization of 150 % for 60 s.


The OL overload function is a root mean square (RMS) function. The greater the difference between the overload and underload phases, the greater the deviation of the RMS from the arithmetic mean value.

For extreme overloads (=> "Figure 6: Switch-off time t depending on the overload I/IN at OC level 216%" or "Figure 7: Switch-off time t depending on the overload I/IN at OC level 180%") the load is weighted more heavily. This means the load is provided with a factor for the calculation of the RMS value, by way that the overload protection function triggers, even if the RMS value does not reach 100%.

#### Restrictions:

- The thermal design of the heat sink is based on the rated operation. The following values are taken into account: Rated output current, ambient temperature, rated switching frequency, rated voltage.
- At high ambient temperatures and/or high heat sink temperatures (for example, by preceding utilisation nearby 100%) the drive controller can change to overtemperature error before triggering the protective function OL.
- At low output frequencies or switching frequencies higher than the rated switching frequency, the frequency-dependent maximum current can be exceeded before triggering the overload error OL and error OL2 can be triggered
   (=> "3.3.3.2 Frequency-dependent maximum current (OL2) for 400V devices").

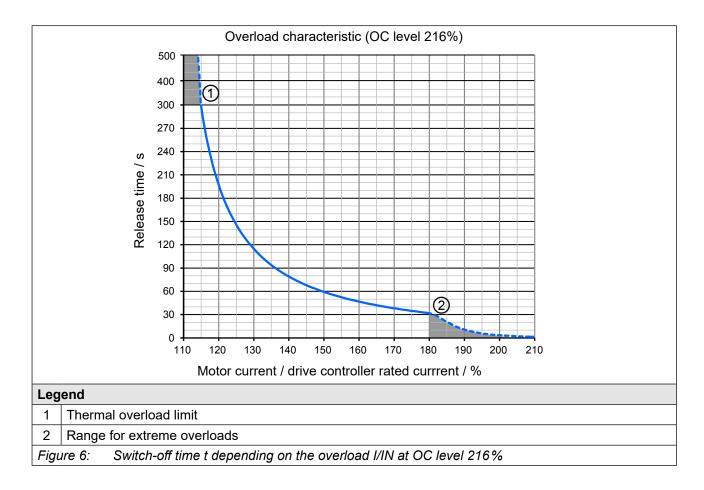

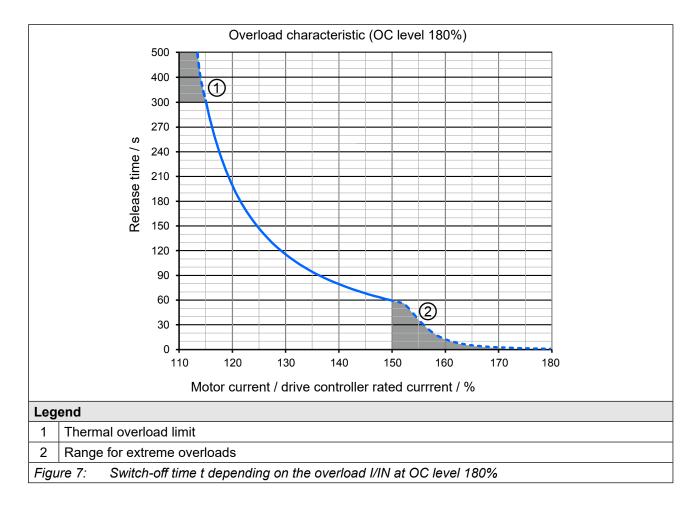

- On exceeding a load of 105 % the overload integrator starts.
- · When falling below the integrator counts backwards.
- If the integrator reaches the overload characteristic "Error overload (OL)" is triggered.

After a cooling down period, the integrator can be reset now. The drive controller must remain switched on during the cooling down phase.

#### Operation in the range of the thermal overload limit

Due to the high steepness of the overload characteristic, the duration of a permissible overload in this range ① cannot be determined exactly. Therefore, the design of the drive controller should be assumed to have a maximum overload time of 300s.



#### 3.3.3.2 Frequency-dependent maximum current (OL2) for 400V devices


The characteristics of the maximum currents for a switching frequency which are depending on the output frequency are different for each drive controller, but the following rules are generally applicable:

- Applies for the rated switching frequency: at 0 Hz the drive controller can provide at least the rated output current and from 6 Hz the overcurrent *loc*.
- Lower maximum currents apply for switching frequencies > rated switching frequency.

If error (OL2) shall be triggered on exceeding the maximum currents or if the switching frequency is automatically reduced "derating" can be adjusted in the drive controller parameters.

#### **DEVICE DATA OF THE 400 V DEVICES**

The following characteristic curve indicates the permissible maximum current for the output frequency values 0 Hz, 3.1 Hz, 6.2 Hz, 12.5 Hz, 25 Hz and 50 Hz. Device size 15 is represented exemplary.

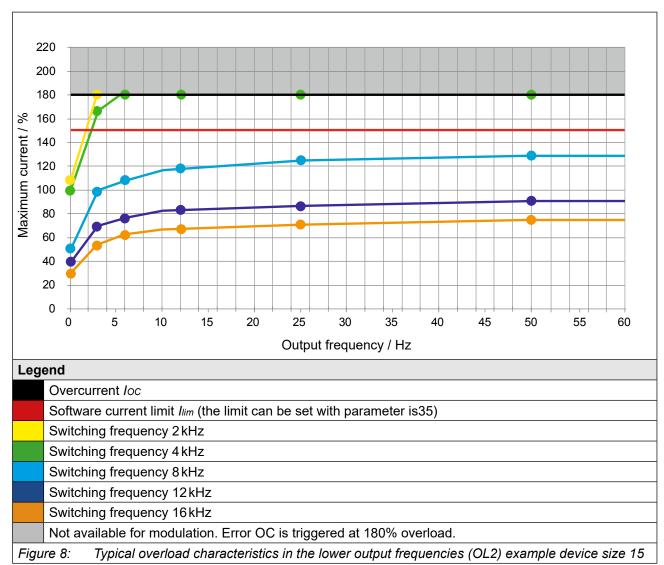



The frequency-dependent maximum current *Ilim* refers in % to the rated output current *IN*.

The current remains constant from the last specified output frequency value.





The values for the respective device size are listed in the following tables.

# Frequency-dependent maximum current

Device size			12							
Rated switching frequency				8 k	Hz					
Output frequency	fout / Hz	0	3,1	6,2	12,5	25	50			
	2 kHz	211	216	216	216	216	216			
Fraguency dependent maximum current @ fo /	4 kHz	168	216	216	216	216	216			
Frequency-dependent maximum current @ fs   lout_maximum cu	8kHz	116	211	216	216	216	216			
Basic Time Period - 62.5 µs (Parameter 1522-0)	16 kHz	63	116	137	147	158	168			
	1.75 kHz	210	216	216	216	216	216			
Fraguency dependent maximum current @ fo /	3.5 kHz	179	216	216	216	216	216			
Frequency-dependent maximum current @ fs   lout_maximum cu	7kHz	129	216	216	216	216	216			
Basic Time Period - 71.4 µs (Parameter 1522-1)	14 kHz	74	137	158	168	179	190			
	1.5 kHz	210	216	216	216	216	216			
Frequency-dependent maximum current @ fs lout_maxi	3 kHz	190	216	216	216	216	216			
Basic Time Period = 83.3 µs (Parameter is22=2)	6kHz	142	216	216	216	216	216			
Dasic Time Feriou = 03.3 μs (Farameter 1322-2)	12 kHz	84	158	179	190	200	211			
	1.25 kHz	211	216	216	216	216	216			
Fraguency dependent maximum current @ fo /	2.5 kHz	200	216	216	216	216	216			
Frequency-dependent maximum current @ fs   lout_maximum cu	% 5kHz	155	216	216	216	216	216			
Dasic Tille Fellou - 100 µs (Falameter 1822-3)	10 kHz	100	184	205	216	216	216			
Table 25: Frequency-dependent maximum current for	device size 12									

Device size			13						
Rated switching frequency					8 k	Hz			
Output frequency		fout / Hz	0	3	6	12,5	25	50	
		2kHz	216	216	216	216	216	216	
Fraguency dependent maximum augrent @ fa /	lout_max/ %	4 kHz	200	216	216	216	216	216	
Frequency-dependent maximum current @ fs   lout_max   Basic Time Period = 62.5 \( \mu \) (Parameter is 22=0)		8 kHz	100	200	216	216	216	216	
Basic Time Period - 62.5 µs (Parameter 1522-0)		16kHz	58	108	125	133	142	150	
		1.75 kHz	216	216	216	216	216	216	
Francisco de mandant massimo um accument @ f	1 . / 0/	3.5 kHz	204	216	216	216	216	216	
Frequency-dependent maximum current @ fs lout_max	(/ %0	7 kHz	125	216	216	216	216	216	
Basic Time Period = 71.4 µs (Parameter is22=1)		14 kHz	67	130	142	154	163	171	
		1.5 kHz	216	216	216	216	216	216	
Fraguency dependent maximum augrent @ fa /	/ 0/	3 kHz	208	216	216	216	216	216	
Frequency-dependent maximum current @ fs   lout_max   Basic Time Period = 83.3 \( \mu \) (Parameter is 22=2)	(/ 70	6 kHz	150	216	216	216	216	216	
Basic Time Feriou - 65.5 µs (Farameter 1822-2)		12kHz	75	150	158	175	183	192	
		1.25 kHz	216	216	216	216	216	216	
Fraguency dependent maximum ourrent @ fe /	/ 0/.	2.5 kHz	212	216	216	216	216	216	
Frequency-dependent maximum current @ fs lout_max	(/ 70	5 kHz	175	216	216	216	216	216	
Basic Time Period = 100 μs (Parameter is22=3)		10 kHz	88	175	188	204	216	216	
Table 26: Frequency-dependent maximum current for	devi	ice size 13							

# **DEVICE DATA OF THE 400 V DEVICES**

Device size			14							
Rated switching frequency					4 k	Hz				
Output frequency		fout / Hz	0	3,1	6,2	12,5	25	50		
		2 kHz	157	216	216	216	216	216		
Fraguency dependent maximum augrent @ fe	lout_max/ % -	4 kHz	145	216	216	216	216	216		
Frequency-dependent maximum current @ fs		8kHz	73	146	158	170	182	188		
Basic Time Period = 62.5 µs (Parameter is22=0)		16 kHz	42	79	91	97	103	110		
		1.75 kHz	158	216	216	216	216	216		
requency-dependent maximum current @ fs	lout_maxl %	3.5 kHz	149	216	216	216	216	216		
, , ,		7kHz	91	170	185	197	209	215		
Basic Time Period = 71.4 µs (Parameter is22=1)		14 kHz	49	94	103	112	118	124		
		1.5 kHz	158	216	216	216	216	216		
Fraguency dependent maximum current @ fo	1 / 0/.	3kHz	152	216	216	216	216	216		
Frequency-dependent maximum current @ fs Basic Time Period = 83.3 µs (Parameter is22=2)	lout_max/ %	6kHz	109	194	212	216	216	216		
Basic Time Period – 65.5 µs (Parameter 1522–2)		12 kHz	55	109	115	127	133	139		
		1.25 kHz	158	216	216	216	216	216		
	/ 0/	2.5 kHz	155	216	216	216	216	216		
Frequency-dependent maximum current @ fs	Iout_max/ %	5kHz	127	216	216	216	216	216		
Basic Time Period = 100 μs (Parameter is22=3)		10 kHz	64	127	136	149	158	164		
Table 27: Frequency-dependent maximum cur	rent for devi	ice size 14								

Device size			15						
Rated switching frequency			4 kHz						
Output frequency		fout / Hz	0	3,1	6,2	12,5	25	50	
<u>:</u>		2kHz	108	180	180	180	180	180	
Eroquanov danandant maximum aurrant @ fa	lout_max/ %	4 kHz	100	167	180	180	180	180	
Frequency-dependent maximum current @ $fs$ Basic Time Period = $62.5 \mu s$ (Parameter is 22=0)	10ut_maxi 70 -	8kHz	50	100	108	117	125	129	
basic Time Period – 02.5 µs (Parameter 1522–0)		16 kHz	29	54	63	67	71	75	
		1.75 kHz	108	180	180	180	180	180	
Frequency-dependent maximum current @ fs  Basic Time Period = 71.4 \( \mu \)s (Parameter is 22=1)	lout_maxl %	3.5 kHz	102	171	180	180	180	180	
		7kHz	63	117	127	135	144	148	
basic Time Period – 71.4 µs (Parameter is22–1)		14 kHz	33	65	71	77	81	85	
		1.5 kHz	108	180	180	180	180	180	
Evanue dependent maximum current @ fo	1 , / 0/	3 kHz	104	175	180	180	180	180	
Frequency-dependent maximum current @ fs Basic Time Period = 83.3 µs (Parameter is22=2)	lout_max/ %	6kHz	75	133	146	154	163	167	
Basic Time Feriou - 63.5 µs (Farameter 1822-2)		12 kHz	38	75	79	88	92	96	
		1.25 kHz	108	180	180	180	180	180	
Everyone dependent maximum assess & f	1 . /0/	2.5 kHz	106	179	180	180	180	180	
Frequency-dependent maximum current @ fs	lout_max/ %	5kHz	88	150	165	173	180	180	
Basic Time Period = 100 µs (Parameter is22=3)		10 kHz	44	88	94	102	108	113	
Table 28: Frequency-dependent maximum cur	rent for devi	ce size 15							



Device size					1	6		
Rated switching frequency					2 k	Hz		
Output frequency		fout / Hz	0	3,1	6,2	12,5	25	50
		2kHz	100	166	180	180	180	180
Fraguency dependent maximum augrent @ fe	1 , 10/	4 kHz	75	136	149	158	164	167
Frequency-dependent maximum current @ fs	lout_max/ %	8kHz	49	94	103	109	115	118
Basic Time Period = 62.5 µs (Parameter is22=0)		16 kHz	24	52	58	64	67	70
		1.75 kHz	100	167	180	180	180	180
Frequency-dependent maximum current @ fs  Basic Time Period = 71.4 \( \mu \) (Parameter is 22=1)	lout_maxl %	3.5 kHz	82	144	157	165	172	176
		7kHz	55	105	114	121	127	130
Basic Time Period = 71.4 µs (Parameter 1822=1)		14 kHz	30	59	67	73	76	79
		1.5 kHz	100	167	180	180	180	180
Eraguanay danandant mayimum ayurant @ fa	1 , 10/	3kHz	88	152	165	173	180	180
Frequency-dependent maximum current @ fs	lout_maxl %	6kHz	62	115	126	133	139	142
Basic Time Period = 83.3 µs (Parameter is22=2)		12 kHz	36	67	76	82	85	88
		1.25 kHz	100	167	180	180	180	180
Francisco de condest manimum accurant @ f	1	2.5 kHz	94	159	174	180	180	180
Frequency-dependent maximum current @ fs	Iout_max/ %	5kHz	69	126	137	146	152	155
Basic Time Period = 100 μs (Parameter is22=3)		10 kHz	42	80	89	96	100	103
Table 29: Frequency-dependent maximum cur	rent for devi	ce size 16 (2	kHz)					

Device size		,			1	6		
Rated switching frequency					4 k	Hz		
Output frequency		fout / Hz	0	3,1	6,2	12,5	25	50
		2 kHz	127	179	180	180	180	180
Fraguency dependent maximum augrent @ fo	1 1 0/.	4 kHz	100	164	180	180	180	180
Frequency-dependent maximum current @ fs Basic Time Period = 62.5 \( \mu \) (Parameter is 22=0)	lout_max/ %	8 kHz	91	136	167	180	180	180
Basic Time Period – 62.5 µs (Parameter 1522–0)		16 kHz	58	88	109	118	121	124
		1.75 kHz	127	179	180	180	180	180
Fraguency dependent maximum augrent @ fa	1 , 10/	3.5kHz	107	167	180	180	180	180
Frequency-dependent maximum current @ fs	lout_max/ %	7kHz	93	143	174	180	180	180
Basic Time Period = 71.4 µs (Parameter is22=1)		14 kHz	65	99	121	129	133	138
		1.5 kHz	127	179	180	180	180	180
Fraguency dependent maximum august @ fe	1 , 10/	3 kHz	114	171	180	180	180	180
Frequency-dependent maximum current @ fs	lout_max/ %	6kHz	96	150	180	180	180	180
Basic Time Period = 83.3 µs (Parameter is22=2)		12 kHz	73	109	133	139	146	152
		1.25 kHz	127	179	180	180	180	180
Francisco de mandant massimos massimos de fa	1 . 10/	2.5kHz	121	175	180	180	180	180
Frequency-dependent maximum current @ fs	lout_max/ %	5kHz	98	157	180	180	180	180
Basic Time Period = 100 μs (Parameter is22=3)		10 kHz	82	123	150	161	167	173
Table 30: Frequency-dependent maximum cur	rent for devi	ce size 16 (4	kHz)					

#### **DEVICE DATA OF THE 400 V DEVICES**

#### 3.3.4 Overview of rectifier data for 400 V devices

Device size			12	13	14	15	16	16
Rectifier rated power		Prect / kW	4,8	6,5	8,7	13	17	17
Rectifier continuous power	1)	Prect_cont / kW	13	13	13	13	17	17
Continuous input current @ Un = 400 V	1)	lin_cont / A	31	31	31	31	43	43
Rated input current @ Un_uL = 480 V / 277 V	1)	lin_UL_cont / A	27	27	27	27	35	35
Rated output current DC  @ UN_dc = 565V		lout_dc / A	16	20	26	38	52	52
Continuous output current DC @ Un_dc = 565 V	1)	lout_dc_cont / A	38	38	38	38	52	52
Rated output current DC  @ UN_UL_dc = 680 V		lout_UL_dc / A	13	19	22	33	43	43
Continuous output current DC @ Un_uL_dc = 680 V	1)	lout_UL_dc_cont / A	33	33	33	33	43	43
Table 31: Overview of rectifier data for 400 V	devid	es						

Ontinuous operation is a load that exceeds the rated operation. Continuous operation only occurs if the internal rectifier is used to supply additional drive controllers via the DC terminals => "5.3.5 DC-bus connection". In continuous operation, the OH error can be triggered depending on the operating conditions of the internal inverter.

#### 3.3.5 Power dissipation at rated operation of the 400 V devices

Device size	12	13	14	15	16	16			
Rated switching frequency	8	8	4	4	2	4			
Power dissipation at rated operation   1) PD / W	155	180	175	250	275	330			
Power dissipation at rated operation DC <sup>2)</sup> P <sub>D_dc</sub> / W	140	165	145	205	225	280			
Table 32: Power dissipation of the 400 V devices									

<sup>&</sup>lt;sup>1)</sup> Rated operation corresponds to  $U_N = 400 \, \text{V}$ ;  $f_{SN}$ ;  $f_N = 50 \, \text{Hz}$  (typically value)

<sup>&</sup>lt;sup>2)</sup> Rated operation DC corresponds to  $U_{N_dc} = 565 \text{ V}$ ; In ;  $f_N = 50 \text{ Hz}$  (typically value)



#### 3.3.6 Fusing of the 400 V devices

#### 3.3.6.1 Fuse protection of the 400 V units ati AC-supply

		ı	Max. size of the fu	se / A
Device size	U <sub>N</sub> = 400 V gG (IEC)	Un = 480 V / 277 V class "J"		Un = 480 V / 277 V 1) 2)
	SCCR 30 kA	SCCR 5kA	SCCR 30 kA	Туре
			16	SIBA 50 1xy 06.16
12	20	15	15	COOPER BUSSMANN 170M1xy9 LITTELFUSE L50S015
13	25	20	20	SIBA 50 1xy 06.20 COOPER BUSSMANN 170M1xy0 LITTELFUSE L50S020
14	25	25	25	SIBA 50 1xy 06.25 COOPER BUSSMANN 170M1xy1 LITTELFUSE L50S025
15	35	35	40	SIBA 50 1xy 06.40 COOPER BUSSMANN 170M1xy3 LITTELFUSE L50S040
16	50	50	50	SIBA 50 1xy 06.50 COOPER BUSSMANN 170M1xy4 LITTELFUSE L50S050
Table 33: Fu	using of the AC 40	0 V / 480 V device	es	

<sup>&</sup>lt;sup>1)</sup> Only fuses within the described model range or series may be used.

<sup>&</sup>quot;x" stands for various indicators. "y" stands for different connection variants. "#" stands for the amperage or identification number..



#### **Short-circuit capacity**

After requests from *EN 60439-1* and *EN 61800-5-1* the following is valid for the connection to a network: The devices are suitable for use in a circuit capable of delivering not more than 30 kA eff. unaffected symmetrical short-circuit current.

# **DEVICE DATA OF THE 400 V DEVICES**

# 3.3.6.2 Fuse protection of the 400 V units ati DC-supply

<b>.</b>		ed size of the e / A	<b>D</b>
Device size	U <sub>N_dc</sub> = 565V	<i>U</i> N_ <i>U</i> L_ <i>dc</i> = 680V	Permissible fuses 1)
	SCCR 30 kA	SCCR 30 kA	
			SIBA 50 215 06.20
12	25	20	SIBA 50 204 34.25
			SIBA 50 118 06.30
			SIBA 50 120 06.32
13	32	32	SIBA 50 201 06.63
			SIBA 50 250 06.80 <sup>2)</sup>
4.4	40	0.5	SIBA 50 280 06.100
14	40	35	SIBA 20 209 37.100 <sup>2)</sup>
			SIBA 50 268 06.125
15	63	50	SIBA 20 556 34.160
15	63	50	Bussmann FWP-50A14F
			Bussmann FWP-100A22F
16	80	70	Bussmann 170M1419
10	30	10	Littelfuse L70QS150
Table 34: DO	C Fusing of the 400 V	/	

e 34: DC Fusing of the 400 V / 480 V devices

# **NOTICE**

# Observe the rated voltage of the fuse!

► The rated voltage of the fuse must be at least equal to the maximum DC supply voltage of the drive controller.

<sup>&</sup>lt;sup>1)</sup> Fuses of the same type with lower rated currents can be used if they are suitable for the application.

<sup>2)</sup> Fuse without UL certification.



#### 3.4 General electrical data

#### 3.4.1 Switching frequency and temperature

The drive controller cooling is designed by way that the heat sink overtemperature threshold is not exceeded at rated conditions. A switching frequency higher than the rated switching frequency also produces higher losses and thus a higher heat sink heating. If the heat sink temperature reaches a critical threshold ( $T_{DR}$ ), the switching frequency can be reduced automatically step by step. This prevents that the drive controller switches off due to overheating of the heat sink. If the heat sink temperature falls below the treshold  $T_{UR}$ , the switching frequency is increased back to the setpoint. At temperature  $T_{EM}$  the switching frequency is immediately reduced to rated switching frequency. "Derating" must be activated, for this function to work.

#### 3.4.2 Switching frequency and temperature of the 230 V devices

Device size			10	12	13	14			
Rated switching frequency	1)	fsn / kHz	8	8	4	4			
Max. switching frequency	1)	fs_max / kHz	16						
Min. switching frequency	1)	<i>f</i> s_min / kHz	1,25						
Max. heat sink temperature		Ths / °C	90						
Temperature for derating the switching frequency		T <sub>DR</sub> / °C	80						
Temperature for uprating the switching frequency		Tur / °C	70						
Temperature for switching to rated switching frequency		Тем / °C	85						
Table 35: Switching frequency and tempera	ture	of the 230 V o	levices						

The output frequency is to be limited in such a way that it does not exceed 1/10 of the switching frequency.

#### 3.4.3 Switching frequency and temperature of the 400 V devices

Device size			12	13	14	15	1	6
Rated switching frequency	1)	<i>f</i> s∧ / kHz	lz 8 8 4 4 2			2	4	
Max. switching frequency	1)	fs_max / kHz	Hz 16					
Min. switching frequency	1)	<i>f</i> s_min / kHz	1,25					
Max. heat sink temperature THS / °C 90								
Temperature for derating the switching frequency		TDR / °C	80					
Temperature for uprating the switching frequency  Tur / °C  70								
Femperature for switching to rated switching requency  TEM / °C  85								
Table 36: Switching frequency and temperature of the 400 V devices								

The output frequency is to be limited in such a way that it does not exceed 1/10 of the switching frequency.


# 3.4.4 DC link / braking transistor function

# NOTICE

Falling below the minimum braking resistor value!

#### Destruction of the drive controller

▶ The minimum brake resistance value must not fall below!

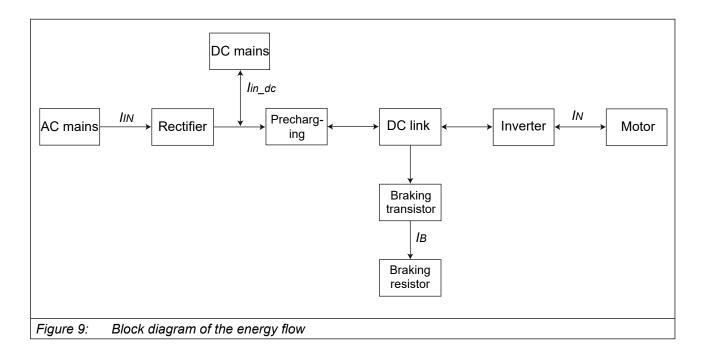



# 3.4.4.1 DC link / braking transistor function of the 230 V devices

Device size			10	12	13	14
Rated DC link voltage	Un_dc / V		325			
@ UN = 230 V						
Rated DC link voltage	UN_dc_UL / V		339			
@ Un_ul = 240 V						
DC link voltage working voltage range  UIN_dc / V  240373				373		
DC switch-off level "Error underpotential"  UUP / V			216			
DC switch-off level "Error overpotential"  Uop / V			400			
DC switch-off level braking resistor	OC switch-off level braking resistor  1) UB / V  380					
Max. braking current		IB_max / A	21,5			33,6
Min. braking resistor value		$R_{B\_min}$ / $\Omega$	19			12
Braking transistor 2)			Max. cycle time: 120s; Max c.d.f.: 50 %			
Protective function for braking transistor			No protection function available			lable
DC link capacity C / μF				2240	3280	4100
Table 37: DC link / braking transistor function of the 230 V devices						

The DC switching level for the braking transistor is adjustable. The default value is the value specified in the table.

<sup>&</sup>lt;sup>2)</sup> The cyclic duration factor is additionally limited by the used braking resistor.

# **GENERAL ELECTRICAL DATA**

# 3.4.4.2 DC link / braking transistor function of the 400 V devices

Device size		12	13	14	15	16	
Rated DC link voltage	Rated DC link voltage		505				
@ UN = 400 V	$U_{N_{dc}}/V$ $U_{N_{dc}}/V$		565				
Rated DC link voltage							
Rated input current @ UN_UL = 480277 V	U <sub>N_dc_UL</sub> / V			680			
DC link voltage working voltage range	U <sub>IN_dc</sub> / V			390780	)		
DC switch-off level "Error underpotential"  UUP / V  240							
DC switch-off level "Error overpotential" Uop /			840				
DC switch-off level braking resistor	U <sub>B</sub> / V	780					
Max. braking current	I <sub>B_max</sub> / A		2	1,5		33,6	
Min. braking resistor value	$R_{B\_min}$ / $\Omega$		3	89		25	
Braking transistor 2) Max. cycle time: 120 s; Max c.d.f.: 50			: 50 %				
Protective function for braking transistor		N	o protecti	on function	on availab	ole	
DC link capacity	Cint / µF	470	705	820	1230	1230	
Min. internal precharging resistor	Rpc_int / Ω	12	12	12	12	12	
Max. precharging current	Ipc_max / A	137	137	137	137	200	
Table 38: DC link / braking transistor function of the 400 V devices							

The DC switching level for the braking transistor is adjustable. The default value is the value specified in the table.

#### 3.4.5 Fan

Device size		10	12	13	14	15	16		
Interior for	Number	1							
Interior fan	Speed-variable	no							
Llast sink for	Number	2							
Heat sink fan	Speed-variable	no							
Table 39: Fan									



The fans are not speed-variable.

# **NOTICE**

#### **Destruction of the fan!**


► Take care that no foreign substances drop into the fan!

<sup>2)</sup> The cyclic duration factor is additionally limited by the used braking resistor.



#### 3.4.5.1 Switching behaviour of the fans

The fans have different switch-on and switch-off points. The switching point for the switch-on temperature ① is adjustable. The hysteresis for the switch-off temperature ② cannot be changed. The switching behaviour of the fans depends on the heat sink and interior temperature.

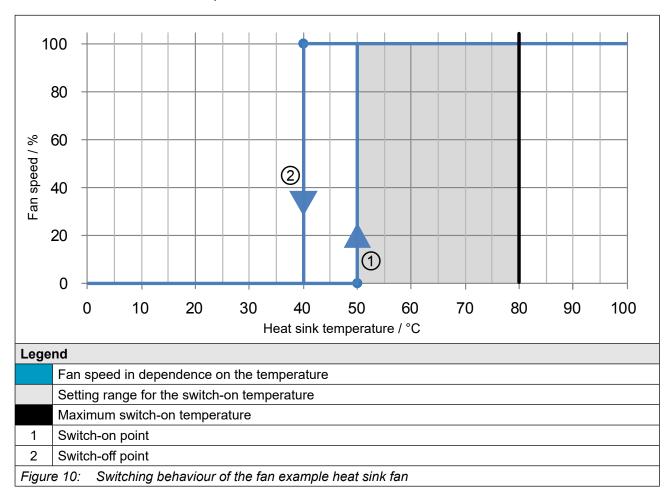

#### 3.4.5.2 Switching points of the fans


The switching point for the switch-on temperature and the maximum speed level of the fans are adjustable. The following table shows the default values.

Fan		Heat sink	Interior	
Switch-on temperature T/°C		50	45	
Maximum switch-on temperature		80	55	
Table 40: Switching points of the fans				

# 4 Installation


# 4.1 Dimensions and weights

#### 4.1.1 Built-in version air cooler

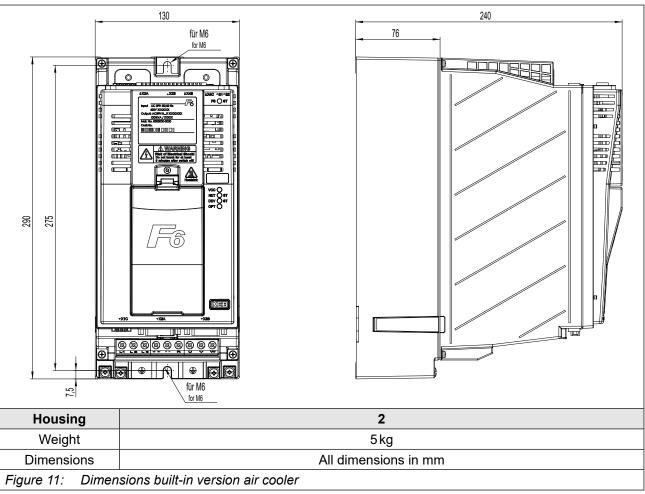




# 4.1.2 Push-through version air cooler IP20-ready

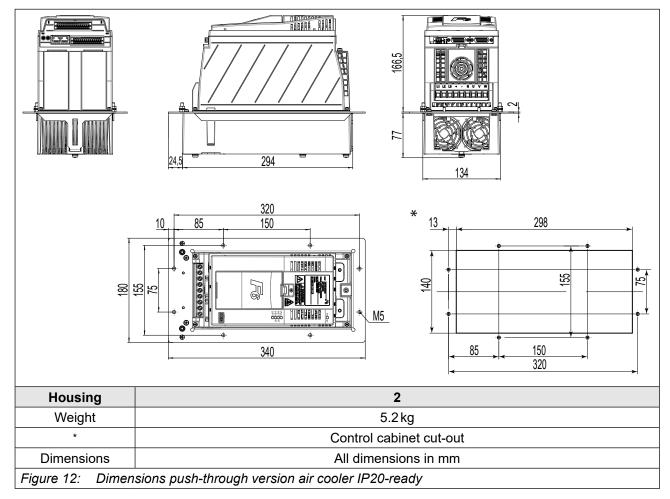


# **DIMENSIONS AND WEIGHTS**

# 4.1.3 Push-through version air-cooling IP54-ready

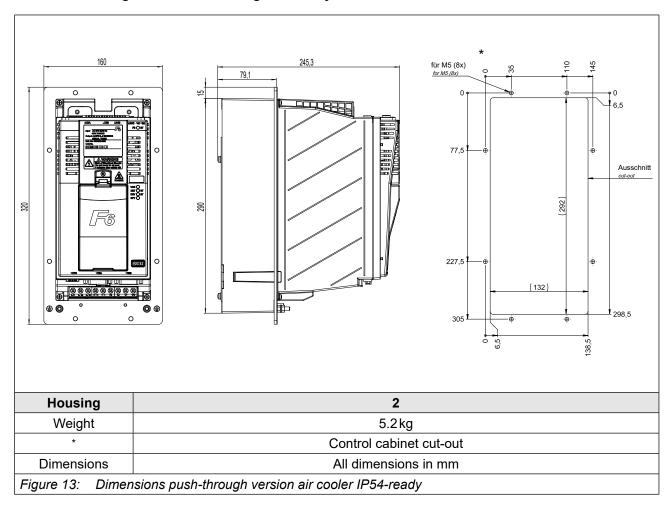



# 4.1.4 Push-through version convection cooler

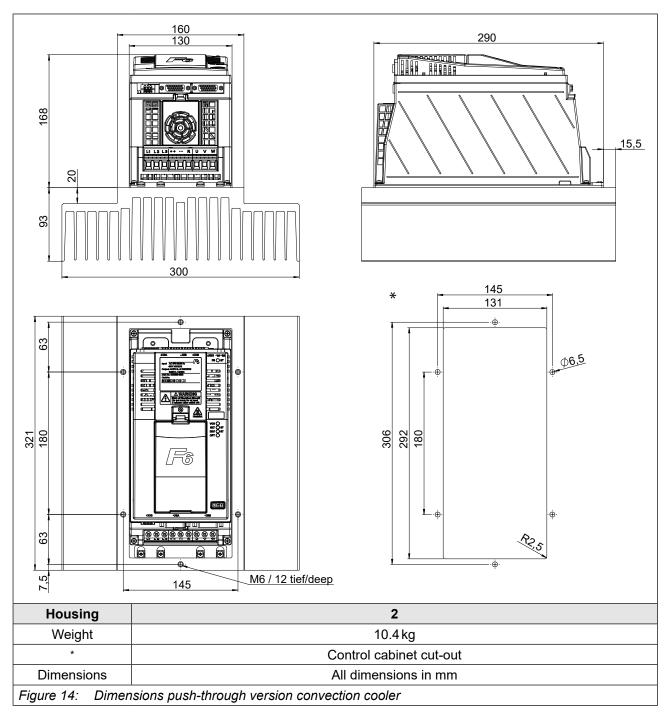

65

#### 4.2 Control cabinet installation

# 4.2.1 Mounting instructions

For the mounting of the drive controllers the following mounting materials with the appropriate quality were tested by KEB.

Required r	material	Tightening torque	
Socket per	ow 150 4762 M6 9 9	6.5 Nm	
Socket screw <i>ISO 4762</i> - M6 - 8.8		58lb inch	
Flat washe	r <i>ISO 7092</i> - 6 - 200 HV	_	
Table 41: Mounting instructions for built-in version / push-through version convection cooler			

Required material	Tightening torque
Socket screw ISO 4762 - M5 - 8.8	2.5 Nm
Socket Sciew 130 4762 - 1015 - 6.6	22 lb inch
Flat washer ISO 7092 - 5 - 200 HV	_
Table 42: Mounting instructions for push-through version	1

# **NOTICE**

# Use of other fixing material

► The alternatively selected fixing material must meet the above material characteristics (quality) and tightening torques!

The use of other fixing materials is beyond the control of KEB and is therefore the sole responsibility of the customer.



#### 4.2.2 Mounting distances

Power dissipation for the control cabinet dimension => "3.3.5 Power dissipation at rated operation of the 400 V devices". A lower value can be used here depending on the operating mode/load.




# Mounting the drive controller

For reliable operation, the drive controller must be mounted without any distance on a smooth, closed, metallically bright mounting plate.

Mounting distances	Dimen- sion	Distance in mm	Distance in inch
	А	150	6
A E C	В	100	4
	С	30	1,2
	D	0	0
	Е	0	0
	F 1)	50	2
B	1) Distance inet door	to preceding elemen	ts in the control cab-

Figure 15: Mounting distances

#### 4.2.3 Installation of IP54-ready devices

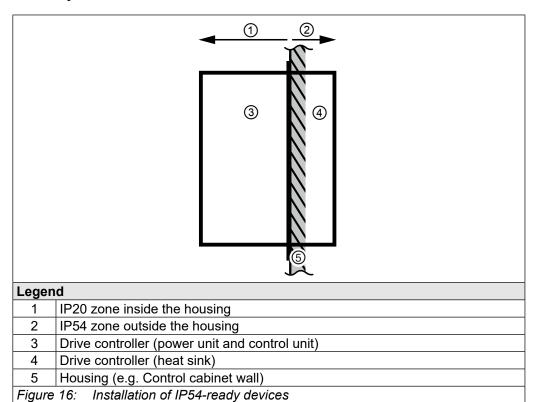



# IP54 zone: Heat sink outside the housing

The protection class IP54 can only be achieved when the device is properly installed.

For proper installation, a suitable IP54 seal

(=> "5.4.3 Seal for IP54-ready devices") must be installed between heat sink and housing (e.g. control cabinet wall).

The tightness must be checked after the installation. If properly installed, the separation to the housing corresponds to degree of protection IP54.

In the case of fan-cooled units, the fans must be protected from negative environmental influences.

These include combustible, oily or dangerous fumes or gases, corrosive chemicals, coarse foreign bodies and excessive dust. This applies especially to the access of the heatsink from the top (air outlet).lcing is inadmissible.

UL: Device heat sink is classified as NEMA type 1

#### IP20 zone: Device inside the housing

This part is intended for the installation in a suitable housing for the required degree of protection (e.g. control cabinet).

The power connections are excluded => "3.1.1 Climatic environmental conditions".

# **NOTICE**


#### Defect due to continuous splash water!

► Never expose the device to continuous splashing water (e.g. direct exposure to rain)!




#### 4.2.4 Control cabinet ventilation

If construction-conditioned the control cabinet cannot be without indoor ventilation, appropriate filters must avoid suction of foreign objects.

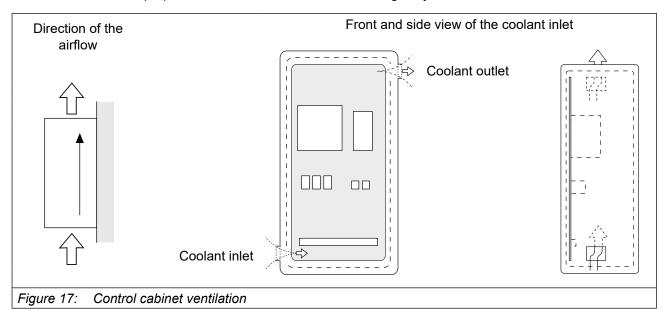


#### 4.2.5 Airflow of the drive converter

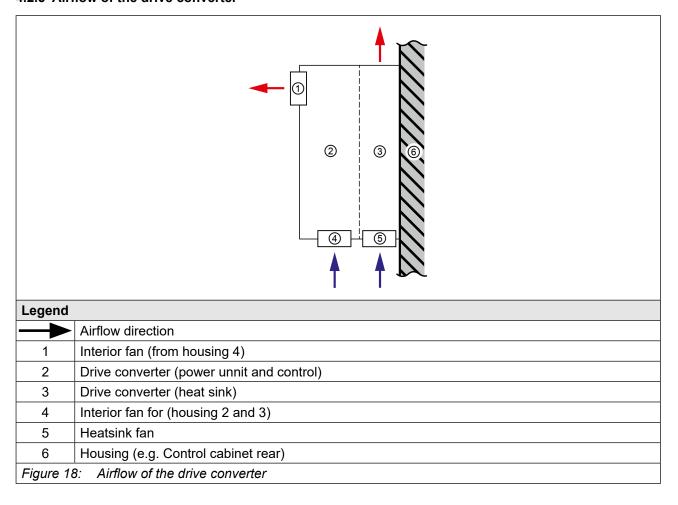


# 5 Installation and connection

#### 5.1 Overview of the COMBIVERT F6

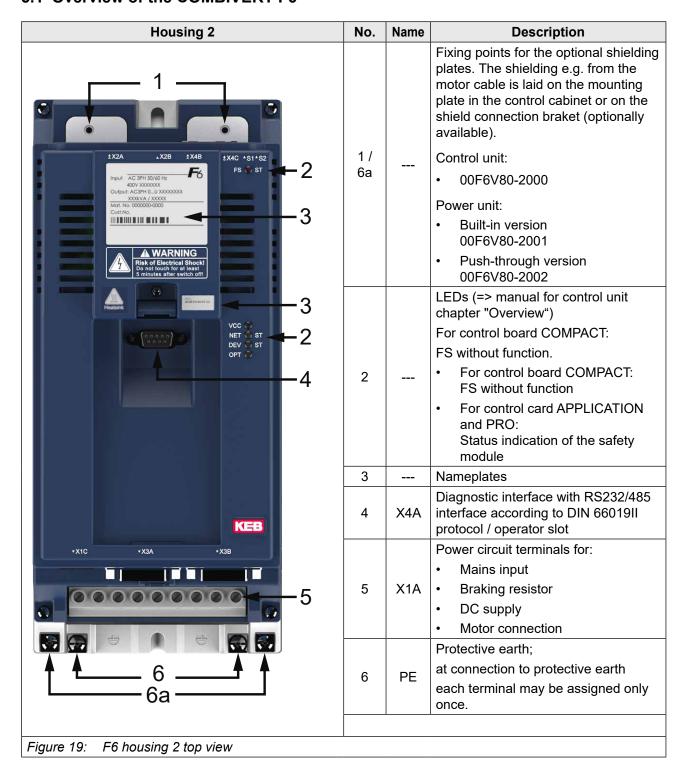



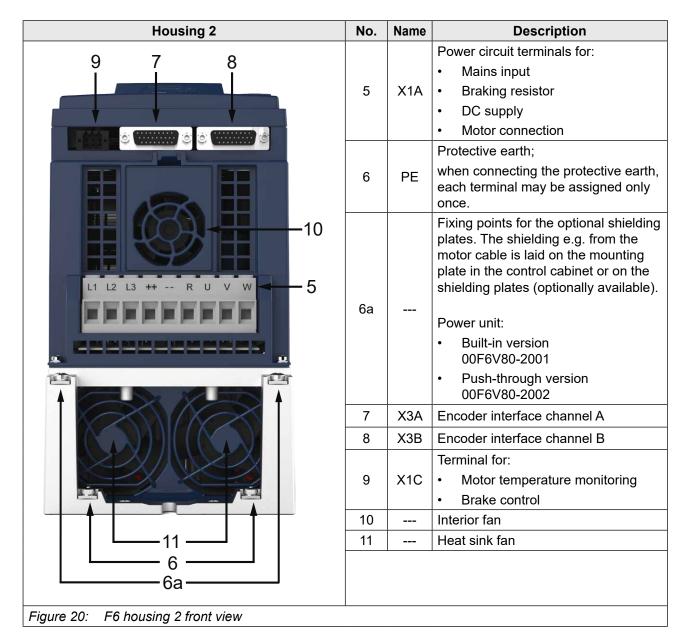



Terminal R can alternatively be labeled with PB.



No.	Name	Description			
12	S1	Rotary coding switch A			
13	S2	Rotary coding switch B			
14	X4C	Fieldbus interface (out)			
15	X4B	Fieldbus interface (in)			
16	X2B	Safety module			
	Connection for:				
	17 X2A	CAN bus			
17		Analog inputs and			
		analog output			
		<ul> <li>Digital inputs and outputs</li> </ul>			
		24 V DC voltage supply			

Figure 21: F6 housing 2 rear view with control board APPLICATION



Further information can be found in the respective control board manual.



Instructions for use COMBIVERT F6 control board APPLICATION www.keb.de/fileadmin/media/Manuals/dr/ma\_dr\_f6-cu-a-inst-20118593\_en.pdf





Instructions for use COMBIVERT F6 control board COMPACT www.keb.de/fileadmin/media/Manuals/dr/ma\_dr\_f6-cu-k-inst-20144795\_en.pdf





Instructions for use COMBIVERT F6 control board PRO www.keb.de/fileadmin/media/Manuals/dr/ma\_dr\_f6-cu-p-inst-20182705\_en.pdf





## 5.2 Connection of the power unit


## **NOTICE**

#### **Destruction of the drive controller!**

► Never exchange mains input and motor output!

#### 5.2.1 Connection of the voltage supply

The COMBIVERT F6 housing 2 can be supplied from the mains. The starting current limiting is arranged before the DC link.

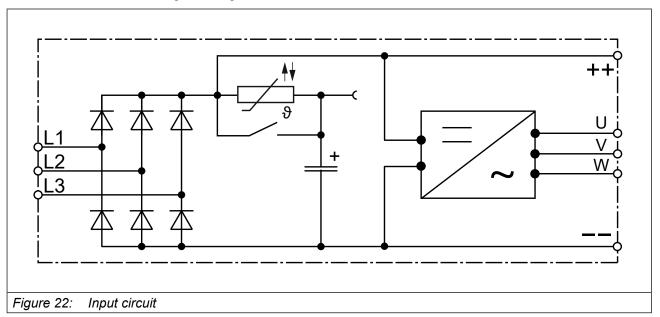



## Minimum waiting period between two switch-on procedures 5 minutes!

ZCyclic switching on and off of the device leads to temporary low resistance of the resistor (NTC) in the input. This causes a higher starting current, which causes stress to the components in the input range (e.g. the input rectifier) and can lead to triggering of the mains fuse.

## **CONNECTION OF THE POWER UNIT**

## 5.2.1.1 Terminal block X1A



Name	Function	Cross-section for terminal connection	Tightening torque	Max. number of conductors
L1 L2	Mains connection 3-phase			
L3 ++	DC terminals	Flexible cable with wire-end ferrule with plastic collars 2.510 mm²  For 2 conductors 0.5mm1.5mm²  For UL flexible cable without wire-end ferrule AWG 266	1.5 Nm 13 lb inch	For IEC: 2
R	Connection for braking resistor (between R and ++)			For UL: 1
V W	Motor connection			
Figure 23:	Terminal block X1A			J

1

Terminal R can alternatively be labeled with PB.



#### 5.2.2 Protective earth and functional earth



Protective and functional earth must not be connected to the same terminal.

#### 5.2.2.1 Protective earth

The protective earth (PE) serves for electrical safety particularly personal protection in error case.

## **A CAUTION**

#### Electric shock due to incorrect dimensioning!



Cross-section wire to ground should be selected according to VDE 0100!

Name	Function	Terminal connection	Tightening torque				
	Connection for protective corth	Carou M4 for arison connector	1.3 Nm				
PE, ⊕	Connection for protective earth	Screw M4 for crimp connector	11 lb inch				
Figure 24: Connection for protective earth							



#### Incorrect installation of the PE connection.

Only the M4 screws may be used to connect the protective earth!

#### 5.2.2.2 Functional earthing

A functional earthing may also be necessary, if for EMC requirements additional potential equalization between devices or parts of the system must be available.



The use of the functional earth (FE) is not required if the frequency inverter is EMC-technically wired.

The functional earth may not be wired green/yellow!



Notes on EMC-compatible installation can be found here. www.keb.de/fileadmin/media/Manuals/emv/0000neb0000.pdf



#### 5.3 Mains connection

#### 5.3.1 Supply cable

The conductor cross-section of the supply cable is determined by the following factors:


- Input current of the drive controller
- · Used line type
- · Installation and ambient temperatures
- The locally valid electrical regulations



The application engineer is responsible for the design!

#### 5.3.2 AC mains connection

#### 5.3.2.1 AC supply 3-phase

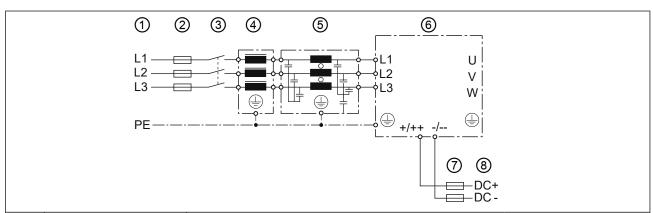

No.	Туре	Description				
	Mains phase	3-phase				
		TN, TT	IT			
1	Mains form	The rated voltage between one phase conductor and earth potential (or the neutral point in the IT system) must not exceed 300V,  USA UL: 480 / 277 V.				
		(For the IT system, a short-term disconnection	must be ensured).			
	Personal protection	RCMA with separator or RCD type B	Insulation monitors			
2	Mains fuses	see chapter "Protection of the drive controllers"				
3	Mains contactor	-				
4	Mains choke	see notes in chapter "Filters and ch	okes"			
5	HF filter for TN-, TT systems	Required for compliance with the limit values in accordance with <i>EN 61800</i>				
	HF filter for IT systems					
6	Drive controller	COMBIVERT F6				
7	DC-fuses	See note in chapter "Fusing of the devices".				
8	DC-supply	DC supply generated by the drive controller for connecting further drive controllers => "5.3.5 DC-bus connection"				
Figur	Figure 25: Connection of the mains supply 3-phase					

Figure 25: Connection of the mains supply 3-phase



#### 5.3.2.2 Note on hard power systems

The service life of drive controllers with voltage DC link depends on the DC voltage, ambient temperature and the current load of the electrolytic capacitors in the DC link. The use of mains chokes can increase the service life of the condensators to a considerable extent, especially when connecting to "hard" power systems or when under permanent drive load (continuous duty).

The term "hard" power system means that the nodal point power ( $S_{Net}$ ) of the mains is very high (>> 200) compared to the rated apparent output power of the drive controller ( $S_{out}$ ).

$$k = \frac{S_{Net}}{S_{out}} >> 200$$

e.g.

$$k = \frac{2 \text{MVA (supply transformer)}}{11.4 \text{ kVA (14F6)}} = 176 \longrightarrow \text{no choke required}$$



A listing of filters and chokes => "5.4.1 Filters and chokes".

#### 5.3.3 DC mains connection

## **NOTICE**

## DC operation

► The DC power supply of 230V devices is only permitted after consultation with KEB!

#### 5.3.3.1 Terminal block X1A DC connection



Name	Function	Cross-section for terminal connection	Tightening torque	Max. number of conductors	
++		Flexible cable with wire-end ferrule with plastic collars 2.510 mm²		For IEC: 2	
	DC terminals	For 2 conductors 0.5mm1.5mm²	1.5 Nm 13 lb inch		
		For UL flexible cable without wire-end ferrule AWG 266	10.10	For UL: 1	
Figure 26:	Terminal black V1A DC connection				

Figure 26: Terminal block X1A DC connection




## 5.3.3.2 Connection at DC voltage supply

## NOTICE

## **Destruction of the drive controller!**


► Never exchange "+ / ++" and "- / --"!

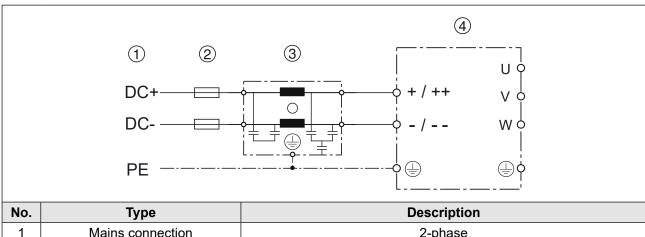

No.	Туре	Description			
1	Mains connection 2-phase				
2	DC mains fuses	See note in chapter "Fuse protection for DC-supply"			
3	HF-Filter	Type aR			
4	4 Drive controller COMBIVERT F6				
Figure	Figure 27: Connection at DC voltage supply				

#### **MAINS CONNECTION**

## 5.3.3.3 Wiring of the motor

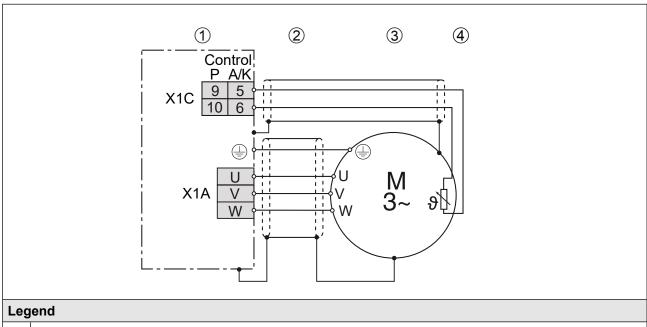


- 1 KEB COMBIVERT
- 2 Apply motor cable, shielding on both sides over a large surface on the bare metallic frame or mounting plate (remove paint if necessary)
- 3 Three-phase motor
- 4 | Temperature monitoring (optional) => Instructions for use "Control circuit"

Figure 28: Wiring of the motor



## 5.3.3.4 Terminal block X1A motor connection

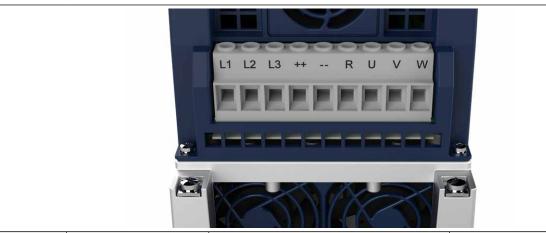


Name	Function	Cross-section for terminal connection	Tightening torque	Max. number of conductors	
U		Flexible cable with wire-end ferrule with plastic collars 2.510 mm²		For IEC: 2	
V	Motor connection	For 2 conductors 0.5mm1.5mm <sup>2</sup>	1.5 Nm 13 lb inch		
W		For UL flexible cable without wire-end ferrule AWG 266		For UL: 1	
Figure 20: Terminal block V1A motor connection					

Figure 29: Terminal block X1A motor connection

#### 5.3.3.5 Selection of the motor line

The correct cabling as well as the motor line itself play an important part in case of low power in connection with long motor line lengths. Low-capacitance line (phase/phase < 65 pF/m, phase/screen < 120 pF/m) at the inverter output have the following effects:

- allow major motor line lengths ("5.3.3.6 Motor cable length and conducted interferences at AC supply")
- better EMC properties (reduction of the common-mode output currents to earth)

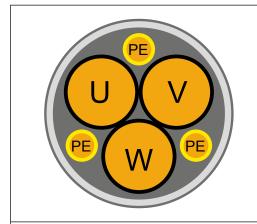

The use of shielded motor lines with symmetrical structure is required for higher motor power (from 30 kW). In these lines the protective earth conductor is tripartite and evenly arranged between the phase lines. A cable without protective earth conductor can be used if local regulations so permit. Then the protective earth conductor must be laid externally. Certain lines also permit the shield for the use as protective earth conductor. For this, observe the details of the line manufacturer!

Figure 30: Symmetrical motor line

#### 5.3.3.6 Motor cable length and conducted interferences at AC supply

The maximum motor cable length is depending on the capacity of the motor cable as well as on the EMC emitted interference. External measures must be taken here (e.g. the use of a line filter).



The cable length can be increased significantly by using motor chokes or motor filters. KEB recommends the use of motor chokes or filters for a cable length upto 50 m. Motor chokes or filters are absolutely necessary upto 100 m.



Further information on the motor cable length can be found in the corresponding filter instructions.



#### 5.3.3.7 Motor cable length for parallel operation of motors

The resulting motor cable length for parallel operation of motors, or parallel installation with multiple cables arises from the following formula:

Resulting motor cable length =  $\sum$ single cable length x  $\sqrt{Number}$  of motor cables

#### 5.3.3.8 Motor cable cross-section

The motor cable cross-section is dependent

- on the characteristic of the output current (e.g. harmonic content)
- on the real effective value of the motor current
- · on the cable length
- · on the type of the used cable
- on the ambient conditions such as bundling and temperature

#### 5.3.3.9 Interconnection of the motor

## **NOTICE**

#### Incorrect behavior of the motor!

► The connecting-up instructions of the motor manufacturer are always generally valid!

#### NOTICE

#### Protect motor against voltage peaks!

▶ Drive controllers switch at the output with high dV/dt. Voltage peaks that endanger the insulation system at the motor can occur especially in case of long motor cables (>15 m). A motor choke, a dV/ dt-filter or sine-wave filter can be used to protect the motor with regard to the operating mode. Figure 31:

#### 5.3.3.10 Connection of the temperature monitoring and brake control (X1C)

A switchable temperature evaluation is implemented in the COMBIVERT.

There are different types for the evaluation available. These are dependending on the control board => *instruction manual "control board"*.

The desired operating mode can be adjusted via software (dr33). If the evaluation is not required, it must be deactivated via software (parameter pn12 = 7) => *Programming manual* 

X1C	PIN	Name	Description
	1	BR+	Brake control / output +
	2	BR-	Brake control / output -
	3	reserved	_
2 4 6	4	reserved	_
	5	TA1	Temperature detection / output +
	6	TA2	Temperature detection / output -
1 3 5			
ككك			

Terminal block X1C for control board APPLICATION and COMPACT

X1C	PIN	Name	Description		
	1	BR+	Brake control / output +		
	2	BR-	Brake control / output -		
	3	0V	For augusty of the checkbook inputs		
	4	24Vout	For supply of the checkback inputs		
2 4 6 8 10	5	DIBR1	Checkback input 1 for brake and relay		
	6	DIBR2	Checkback input 2 for brake and relay		
	7	reserved	-		
	8	reserved	-		
	9	TA1	Temperature detection / output +		
	10	TA2	Temperature detection / output -		
Figure 32: Terminal block X1C for control board PRO					


## **NOTICE**

#### Malfunctions due to incorrect line or laying!

#### Malfunctions of the control due to capacitive or inductive coupling.

- ▶ Do not route cables from the motor temperature sensor (also shielded) together with control cables.
- ► Cables from the motor temperature sensor within the motor cables may only be used with double shielding!
- ▶ The input of the temperature detection has basic isolation.



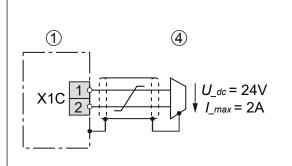

For control board APPLICATION and COMPACT.

The voltage to the control of a brake is decoupled from the internal voltage supply. The brake works only with external voltage supply.

For control board PRO


The brake can be supplied with both, internal and external voltage. Voltage tolerances and output currents vary for internal and external voltage supply..

Respect the specifications

=> instruction manual "control board"

1 COMBIVERT
4 Brake

Figure 33: Connection of the brake control

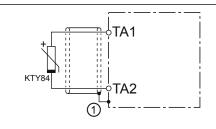

KTY sensors are polarized semiconductors and must be operated in forward direction!

To this connect the anode to TA1 and the cathode to TA2! Non-observance leads to incorrect measurements in the upper temperature range. A protection of the motor winding is then no longer guaranteed.

1 Connection via shield plate (if not available, place on the mounting plate).

Figure 34: Connection of a KTY sensor

## **NOTICE**

No protection of the motor winding in case of wrong connection.

- ▶ Operate KTY sensors in forward direction.
- ▶ KTY sensors may not be combined with other detections.



Further information about the wiring of the temperature monitoring and the brake control have to be observed in the respective control unit manual.

#### 5.3.4 Connection and use of a braking resistor

## **A** CAUTION

#### Fire risk by using brake resistors!



➤ The risk of fire can be significantly reduced by using "intrinsically safe braking resistors" or by using suitable monitoring functions / circuits.

## **NOTICE**

#### Destruction of the frequency inverter if the vale has fallen below the minimum brake resistance value!

► The minimum brake resistance value must not fall below! "3.3 Device data of the 400 V devices"

## **A** CAUTION

#### Hot surfaces caused by load of the braking resistor!

# **▶**

#### Burning of the skin!

- ► Cover hot surfaces safe-to-touch.
- ▶ Before touching, check the surface.
- ▶ If necessary, attach warning signs on the system.




## 5.3.4.1 Terminal block X1A connection braking resistor



Name	Function	Cross-section for terminal connection	Tightening torque	Max. number of conductors		
++	Connection for braking resistor	Flexible cable with wire-end ferrule with plastic collars 2.510 mm²		For IEC: 2		
		For 2 conductors 0.5mm1.5mm <sup>2</sup>	1.5 Nm 13 lb inch			
R	2.29 10010101	For UL flexible cable without wire-end ferrule AWG 266		For UL: 1		
Figure 35:	Figure 35: Terminal block X1A connection braking resistor					

Figure 35: Terminal block X1A connection braking resistor

#### 5.3.4.2 Use of intrinsically safe braking resistors

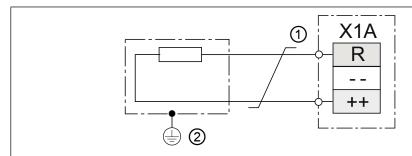

#### Legend

- Twist the connection cable. When extending the connection cables, the cables must be shielded additionally and connected on both sides.
- 2 Protective earthing is provided via the housing.

Figure 36: Wiring of an intrinsically safe braking resistor



Intrinsically safe braking resisitors behave in error case such as a safety fuse. They interrupt themselves without fire risk.

More information about intrinsically safe braking resistors



www.keb.de/fileadmin/media/Manuals/dr/ma\_dr\_safe-braking-resistors-20106652\_en.pdf

#### 5.3.4.3 Use of non-intrinsically safe braking resistors

#### **A WARNING**

#### Use of non-intrinsically safe braking resistors

#### Fire or smoke emission in case of overload or error!

- ▶ Only use braking resistors with temperature sensor.
- ► Evaluate temperature sensor.
- ▶ Trigger an error at the drive controller (e.g. external input).
- Switch off input voltage (e.g. input contactor).
- ► Connection examples for non-intrinsically safe braking resistors
- ► => Instructions for use "Installation braking resistors"



Instructions for use "Installation braking resistors" www.keb.de/fileadmin/media/Manuals/dr/ma\_dr\_braking-resistors-20116737\_en.pdf





#### 5.3.5 DC-bus connection

The DC link of several drive controllers are coupled in a DC-bus connection. This enables energy to be exchanged between the devices and increases the energy efficiency of the application.


As part of a DC-bus connection, this drive controller can either be supplied via the DC terminals => "5.3.3 DC mains connection" or supply other drive controllers via the DC terminals => "5.3.2 AC mains connection".



KEB has not tested the large number of possible DC connections against the EMC product standard DIN EN IEC 61800-3. CE conformity of the DC-bus connection is the responsibility of the user.

## The following additional safety instructions must be observed when using this drive controller in a DC-bus connection:

- This drive controller may only be operated together with other F6 and S6 drive controllers of the 400V class in a DC-bus connection.
- This drive controller must be installed in an enclosure.
- This drive controller must be protected with fuses at the DC terminals => "3.3.6.2 Fuse protection of the 400 V units ati DC-supply".
- If one fuse in the DC-bus connection blows as a result of a short circuit, all fuses in the DC-bus connection should be replaced due to the risk of prior damage.
- The parameterisation of the input phase failure detection must be adapted => F6 Programming manual.

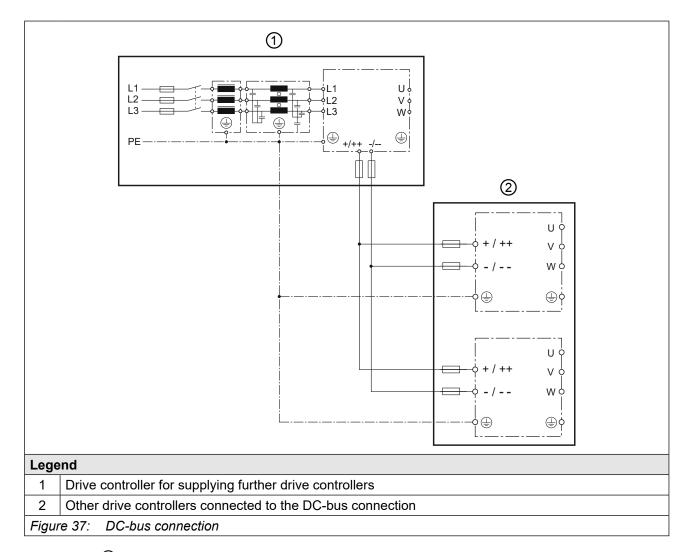

# 1 BWhen using this drive controller to supply other drive controllers via the DC terminals, the following must also be observed:

- The max. pre-charging current must not be exceeded => "Table 38: DC link / braking transistor function of the 400 V devices".
- Each drive converter in the DC bus must have an internal pre-charging circuit.
- Overloading of the rectifier must be prevented by the user => "3.3.4 Overview of rectifier data for 400 V devices".



## 5.4 Accessories

#### 5.4.1 Filters and chokes

Voltage class	Drive controller size	HF filter	Mains choke 50 Hz / 4% Uk		
	10	14E6T60-3000	10Z1B03-1000		
2201/	12	14E6T60-3000	12Z1B03-1000		
230 V	13	16E6T60-3000	13Z1B03-1000		
	14	16E6T60-3000	14Z1B03-1000		
Table 43: Filters and chokes for 230V devices					

Voltage class	Drive controller size	HF filter	Mains choke 50 Hz / 4% Uk		
	12	12E6T60-3000	12Z1B04-1000		
	13	14E6T60-3000	13Z1B04-1000		
400 V	14	14E6T60-3000	14Z1B04-1000		
	15	16E6T60-3000	15Z1B04-1000		
	16	16E6T60-3000	16Z1B04-1000		
Table 44: Filters and chokes for 400 V devices					



The specified filters and chokes are designed for rated operation.

## 5.4.2 Mounting kit shield connection brackets

Name	Material number
Mounting kit shield connection bracket control unit	00F6V80-2000
Mounting kit shield connection bracket power unit for built-in version	00F6V80-2001
Mounting kit shield connection bracket power unit for push-through version IP20-ready / IP54-ready	00F6V80-2002
Table 45: Mounting kit shield connection brackets	

## 5.4.3 Seal for IP54-ready devices

Name	Material number
Seal IP54	20F6T45-0001
Seal IP54 convection cooler	09F4T45-A087
Table 46: Seal for IP54-ready devices	

91

#### **ACCESSORIES**

#### 5.4.4 Side-mounted braking resistors



Technical data and design about intrinsically safe braking resistors => https://www.keb.de/fileadmin/media/Manuals/dr/ma\_dr\_safe-braking-resistors-20106652\_en.pdf





Technical data and design about non-intrinsically safe braking resistors => https://www.keb.de/fileadmin/media/Manuals/dr/ma\_dr\_braking-resistors-20116737\_en.pdf





## 6 Certification

## 6.1 CE-Marking

The drive controllers marked with a CE logo comply with the requirements of the Machine Directive as well as the EMC and Rohs Directives and energy efficiency regulations.



For further information regarding the CE declarations of conformity => "6.3 Further informations and documentation".

#### 6.2 UL certification



Acceptance according to UL is marked at KEB drive controllers with the adjacent logo on the nameplate.

To be conform according to UL for use on the North American and Canadian Market the following additionally instructions must be observed (original text of the UL-File):

- Only for use in WYE 480V/277V supply sources.
- Control Board Rating of relays (30Vdc/1A)
- Brake resistor ratings and duty cycle: see RATINGS
- Maximum Surrounding Air Temperature 45°C
- · Use in a Pollution Degree 2 environment
- Power Terminals X1A
   Use 75°C Copper Conductors Only

CSA:

Power Terminals X1A: Maximum wire sizes and tightening torques:

MKDS 10HV/9-ZB-10.16 (Phoenix) max AWG 6,

15 lb-inch (1.7 Nm)

LU10.16 (Weidmueller):

max. AWG 8 (maximum stripping length 10 mm),

20.5 lb-inch (2.3 Nm)

- During the UL evaluation, only Risk of Electrical Shock and Risk of Fire aspects were investigated. Functional Safety aspects were not evaluated!
- WARNING The opening of the branch circuit protective device may be an
  indication that a fault current has been interrupted. To reduce the risk of fire or
  electrical shock, current-carrying parts and other components of the controller
  should be examined and replaced if damaged. If burnout of the current element of
  an overload relay occurs, the complete overload relay must be replaced.
- AVERTISSEMENT

LE DÉCLENCHEMENT DU DISPOSITIF DE PROTECTION DU CIRCUIT DE DÉRIVATION PEUT ÊTRE DÛ À UNE COUPURE QUI RÉSULTE D'UN COURANT DE DÉFAUT. POUR LIMITER LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, EXAMINER LES PIÈCES PORTEUSES DE COURANT ET LES AUTRES ÉLÉMENTS DU CONTRÔLEUR ET LES REMPLACER S'ILS SONT ENDOMMAGÉS. EN CAS DE GRILLAGE DE L'ÉLÉMENT TRAVERSÉ PAR LE COURANT DANS UN RELAIS DE SURCHARGE, LE RELAIS TOUT ENTIER DOIT ÊTRE REMPLACÉ



 Suitable For Use On A Circuit Capable Of Delivering Not More Than 5000 rms Symmetrical Amperes, 480 Volts Maximum when protected by J Class Fuses or by a Motor Controller, as specified in the instruction manual.
 Suitable For Use On A Circuit Capable Of Delivering Not More Than 30000 rms Symmetrical Amperes, 480 Volts Maximum when protected by Semiconductor Fuses or by a Motor Controller, as specified in the manual.

#### When DC supplied:

Suitable For Use On A Circuit Capable Of Delivering Not More Than 30000 rms Symmetrical Amperes, 680 Volts DC Maximum when protected by Semiconductor Fuses as specified in the manual .

## 6.3 Further informations and documentation

You find supplementary manuals and instructions for the download under www.keb.de/de/service/downloads

#### General instructions

- EMC and safety instructions
- Manuals for additional control boards, safety modules, fieldbus modules, etc.

Instruction and information for construction and development

- · Input fuses in accordance with UL
- Programming manual for control and power unit
- Motor configurator to select the appropriate drive converter and to create downloads for parameterizing the drive converter

#### Approvals and approbations

- Declaration of conformity CE
- TÜV certificate
- · FS certification

#### Others

- COMBIVIS, the software for comfortable parameterization of drive converters via PC (available per download)
- EPLAN drawings



# 7 Revision history

Version	Date	Description
00	2015-10	Prototype
01	2016-04	Pre-series
02	2016-08	Pre-series (without UL certification)
03	2016-11	UL certified terminal X1A included
04	2017-02	Series version, 4kHz devices included (device size 16), new CI, UL certification included
05	2018-05	Corrections to the technical data figures of the overload characteristics adapted
06	2019-11	Switching performance of fans added, data of overload characteristics adapted.
07	2020-01	Inclusion of the 230V devices
08	2021-10	Fuse values and frequency-dependent maximum currents adapted.
09	2022-05	Fuses of the 400V units extended, type code updated, chapter sequence for installation adapted.
10	2023-02	Inclusion of the convection cooler
11	2024-04	Type code updated, product description updated, editorial changes.
12	2025-04	Description of 400 V DC-ready devices added, glossary and standards updated. Editorial changes.

## **NOTES**





MORE KEB PARTNERS WORLDWIDE:

www.keb-automation.com/contact





Automation with Drive

www.keb-automation.com

KEB Automation KG Suedstrasse 38 D-32683 Barntrup Tel. +49 5263 401-0 E-Mail: info@keb.de