


**KEB**

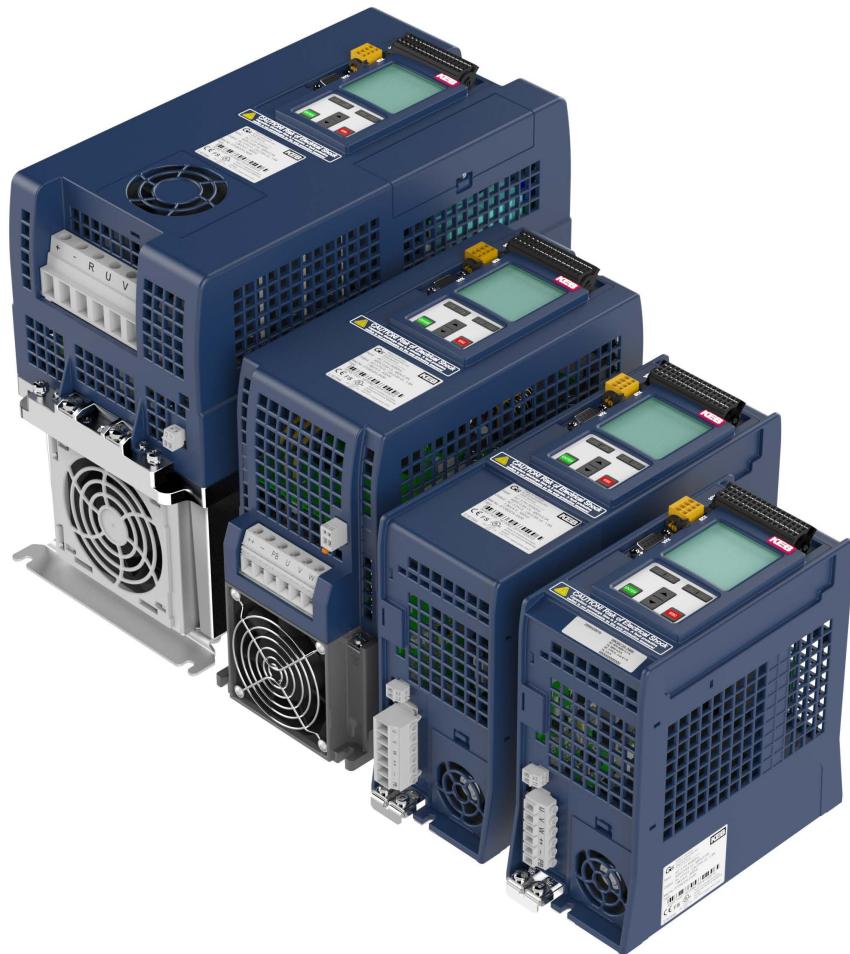

# COMBIVERT G6

PROGRAMMING MANUAL | CONTROL G6 IO-LINK

Translation of the original manual  
Document 20100117 EN 03



# Preface

The hardware and software described in this document are products of KEB. The information contained in this document is valid at the time of publishing. KEB reserves the right to update this document in response to misprints, mistakes or technical changes.

## Signal words and symbols

Certain procedures within this document can cause safety hazards during the installation or operation of the device. Refer to the safety warnings in this document when performing these procedures. Safety signs are also located on the device where applicable. A safety warning is marked by one of the following warning signs:

### DANGER

Dangerous situation, which will cause death or serious injury if this safety warning is ignored.

### WARNING

Dangerous situation, which may cause death or serious injury if this safety warning is ignored.

### CAUTION

Dangerous situation, which may cause minor injury if this safety warning is ignored.

### NOTICE

Situation, which can cause damage to property if this safety warning is ignored.

### RESTRICTION

Used when the following statements depend on certain conditions or are only valid for certain ranges of values.



Used for informational messages or recommended procedures.

## More symbols

- This arrow starts an action step.
- / - Enumerations are marked with dots or indents.
- => Cross reference to another chapter or another page.



Note to further documentation.  
<https://www.keb-automation.com/search>



### Laws and guidelines

KEB Automation KG confirms with the EC declaration of conformity and the CE mark on the device nameplate that it complies with the essential safety requirements.

The EC declaration of conformity can be downloaded on demand via our website.

### Warranty and liability

The warranty and liability on design, material or workmanship for the acquired device is given in the general sales conditions.



Here you will find our general sales conditions.  
<https://www.keb-automation.com/terms-conditions>



Further agreements or specifications require a written confirmation.

### Support

Although multiple applications are referenced, not every case has been taking into account. If you require further information or if problems occur which are not referenced in the documentation, you can request the necessary information via the local KEB agency.

**The use of our units in the target products is outside of our control and therefore lies exclusively in the area of responsibility of the customer.**

The information contained in the technical documentation, as well as any user-specific advice in spoken and written and through tests, are made to best of our knowledge and information about the intended use. However, they are regarded as being only informal and changes are expressly reserved, in particular due to technical changes. This also applies to any violation of industrial property rights of a third-party. Selection of our units in view of their suitability for the intended use must be done generally by the user.

**Tests can only be done within the intended end use of the product (application) by the customer. They must be repeated, even if only parts of hardware, software or the unit adjustment are modified.**

### Copyright

The customer may use the instructions for use as well as further documents or parts from it for internal purposes. Copyrights are with KEB and remain valid in its entirety.

This KEB product or parts thereof may contain third-party software, including free and/or open source software. If applicable, the license terms of this software are contained in the instructions for use. The instructions for use are already available to you, can be downloaded free of charge from the KEB website or can be requested from the respective KEB contact person.

Other wordmarks or/and logos are trademarks (™) or registered trademarks (®) of their respective owners.

# Table of Contents

<b>Preface .....</b>	<b>3</b>
Signal words and symbols .....	3
More symbols .....	3
Laws and guidelines .....	4
Warranty and liability .....	4
Support .....	4
Copyright .....	4
<b>Table of Contents .....</b>	<b>5</b>
<b>List of Figures.....</b>	<b>7</b>
<b>List of Tables .....</b>	<b>7</b>
<b>1 Basic Safety Instructions.....</b>	<b>8</b>
1.1 Target group.....	8
1.2 Validity of this manual.....	8
1.3 Electrical connection .....	9
1.4 Start-up and operation.....	9
<b>2 Product Description .....</b>	<b>10</b>
2.1 Product features .....	10
2.2 Overview of functions .....	10
2.2.1 Overview of functions .....	10
<b>3 LC Display Operation .....</b>	<b>11</b>
3.1 Control elements .....	11
3.1.1 Description of control elements .....	11
3.1.1.1 Menu bar .....	11
3.1.1.2 Function keys and toolbar .....	12
3.2 Initial start-up.....	12
3.2.1 Switch on.....	12
3.2.2 Main menu.....	13
<b>4 Initial settings .....</b>	<b>14</b>
4.1 Change language.....	14
4.2 Startup mode .....	15
4.3 Set font size and font size 2 .....	15
4.4 Contrast settings .....	16
4.5 Setting the backlight of the display .....	17
4.6 Functional test of keyboard and display .....	17
<b>5 Operator Parameters .....</b>	<b>18</b>
5.1 Parameters for LC display setting .....	19

## TABLE OF CONTENTS

<b>6 IO-Link Interface .....</b>	<b>22</b>
6.1 Identification .....	22
6.2 IO-Link status and error message .....	24
6.3 Frame types .....	25
6.4 Parameterization data (SPDU).....	26
6.5 Process data .....	27
<b>7 Process Data Mapping .....</b>	<b>28</b>
7.1 Output process data (manager => client).....	28
7.2 Input process data (client => manager).....	31
<b>8 Description File (IODE) .....</b>	<b>34</b>
<b>9 Fieldbus Watchdog.....</b>	<b>35</b>
<b>10 Events .....</b>	<b>36</b>
<b>11 Operator Parameter .....</b>	<b>38</b>
<b>12 Revision History .....</b>	<b>46</b>

## List of Figures

Figure 1:	Control elements.....	11
Figure 2:	Switch-on display .....	12
Figure 3:	Main menu .....	13
Figure 4:	Initial settings .....	14
Figure 5:	Change language.....	14
Figure 6:	Set start mode.....	15
Figure 7:	Set font size .....	15
Figure 8:	Set font size 2 .....	16
Figure 9:	Contrast settings.....	16
Figure 10:	Backlight settings .....	17
Figure 11:	Functional test of keyboard and display.....	17
Figure 12:	Operator parameters.....	18
Figure 13:	Select control board parameter group .....	18
Figure 14:	Interleaved mode .....	25

## List of Tables

Table 1:	assignment of the function keys.....	12
Table 2:	Identification.....	22
Table 3:	Events .....	36

# 1 Basic Safety Instructions

The products are designed and constructed in accordance with state-of-the-art technology and the recognized safety rules and regulations. However, the use of such devices may cause functional hazards for life and limb of the user or third parties, or damages to the system and other material property.

The following safety instructions have been created by the manufacturer for the area of electric drive technology. They can be supplemented by local, country- or application-specific safety instructions. This list is not exhaustive. Violation of the safety instructions by the customer, user or other third party leads to the loss of all resulting claims against the manufacturer.

## NOTICE



### Hazards and risks through ignorance!

- ▶ Read the instructions for use!
- ▶ Observe the safety and warning instructions!
- ▶ If anything is unclear, please contact KEB Automation KG!

## 1.1 Target group

This instruction manual is determined exclusively for electrical personnel. Electrical personnel for the purpose of this instruction manual must have the following qualifications:

- Knowledge and understanding of the safety instructions.
- Skills for installation and assembly.
- Start-up and operation of the product.
- Understanding of the function in the used machine.
- Detection of hazards and risks of the electrical drive technology.
- Knowledge of *DIN IEC 60364-5-54*.
- Knowledge of national safety regulations.

## 1.2 Validity of this manual

This manual describes the control part IO-Link of the COMBIVERT G6.

The manual

- contains only supplementary safety instructions.
- is only valid in connection with the power unit manual of COMBIVERT G6.

## 1.3 Electrical connection

### DANGER



#### Voltage at the terminals and in the device!

##### Danger to life due to electric shock !

- ▶ For any work on the unit switch off the supply voltage and secure it against switching on.
- ▶ Wait until the drive has stopped in order, that perhaps regenerative energy can be generated.
- ▶ Wait until the DC-Link capacitors are discharged (5 minutes). Verify by measuring the DC voltage at the terminals.
- ▶ Never bridge upstream protective devices (also not for test purposes).

For a trouble-free and safe operation, please pay attention to the following instructions:

- The electrical installation shall be carried out in accordance with the relevant requirements.
- Cable cross-sections and fuses must be dimensioned by the user accordly to the specified minimum / maximum values for the operation.
- Within systems or machines the person installing electrical wiring must ensure that on existing or new wired safe ELV circuits the EN requirement for safe insulation is still met!
- For drive converters that are not isolated from the supply circuit (in accordance with EN 61800-5-1) all control lines must be included in other protective measures (e.g. double insulation or shielded, earthed and insulated).
- When using components without isolated inputs/outputs, it is necessary that equipotential bonding exists between the components to be connected (e.g. by the equipotential line). Disregard can cause destruction of the components by equalizing currents.

## 1.4 Start-up and operation

The start-up (i.e. for the specified application) is forbidden until it is determined that the installation complies with the machine directive; account is to be taken of EN 60204-1.

### WARNING



#### Software protection and programming!

##### Hazards caused by unintentional behavior of the drive!

- ▶ Check especially during initial start-up or replacement of the drive controller if parameterization is compatible to application.
- ▶ Securing a unit solely with software-supported functions is not sufficient. It is imperative to install external protective measures (e.g. limit switch) that are independent of the drive controller.
- ▶ Secure motors against automatic restart.

## **2 Product Description**

### **2.1 Product features**

These instructions for use describe the power units of the following devices:

Device series: COMBIVERT G6  
Hardware: IO-Link

### **2.2 Overview of functions**

#### **2.2.1 Overview of functions**

The control provides the following functions:

- Hardware-installed supply of digital and analog inputs and outputs.
- Diagnostic interface
- Ethernet based fieldbus interface (EtherCAT / Varan)
- CAN fieldbus interface
- KTY interface
- Brake control
- STO functionality
- Status LEDs




*IO-LINK® is a registered trademark. The rights to the word/figurative mark "IO-Link" have been transferred to the PNO (PROFIBUS User Organisation e.V.) and must be used unchanged.*

## 3 LC Display Operation

For optional assembly of the LC display.

### 3.1 Control elements

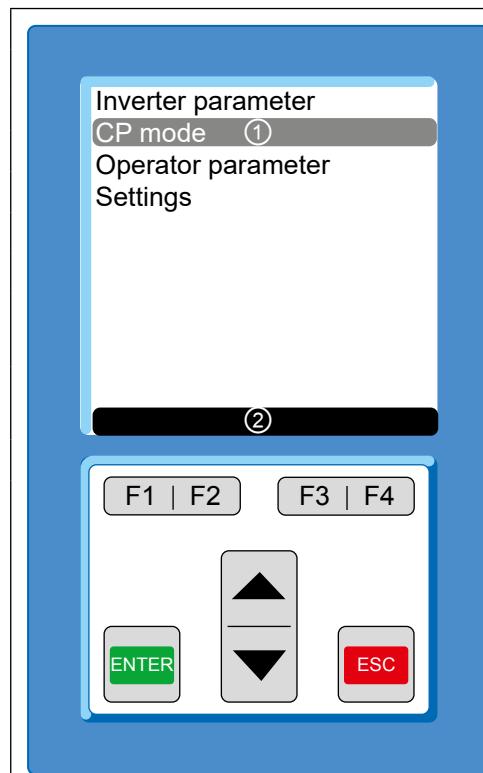

Name	Function
①	Menu bar
②	Function bar
F1	Function key 1
F2	Function key 2
F3	Function key 3
F4	Function key 4
▲	Menu bar up or increase parameter value
▼	Menu bar down or decrease parameter value
ENTER	select / confirm
ESC	return to the superordinate menu

Figure 1: Control elements

#### 3.1.1 Description of control elements

##### 3.1.1.1 Menu bar

The menu bar shows the current selection in the menu. It can be moved with the ▲ and ▼ keys. Press Enter to change to the subordinate operating level, ESC to return to the next higher operating level.

## LC DISPLAY OPERATION

### 3.1.1.2 Function keys and toolbar

The function keys F1...F4 are variable assigned depending on the menu item. The toolbar displays current assignment of the function keys F1...F4.


The keys can have the following assignment:

Display	Function
DecHex	Display changes between decimal and hexadecimal display
Menu	jumps to the main menu
Up	jumps to the top of the current page, repeated pressing scrolls back one page
Down	jumps to the end of the current page, repeated pressing scrolls forward to the next page

Table 1: Assignment of the function keys

## 3.2 Initial start-up


### 3.2.1 Switch on

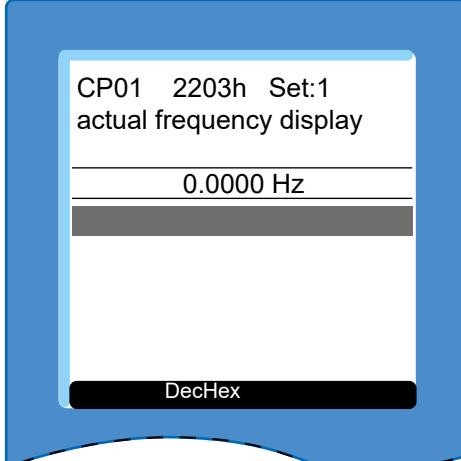	<p>At the first switch on with factory setting the operator indicates the actual frequency in the customer parameter menu (CP mode). To make the basic settings change to the main menu as follows:</p> <p>&lt;ESC&gt; → changes to the parameter selection &lt;F1&gt; → jumps to the main menu</p>
<p>Figure 2: Switch-on display</p>	



The startup menu can be defined under “Start mode”.

### 3.2.2 Main menu

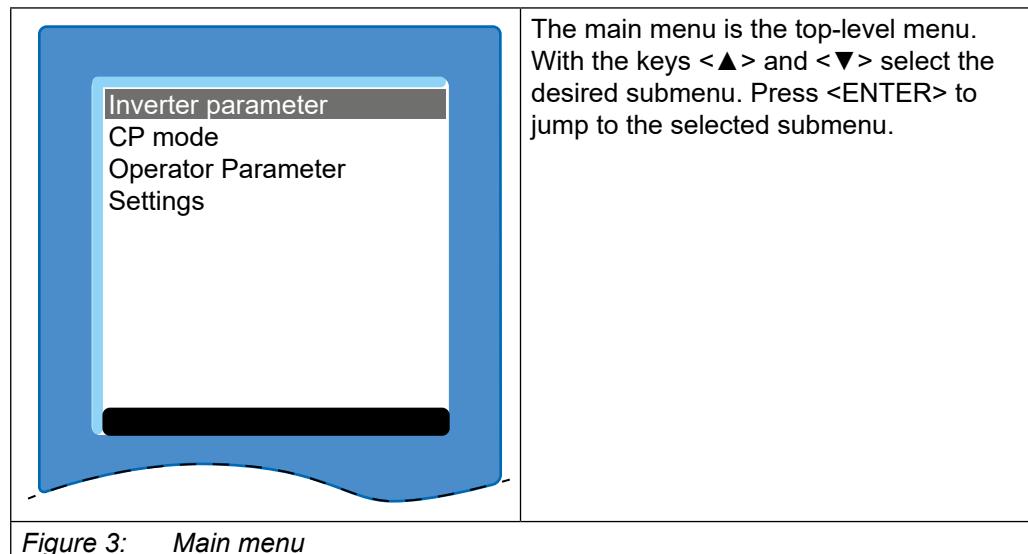

## 4 Initial settings

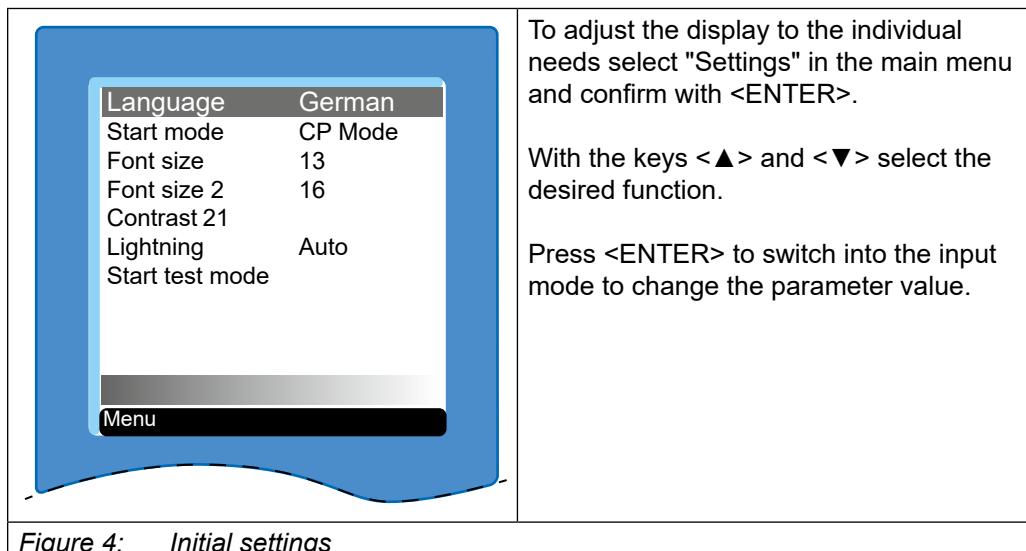


Figure 4: Initial settings

### 4.1 Change language

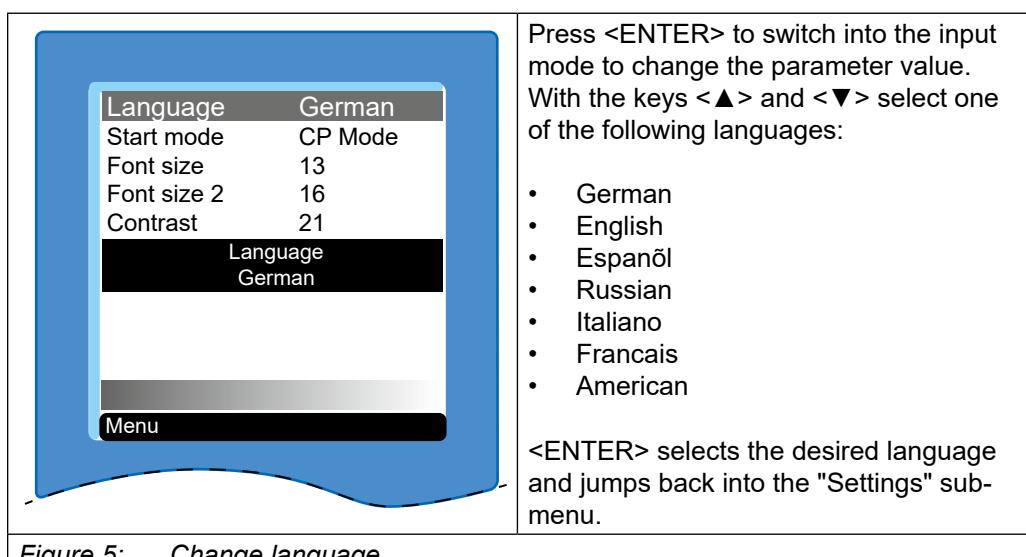


Figure 5: Change language



The parameters are displayed in English if the selected language is not available.

## 4.2 Startup mode

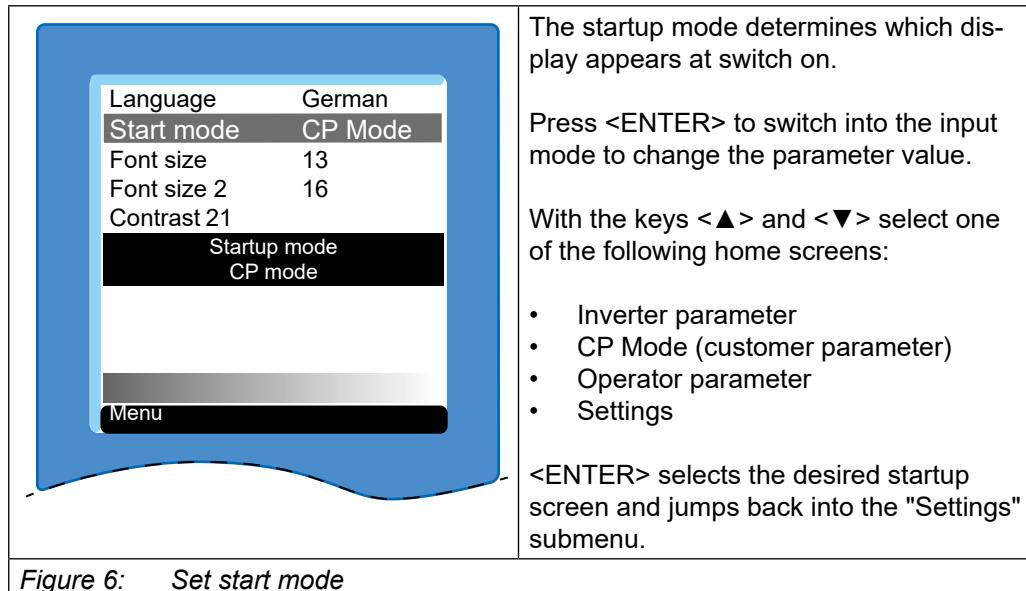


Figure 6: Set start mode

## 4.3 Set font size and font size 2

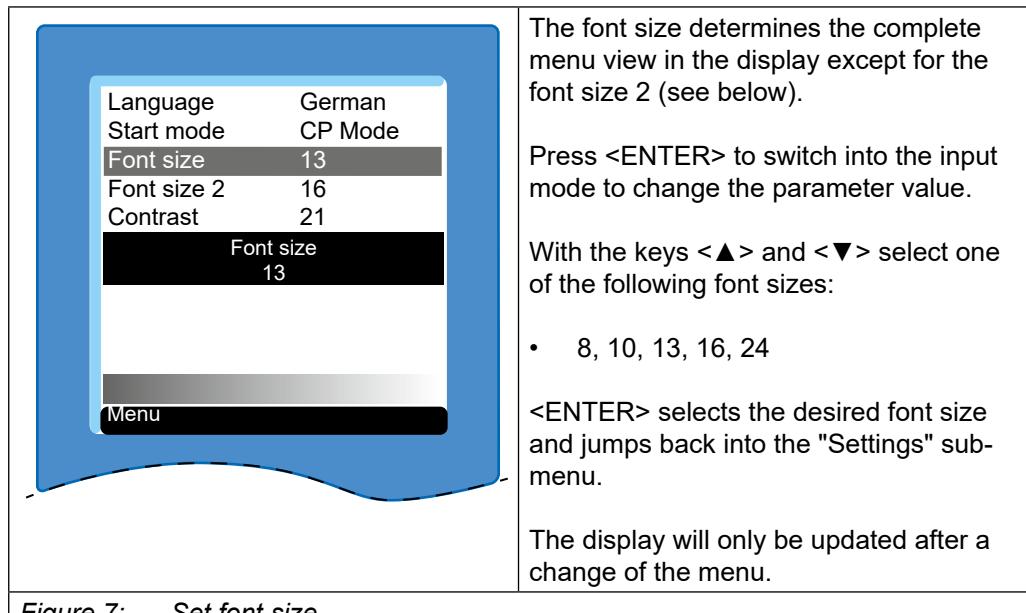


Figure 7: Set font size

## INITIAL SETTINGS

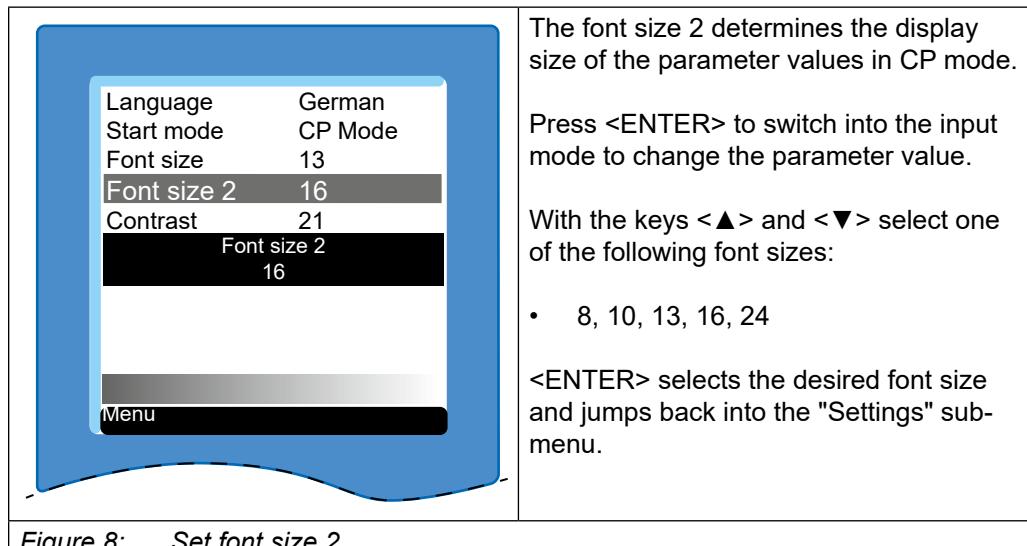


Figure 8: Set font size 2

### 4.4 Contrast settings

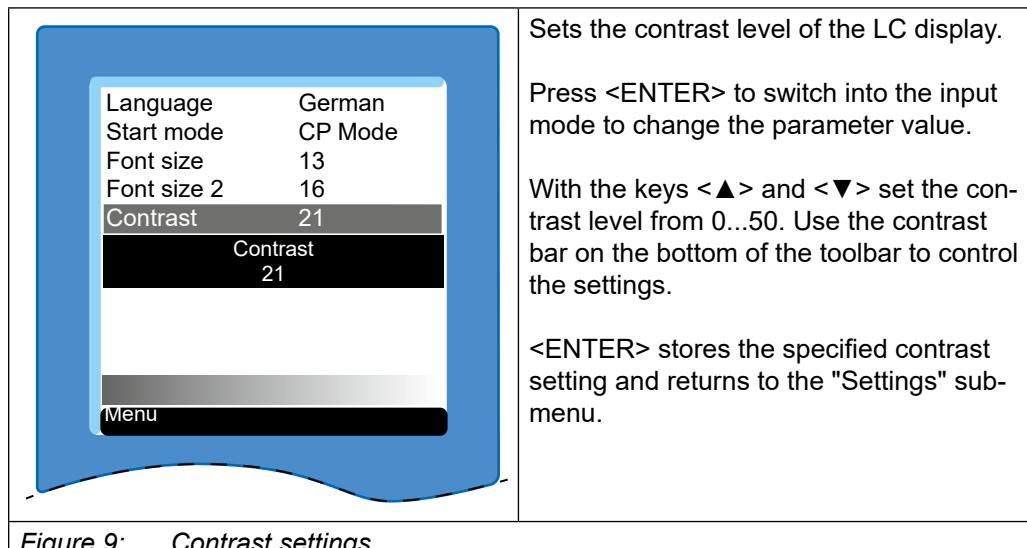


Figure 9: Contrast settings

## 4.5 Setting the backlight of the display

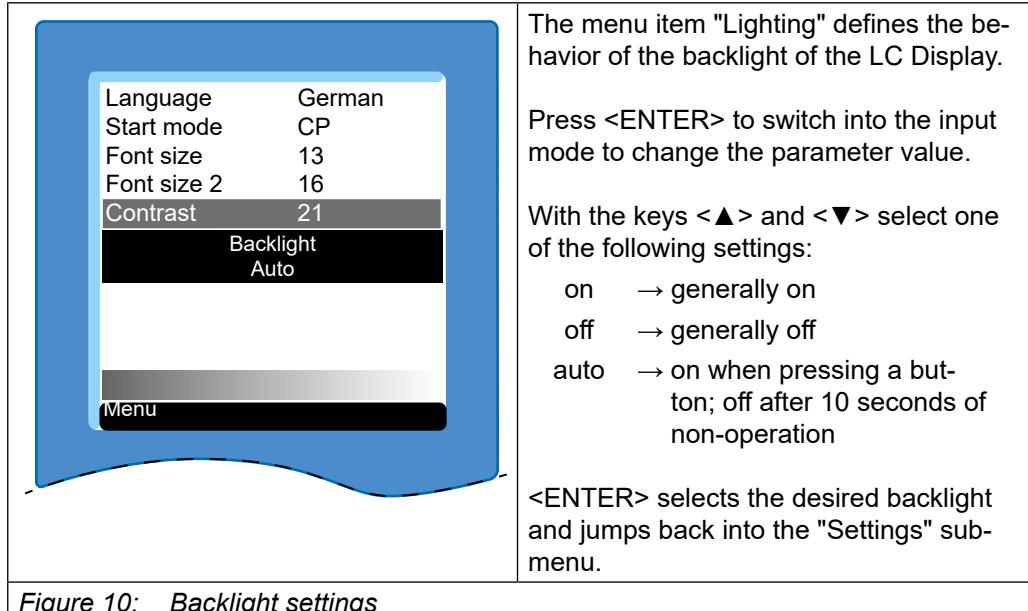


Figure 10: Backlight settings

## 4.6 Functional test of keyboard and display

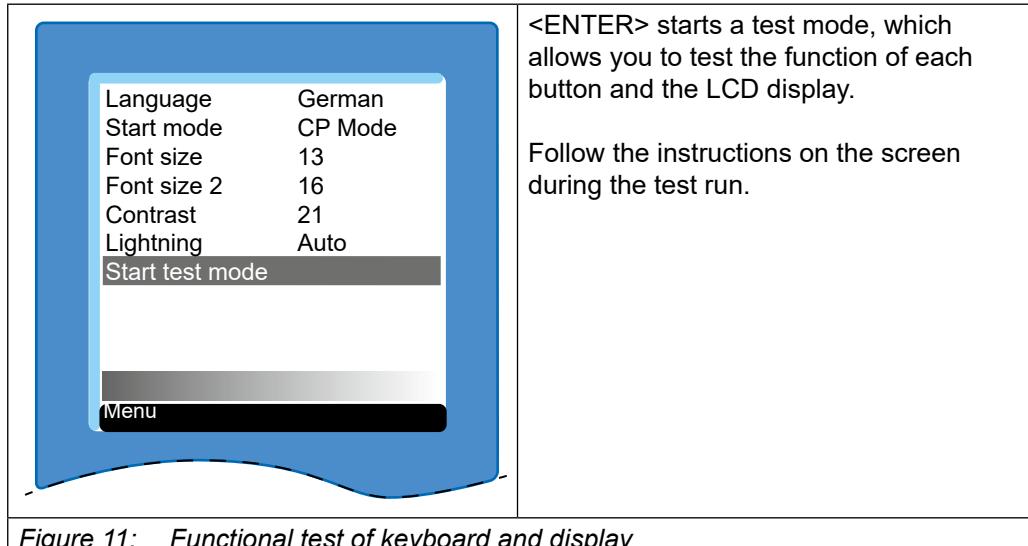


Figure 11: Functional test of keyboard and display

## 5 Operator Parameters

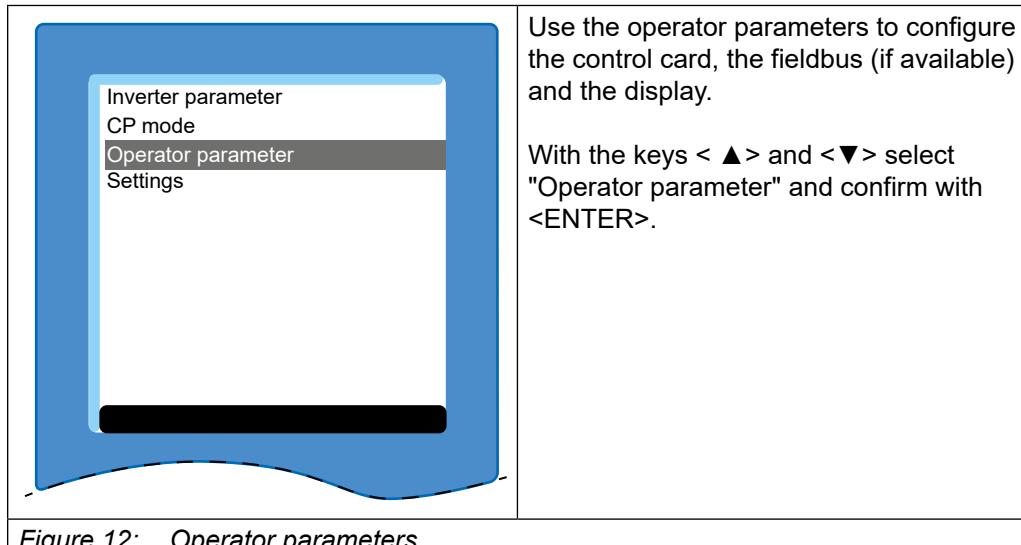


Figure 12: Operator parameters

Use the operator parameters to configure the control card, the fieldbus (if available) and the display.

With the keys <▲> and <▼> select "Operator parameter" and confirm with <ENTER>.

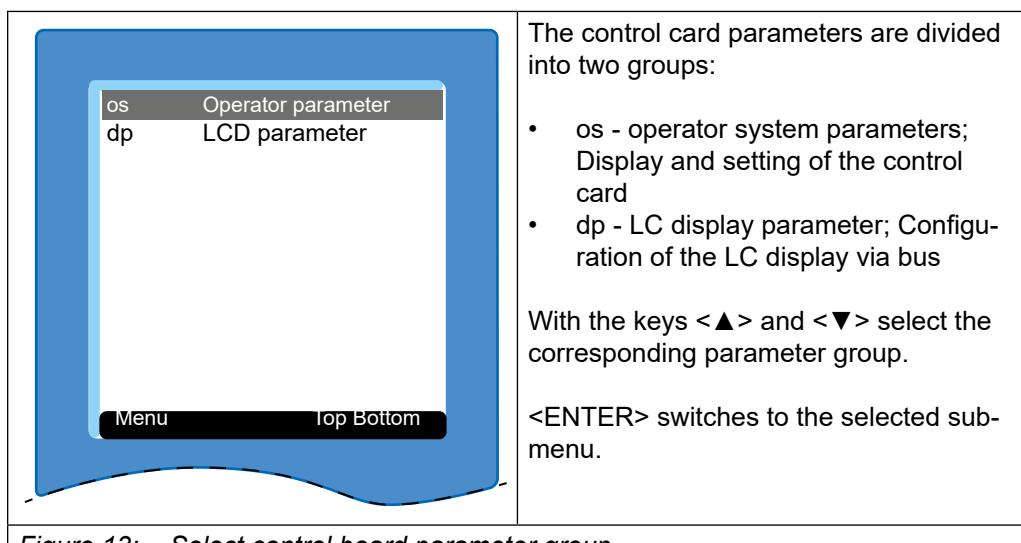


Figure 13: Select control board parameter group

The control card parameters are divided into two groups:

- os - operator system parameters; Display and setting of the control card
- dp - LC display parameter; Configuration of the LC display via bus

With the keys <▲> and <▼> select the corresponding parameter group.

<ENTER> switches to the selected submenu.

## 5.1 Parameters for LC display setting

The settings of the LC parameters are completely accepted from the LC display only after restarting the device.

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
dp00	Language	0x2780
<b>Meaning</b>	A language is selected for the menu and the parameters. The parameters are displayed in English if the selected language is not available.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0: English 1: German 2: American 3: France 4: Italian 5: Russian 6: Spanish  Standard value: 0	
<b>Note</b>	–	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
dp01	Startup mode	0x2781
<b>Meaning</b>	The startup mode determines the menu item after initialization of the control.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0: Inverter parameters 1: CP mode 2: Operator parameters 3: Menu  Standard value: 1	
<b>Note</b>	–	

## OPERATOR PARAMETERS

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
dp02	Font size	0x2782
<b>Meaning</b>	It can be selected between font sizes 8.10.13.16 and 24 in the display. Exception: see parameter „font size 2“	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	8: 8dpi 10: 10dpi 13: 13dpi 16: 16dpi 24: 24dpi  Standard value: 13	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
dp03	Font size 2	0x2783
<b>Meaning</b>	The font size for the display of parameter values is specified in the CP mode.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	8: 8dpi 10: 10dpi 13: 13dpi 16: 16dpi 24: 24dpi  Standard value: 16	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
dp04	Contrast	0x2784
<b>Meaning</b>	The contrast settings of the LC display can be changed to optimize readability.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...50 Standard value: 21	
<b>Note</b>	–	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>									
dp05	Backlight	0x2785									
<b>Meaning</b>	The contrast settings of the LC display can be changed to optimize readability.										
<b>Type</b>	Variable										
<b>Data length</b>	8 bit										
<b>Access</b>	read / write										
<b>Coding</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">0</td> <td style="padding: 2px;">off</td> <td style="padding: 2px;">Lighting of the LC display generally off.</td> </tr> <tr> <td style="padding: 2px;">1</td> <td style="padding: 2px;">on</td> <td style="padding: 2px;">Lighting of the LC display generally on.</td> </tr> <tr> <td style="padding: 2px;">2</td> <td style="padding: 2px;">auto</td> <td style="padding: 2px;">If the backlight is adjusted to "auto", it is switched on during pressing a key and switched off again after 10 seconds if no key is pressed.</td> </tr> </table> Standard value: 2		0	off	Lighting of the LC display generally off.	1	on	Lighting of the LC display generally on.	2	auto	If the backlight is adjusted to "auto", it is switched on during pressing a key and switched off again after 10 seconds if no key is pressed.
0	off	Lighting of the LC display generally off.									
1	on	Lighting of the LC display generally on.									
2	auto	If the backlight is adjusted to "auto", it is switched on during pressing a key and switched off again after 10 seconds if no key is pressed.									
<b>Note</b>	–										

## 6 IO-Link Interface

An IO-Link slave (device) interface is implemented according to the IO-Link specification V1.0. Cyclic process data (PDO) and acyclic parameter data (SPDU - service protocol data unit) are supported for accessing the parameters of the device.

The device does not support the standard IO mode (SIO mode). After the wake-up is immediately switched to the communication mode.

### 6.1 Identification

About the direct parameter data channel with Frame Type 0 the most important information for commissioning the communication can be read at startup:

<b>Address</b>	<b>Parameter Name</b>	<b>Access</b>	<b>Implementation/ reference</b>	<b>Description</b>
Direct Parameter page 1				
0x00	Master-Command	W	Mandatory/ see B.1.2	Master command to switch to operating states (see NOTE 1)
0x01	MasterCycle-Time	R/W	Mandatory/ see B.1.3	Actual cycle duration used by the Master to address the Device. Can be used as a parameter to monitor Process Data transfer.
0x02	MinCycleTime	R	Mandatory/ see B.1.4	Minimum cycle duration supported by a Device. This is a performance feature of the Device and depends on its technology and implementation.
0x03	M-sequence Capability	R	Mandatory/ see B.1.5	Information about implemented options related to M-sequences and physical configuration
0x04	RevisionID	R/W	Mandatory/ see B.1.6	ID of the used protocol version for implementation (shall be set to 0x11)
0x05	ProcessDataIn	R	Mandatory/ see B.1.7	Number and structure of input data (Process Data from Device to Master)
0x06	ProcessData-Out	R	Mandatory/ see B.1.8	Number and structure of output data (Process Data from Master to Device)
0x07	VendorID 1 (MSB)	R	Mandatory/ see B.1.9	Unique vendor identification (see NOTE 2)
0x08	VendorID 2 (LSB)			
0x09	DeviceID 1 (Octet 2, MSB)	R/W	Mandatory/ see B.1.10	Unique Device identification allocated by a vendor
0x0A	DeviceID 2 (Octet 1)			
0x0B	DeviceID 3 (Octet 0, LSB)			

Table 2: Identification



Accessed via addresses 0000h (16 byte) and 0001h (16 byte) via SPDU possible.

Individual values are displayed as COMBIVIS parameters:

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb03	Device identification	0x2183
<b>Meaning</b>	Device identification number	
<b>Type</b>	Variable	
<b>Data length</b>	32 bit	
<b>Access</b>	read	
<b>Coding</b>	0...FFFFFh Standard value: 0	
<b>Note</b>	Any combination of G6 power unit config ID and control card config ID has its own devicelID (reference table)	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb05	IO-Link baud rate	0x2185
<b>Meaning</b>	Baud rate IO-Link bus	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	1: 4.8 kBd (COM1) 2: 38.4 kBd (COM2) 3: 230.4 kBd (COM3)  Standard value: 2: 38.4 kBd	
<b>Note</b>	Baud rate not changeable.	

An addressing of the device is not necessary, because IO-Link connections are always 1:1 connections with the master. A master can have multiple output ports.

## 6.2 IO-Link status and error message

The status of the IO-Link state machine is shown in the following parameters.

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>																																	
fb01	DL-Status + Master Command	0x2181																																	
<b>Meaning</b>	Display for DL-status + master command																																		
<b>Type</b>	Variable																																		
<b>Data length</b>	8 bit																																		
<b>Access</b>	read																																		
<b>Coding</b>	<table border="1"> <tr> <td>Bitmask</td> <td>0xFF00</td> <td>Bitmask</td> <td>0X00FF</td> </tr> <tr> <td>Name</td> <td>DL status</td> <td>Name</td> <td>Master command</td> </tr> <tr> <td>Sub-definitions</td> <td>[5]</td> <td>Sub-definitions</td> <td>[5]</td> </tr> <tr> <td>SIO</td> <td>0</td> <td>Fallback</td> <td>90</td> </tr> <tr> <td>CommStart</td> <td>256</td> <td>undefined</td> <td>0</td> </tr> <tr> <td>CommFinished</td> <td>512</td> <td>DeviceStartup</td> <td>151</td> </tr> <tr> <td>Startup</td> <td>768</td> <td>PD output operate</td> <td>152</td> </tr> <tr> <td>Operate</td> <td>1024</td> <td>DeviceOperate</td> <td>153</td> </tr> </table>			Bitmask	0xFF00	Bitmask	0X00FF	Name	DL status	Name	Master command	Sub-definitions	[5]	Sub-definitions	[5]	SIO	0	Fallback	90	CommStart	256	undefined	0	CommFinished	512	DeviceStartup	151	Startup	768	PD output operate	152	Operate	1024	DeviceOperate	153
Bitmask	0xFF00	Bitmask	0X00FF																																
Name	DL status	Name	Master command																																
Sub-definitions	[5]	Sub-definitions	[5]																																
SIO	0	Fallback	90																																
CommStart	256	undefined	0																																
CommFinished	512	DeviceStartup	151																																
Startup	768	PD output operate	152																																
Operate	1024	DeviceOperate	153																																
	Standard value: 0																																		
<b>Note</b>	–																																		

The following parameters are to assess the quality of bus communication:


<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>			
fb07	Transmitter overcurrent	0x2187			
<b>Meaning</b>	Display of overcurrent events at the transmitter				
<b>Type</b>	Variable				
<b>Data length</b>	8 bit				
<b>Access</b>	read / write				
<b>Coding</b>	0: no overcurrent 1: Overcurrent occurred				
	Standard value: 0				
<b>Note</b>	–				

### 6.3 Frame types

The IO-Link specification defines different telegram types, which differ by the size of the process input and process output data.

For the buildup of the communication, the master must determine the communication parameters of the device. One of the relevant informations is the length of the process data. Based on this information, the IO-Link master decides which type of telegram for cyclic data exchange is used. In the phase of the communication setup the master uses the telegram type 0.

For the cyclic communication the G6 supports the frame type 1 in the "interleaved mode":

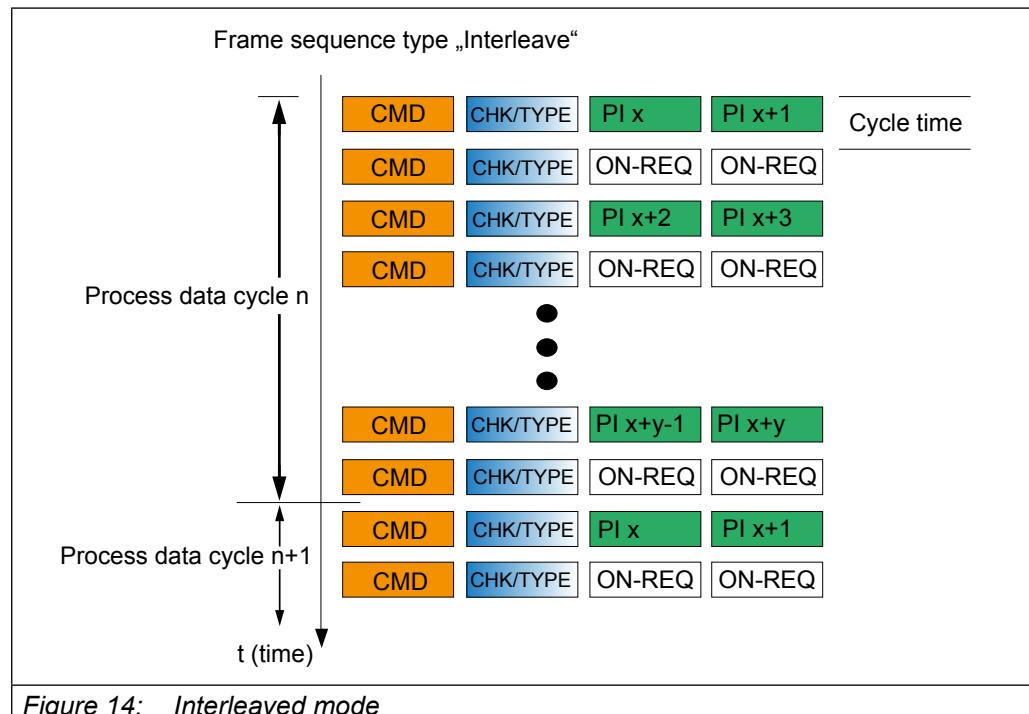

By that it also sent on-request data between the process data. If they are not needed, dummy commands are transmitted. Thus, a fixed process data cycle time is realized. At first the PD-Out data are transmitted, after that the PD-In data.

## 6.4 Parameterization data (SPDU)

The device parameters can be addressed via a 16-bit index plus 8-bit sub-index. About the subindex with the values 1...n each subindices or sets of parameters can be addressed.

About the subindex 0, all subindices 1...n addressed simultaneously. If at write access a value can not be written (e.g. because it is outside the valid value range), all others are still written. The first error message from several not possible write accesses is sent to the master.

Generally written will be only the corresponding data type byte (incl. value range checks), excess bytes are ignored. Exception when writing to subindex 0. In this case the number of bytes to be written are checked. When reading the correct data length is returned.

## 6.5 Process data

There are each 4 bytes of process data available per direction. The number can not be changed.

For each process data object a maximum of 4 objects can be mapped.

The data direction is described from the view of the process control (PLC, IPC, ...).

Process output data (PD Out) are data from the control to G6.

Process input data (PD In) are data from G6 to the control.

To activate the process data objects in the device, it is necessary to set the mapping of the process data by using the parameters defined in chapter 3.

The writing of the process output data (2 \* 2 byte) and reading of process input data (2 \* 2 byte) results in a cycle time of 18.4 ms.

If via the IO-Link master command (value 0x99) the output process data is set invalidated, the processing of the output process data in the power unit is stopped (PD Out Count is set to 0).

At switched off power unit, the last received PD in process data are sent. In addition, an event is generated, which marks the invalidity of the process data.

The number of the performed process data accesses is illustrated in the following parameters:

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb02	Received PD Out	0x2182
<b>Meaning</b>	Number of received process output data (PD out)	
<b>Type</b>	Variable	
<b>Data length</b>	16 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...65535 Standard value: 0	
<b>Note</b>	–	

## 7 Process Data Mapping

The setting of the process data assignment is possible via the KEB-specific parameters (fb10-fb19). After successful adjustment of the process data mapping the process data can be processed by the G6 device.

After loading of the default values, a standard process data mapping is already set. The number of each mapped parameters (fb14, fb19) has to be written once (default value 2) to activate the process data. Then the numbers are stored non-volatile.

In addition, the IO-link master must release the output process data via the master command (value 0x98).

### 7.1 Output process data (manager => client)

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb10	PD out index	0x218A
<b>Type</b>	Array	
<b>Subindex 0</b>		
<b>Meaning</b>	Number of subindices of this object	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	4 Standard value: 4	
<b>Note</b>	–	
<b>Subindex 1...4</b>		
<b>Meaning</b>	Default up to 4 parameter addresses to be used as process data. Only parameters may be used that are allowed as process data.	
<b>Data length</b>	16 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0000h...7FFFh Standard value: 0000h	
<b>Note</b>	–	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb11	PD out subindex	0x218B
<b>Type</b>	Array	
<b>Subindex 0</b>		
<b>Meaning</b>	Number of subindices of this object	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	4 Standard value: 4	
<b>Note</b>	–	
<b>Subindex 1...4</b>		
<b>Meaning</b>	The value of the subindex determines the parameter set of the selected PD parameter.	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	1...8 for subindex 1...8 (or rather set 0..7) Standard value: 0	
<b>Note</b>	–	
<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb12	PD out offset	0x218C
<b>Type</b>	Array	
<b>Subindex 0</b>		
<b>Meaning</b>	Number of subindices of this object	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	4 Standard value: 4	
<b>Note</b>	–	
<b>Subindex 1...4</b>		
<b>Meaning</b>	Specifies the offset of occupancy in the process data field. Position of the value of the mapped parameter.	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...3 Standard value: 0	
<b>Note</b>	–	

## PROCESS DATA MAPPING

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb13	PD out type	0x218D
<b>Type</b>	Array	
<b>Subindex 0</b>		
<b>Meaning</b>	Number of subindices of this object	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	4  Standard value: 4	
<b>Note</b>	—	
<b>Subindex 1...4</b>		
<b>Meaning</b>	The value specifies the parameter type of the selected PD parameter.	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0: off (no parameter type defined) 1: Long (32bit) 2: Word (16bit) 3: Byte (8 bit)  Standard value: 0	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb14	PDO out count	0x218E
<b>Meaning</b>	Sets the number of PD out objects	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...4  Standard value: 0	
<b>Note</b>	Is automatically set to 0 when changing the parameters fb10... fb13.	

## 7.2 Input process data (client => manager)

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb15	PD in index	0x218F
<b>Type</b>	Array	
<b>Subindex 0</b>		
<b>Meaning</b>	Number of subindices of this object	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	4 Standard value: 4	
<b>Note</b>	–	
<b>Subindex 1...4</b>		
<b>Meaning</b>	Default up to 8 parameter addresses to be used as process data. Only parameters may be used that are allowed as process data.	
<b>Data length</b>	16 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0000h...7FFFh Standard value: 0000h	
<b>Note</b>	–	

## PROCESS DATA MAPPING

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb16	PD in subindex	0x2190
<b>Type</b>	Array	
<b>Subindex 0</b>		
<b>Meaning</b>	Number of subindices of this object	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	4 Standard value: 4	
<b>Note</b>	—	
<b>Subindex 1...8</b>		
<b>Meaning</b>	The value of the subindex determines the parameter set of the selected PD parameter.	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	1...8 for subindex 1...8 (or rather set 0..7) Standard value: 1	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb17	PD in offset	0x2191
<b>Type</b>	Array	
<b>Subindex 0</b>		
<b>Meaning</b>	Number of subindices of this object	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	4 Standard value: 4	
<b>Note</b>	—	
<b>Subindex 1...4</b>		
<b>Meaning</b>	Specifies the offset of occupancy in the process data field. Position of the value of the mapped parameter.	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...3 Standard value: 0	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb18	PD in type	0x2192
<b>Type</b>	Array	
<b>Subindex 0</b>		
<b>Meaning</b>	Number of subindices of this object	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	4 Standard value: 4	
<b>Note</b>	—	
<b>Subindex 1...4</b>		
<b>Meaning</b>	The value specifies the parameter type of the selected PD parameter.	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0: off (no parameter type defined) 1: Long (32bit) 2: Word (16bit) 3: Byte (8 bit)  Standard value: 0	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb19	PDO in count	0x2193
<b>Meaning</b>	Sets the number of PD in objects	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...4  Standard value: 0	
<b>Note</b>	Is automatically set to 0 when changing parameters fb15...fb18.	

## **8 Description File (IODD)**

The description files „IO-Link Device Descriptions“ (IODDs) for G6 devices with IO-Link interface can be downloaded from the KEB homepage ([www.keb.de](http://www.keb.de)) under the search term „IODD“. The IODDs comply with the specification of version 1.0.1.

A CiA402-compatible parameter description file can be found via the IODDfinder on the IO-Link homepage at [www.io-link.com](http://www.io-link.com).

## 9 Fieldbus Watchdog

The fieldbus watchdog is a function in the IO-Link control board. It is used to trigger an error or warning in the inverter, if certain events are not cyclically repeated within a certain time. The activation of the watchdog is set by the control card parameters fb04 and fb05. The monitoring time and the at exceeding of the monitoring time executed function is set by parameter in the inverter (pn05, pn06).

Id-Text	Name	Parameter index								
fb40	Buswatchdog activation	0x21A8								
<b>Meaning</b>	Allows a delayed activation of the fieldbus watchdog after switching on the device.									
<b>Type</b>	Variable									
<b>Data length</b>	8 bit									
<b>Access</b>	read / write									
<b>Coding</b>	<table border="1"> <tr> <td>0:</td><td>off (fieldbus watchdog inactive)</td></tr> <tr> <td>16:</td><td>Activation after the first asynchronous communication</td></tr> <tr> <td>32:</td><td>Activation by setting the master command to „Processdata output operate“ (0x98)</td></tr> <tr> <td>128:</td><td>Activation by any communication via the IO-Link interface</td></tr> </table>		0:	off (fieldbus watchdog inactive)	16:	Activation after the first asynchronous communication	32:	Activation by setting the master command to „Processdata output operate“ (0x98)	128:	Activation by any communication via the IO-Link interface
0:	off (fieldbus watchdog inactive)									
16:	Activation after the first asynchronous communication									
32:	Activation by setting the master command to „Processdata output operate“ (0x98)									
128:	Activation by any communication via the IO-Link interface									
	Standard value: 0									
<b>Note</b>	Possible settings are OR connected.									

Id-Text	Name	Parameter index						
fb41	Buswatchdog inhibit	0x21A9						
<b>Meaning</b>	Determines on which incidents the fieldbus watchdog gets reseted.							
<b>Type</b>	Variable							
<b>Data length</b>	8 bit							
<b>Access</b>	read / write							
<b>Coding</b>	<table border="1"> <tr> <td>0:</td><td>off (no reset)</td></tr> <tr> <td>16:</td><td>The watchdog is reset upon receipt of process output data.</td></tr> <tr> <td>128:</td><td>Reset by any communication via the IO-Link interface</td></tr> </table>		0:	off (no reset)	16:	The watchdog is reset upon receipt of process output data.	128:	Reset by any communication via the IO-Link interface
0:	off (no reset)							
16:	The watchdog is reset upon receipt of process output data.							
128:	Reset by any communication via the IO-Link interface							
	Standard value: 0							
<b>Note</b>	Possible settings are OR connected.							

## 10 Events

In case of an occurring event, the device sets the so-called "event flag", which is transmitted in the process data telegram CHECK/STAT Byte in bit 7. The master detects the set bit and reads the reported event. During the reading of an event, no service data can be exchanged. By this way it is possible to transfer events or states of a device via the IO-Link master to the PLC or visualization.

The COMBIVERT G6 supports detailed events.

The following events are supported:

Order No.	Eventcode	EventQualifier	Description
1	0x8CA0 (manufacturer specific)	Instance: Application Type: Information Mode: Single shot	Sent when PD-in count fb19 is set to 0, or when communication to the power unit is lost or gets restored.

*Table 3: Events*

The "PD valid" bit in the event service is also set when valid process data are sent from the power unit to the IO-Link master.

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb27	Synchronization state	0x219B
<b>Meaning</b>	State of synchronization to the fieldbus cycle	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	0: off (device not synchronous) 1: on (device synchronous)  Standard value: 0	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
fb28	PD access time	0x219C
<b>Meaning</b>	Processing time, which is required, to process the PD data (from FPGA sync until the end of processing with fully-utilized process data length in both directions).	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read	
<b>Coding</b>	0...500 µs  Standard value: 0 µs	
<b>Note</b>	—	

## 11 Operator Parameter

The operator parameters determine the configuration of the G6 IO-Link control. Furthermore, the software version as well as the current state can be read.

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os00	operator identifier	0x2080
<b>Meaning</b>	Displays the control board type, as well as the software version.	
<b>Type</b>	Variable	
<b>Data length</b>	32 bit	
<b>Access</b>	read	
<b>Coding</b>	e.g.: 150405 15xxxx: G6 xx05xx: IO-Link xxxx05: Version of the parameter configuration  Standard value: Device-dependent	
<b>Note</b>	–	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os02	software date OS	0x2082
<b>Meaning</b>	Software date of the control board	
<b>Type</b>	Variable	
<b>Data length</b>	32 bit	
<b>Access</b>	read	
<b>Coding</b>	0.0000...9999, 1231: The year is displayed before the comma, month and day are after that. 2012,0813 means 13.08.2012.  Standard value: 0.0000	
<b>Note</b>	–	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os03	software version	0x2083
<b>Meaning</b>	Software version of the control board	
<b>Type</b>	Variable	
<b>Data length</b>	32 bit	
<b>Access</b>	read	
<b>Coding</b>	0.0.0.0...255.255.255.255 e.g.: 1.3.0.1  Standard value: 0.0.0.0	
<b>Note</b>	–	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os04	diag error count	0x2084
<b>Meaning</b>	Specifies the number of errors occurred on the diagnostic interface.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...255 Standard value: 0	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os05	diag response delay time	0x2085
<b>Meaning</b>	Sets the minimum response delay time for requests on the diagnostic interface.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...126 ms Standard value: 0 ms	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os06	baud rate diag	0x2086
<b>Meaning</b>	Default transfer speed on the diagnostic interface.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0: 1.2 kbit/s 1: 2.4 kbit/s 2: 4.8 kbit/s 3: 9.6 kbit/s 4: 19.2 kbit/s 5: 38.4 kbit/s 6: 55.5 kbit/s 7: 57.6 kbit/s 8: 100 kbit/s Standard value: 5	
<b>Note</b>	—	

## OPERATOR PARAMETER

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os07	node ID	0x2087
<b>Meaning</b>	This parameter specifies the inverter address for the diagnostic interface (DIN 66019). The parameter is an image of the system parameter Sy06.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...239  Standard value: 1	
<b>Note</b>	–	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>																		
os08	operator type	0x2088																		
<b>Meaning</b>	Displays the implemented control card functions.																			
<b>Type</b>	Variable																			
<b>Data length</b>	16 bit																			
<b>Access</b>	read																			
<b>Coding</b>	<table border="1"> <tr> <td>Bit 0</td> <td>Initiator</td> <td>0: without 1: with initiator</td> </tr> <tr> <td>Bit1</td> <td>Keyboard/display</td> <td>0: without 1: with keyboard/LC display</td> </tr> <tr> <td>Bit8</td> <td>PU image</td> <td>0: with power unit image 1: without power unit image</td> </tr> <tr> <td>Bit 10</td> <td>f = 0Hz</td> <td>0: without 1: with f=0Hz functionality</td> </tr> <tr> <td>Bit 11</td> <td>STO</td> <td>0: without safety function 1: with safety function STO</td> </tr> <tr> <td>Bit 12...13</td> <td>Bus connection</td> <td>0: without (standard) 1: CANopen 2: IO-Link 3: EtherCAT 4: VARAN</td> </tr> </table> Standard value: 0		Bit 0	Initiator	0: without 1: with initiator	Bit1	Keyboard/display	0: without 1: with keyboard/LC display	Bit8	PU image	0: with power unit image 1: without power unit image	Bit 10	f = 0Hz	0: without 1: with f=0Hz functionality	Bit 11	STO	0: without safety function 1: with safety function STO	Bit 12...13	Bus connection	0: without (standard) 1: CANopen 2: IO-Link 3: EtherCAT 4: VARAN
Bit 0	Initiator	0: without 1: with initiator																		
Bit1	Keyboard/display	0: without 1: with keyboard/LC display																		
Bit8	PU image	0: with power unit image 1: without power unit image																		
Bit 10	f = 0Hz	0: without 1: with f=0Hz functionality																		
Bit 11	STO	0: without safety function 1: with safety function STO																		
Bit 12...13	Bus connection	0: without (standard) 1: CANopen 2: IO-Link 3: EtherCAT 4: VARAN																		
<b>Note</b>	–																			

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os09	PU max invbusy retries	0x2089
<b>Meaning</b>	Number of repetitions that are sent on the internal bus from the power module to the controller if it rejects "inverter busy" error.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...255 Standard value: 200	
<b>Note</b>	–	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os10	PU tout count	0x208A
<b>Meaning</b>	Counts the timeouts on the internal bus between control and power unit.	
<b>Type</b>	Variable	
<b>Data length</b>	16 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0...65535 Standard value: 0	
<b>Note</b>	–	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os12	operator command	0x208C
<b>Meaning</b>	Default of instructions according to coding (see below)	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0: no 1: Load default values in all operator parameters 2: reinitialize PU-parameter image  Standard value: 0	
<b>Note</b>	–	

## OPERATOR PARAMETER

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>												
os13	operator state	0x208D												
<b>Meaning</b>	Displays the state of the power unit, as well as the image of the power unit parameter of the control board.													
<b>Type</b>	Variable													
<b>Data length</b>	8 bit													
<b>Access</b>	read													
<b>Coding</b>	<table border="1"> <tr> <td>Bit 0</td> <td>reserved</td> <td></td> </tr> <tr> <td>Bit 1...2</td> <td>PUConfIDState</td> <td>0: PU-ID unknown 2: PU-ID OK 4: PU-ID incorrect</td> </tr> <tr> <td>Bit 3...5</td> <td>PU image state</td> <td>0: PU-Image not init. 1: write PU image 3: PU-Image changed 4: PU-Image init. 5: PU-Image check 6: PU image not available</td> </tr> <tr> <td>Bit 6...15</td> <td>reserved</td> <td></td> </tr> </table> <p>Standard value: 0</p>		Bit 0	reserved		Bit 1...2	PUConfIDState	0: PU-ID unknown 2: PU-ID OK 4: PU-ID incorrect	Bit 3...5	PU image state	0: PU-Image not init. 1: write PU image 3: PU-Image changed 4: PU-Image init. 5: PU-Image check 6: PU image not available	Bit 6...15	reserved	
Bit 0	reserved													
Bit 1...2	PUConfIDState	0: PU-ID unknown 2: PU-ID OK 4: PU-ID incorrect												
Bit 3...5	PU image state	0: PU-Image not init. 1: write PU image 3: PU-Image changed 4: PU-Image init. 5: PU-Image check 6: PU image not available												
Bit 6...15	reserved													
<b>Note</b>	—													

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os14	store state	0x208E
<b>Meaning</b>	Non-volatile parameters are immediately stored by writing of value "0". After completion of the storage the value jumps to status "1". If at the end of the download lists in COMBIVIS the value "0" comes before value "1", COMBIVIS will send the value as long as the inverter has completed the storing.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0: busy 1: ready 2: off  Standard value: 1	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os15	store mode	0x208F
<b>Meaning</b>	The memory type of non-volatile parameters must be adjusted with this parameter. The parameters will not be stored if the value is "0", the device automatically changes to value "1" after the next "power down". This value is the default value, the non-volatile parameters are always stored. Value „2“ deactivates the storing, also over the next start of the module.	
<b>Type</b>	Variable	
<b>Data length</b>	8 bit	
<b>Access</b>	read / write	
<b>Coding</b>	0: off, curr. off / on at startup 1: on, always store 2: off, never store  Standard value: 1	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os17	safety module type	0x2091
<b>Meaning</b>	Type of safety module	
<b>Type</b>	Variable	
<b>Data length</b>	16 bit	
<b>Access</b>	read	
<b>Coding</b>	0: no safety module available 1: Type 1 (STO)  Standard value: 0	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os18	safety module software date	0x2092
<b>Meaning</b>	Displays the software date of the safety module.	
<b>Type</b>	Variable	
<b>Data length</b>	32 bit	
<b>Access</b>	read	
<b>Coding</b>	0.0000...9999, 1231: The year is displayed before the comma, month and day are after that. 2012,0813 means 13.08.2012. If no safety module is installed, the value "0: no safety functionality" is displayed.  Standard value: 0	

## OPERATOR PARAMETER

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os19	safety module software version	0x2093
<b>Meaning</b>	Displays the software version of the safety module.	
<b>Type</b>	Variable	
<b>Data length</b>	32 bit	
<b>Access</b>	read	
<b>Coding</b>	0.0.0...255.255.255.255 If no safety module is installed, the value "0: no safety functionality" is displayed.  Standard value: 0	
<b>Note</b>	–	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>															
os20	safety module signal state	0x2094															
<b>Meaning</b>	Displays the signal state of the safety module.																
<b>Type</b>	Variable																
<b>Data length</b>	8 bit																
<b>Access</b>	read																
<b>Coding</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Bit 0</td> <td style="padding: 2px;">no safety functionality</td> <td style="padding: 2px;">1: no safety functionality</td> </tr> <tr> <td style="padding: 2px;">Bit 1...2</td> <td style="padding: 2px;">Error STO</td> <td style="padding: 2px;">1: Error STO 2: STO OK</td> </tr> <tr> <td style="padding: 2px;">Bit3</td> <td style="padding: 2px;">ModFeedback</td> <td style="padding: 2px;">4: ModFeedback ist set 8: ModFeedback ist not set</td> </tr> <tr> <td style="padding: 2px;">Bit 4...5</td> <td style="padding: 2px;">ST Safety</td> <td style="padding: 2px;">16: ST is set 32: ST is not set</td> </tr> <tr> <td style="padding: 2px;">Bit 6...7</td> <td style="padding: 2px;">PU alive</td> <td style="padding: 2px;">64: PU alive 128: PU not alive</td> </tr> </table> Standard value: 0		Bit 0	no safety functionality	1: no safety functionality	Bit 1...2	Error STO	1: Error STO 2: STO OK	Bit3	ModFeedback	4: ModFeedback ist set 8: ModFeedback ist not set	Bit 4...5	ST Safety	16: ST is set 32: ST is not set	Bit 6...7	PU alive	64: PU alive 128: PU not alive
Bit 0	no safety functionality	1: no safety functionality															
Bit 1...2	Error STO	1: Error STO 2: STO OK															
Bit3	ModFeedback	4: ModFeedback ist set 8: ModFeedback ist not set															
Bit 4...5	ST Safety	16: ST is set 32: ST is not set															
Bit 6...7	PU alive	64: PU alive 128: PU not alive															
<b>Note</b>	–																

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os21	safety module information	0x2095
<b>Meaning</b>	Displays the error code of the safety module	
<b>Type</b>	Variable	
<b>Data length</b>	32 bit	
<b>Access</b>	read	
<b>Coding</b>	0...65535 Standard value: 0	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os23	current PU Id	0x2097
<b>Meaning</b>	Displays of the power unit Id	
<b>Type</b>	Variable	
<b>Data length</b>	32 bit	
<b>Access</b>	read	
<b>Coding</b>	0...65535 Standard value: 0	
<b>Note</b>	—	

<b>Id-Text</b>	<b>Name</b>	<b>Parameter index</b>
os30	serial number OS 2	0x209E
<b>Meaning</b>	Serial number part 2 of the control hardware.	
<b>Type</b>	Variable	
<b>Data length</b>	32 bit	
<b>Access</b>	read	
<b>Coding</b>	0...4294967295 Standard value: 0	
<b>Note</b>	—	

## REVISION HISTORY

# 12 Revision History

Version	Date	Description
00	2015-10	New creation of the programming manual G6 IO-Link
01	2016-10	New formats, preface, sample pages, new parameters added
02	2019-05	Adaptation to new KEB CI optics
03	2023-08	Update the default pages, editorial changes

**Austria | KEB Automation GmbH**

Ritzstraße 8 4614 Marchtrenk Austria  
 Tel: +43 7243 53586-0 Fax: +43 7243 53586-21  
 E-Mail: info@keb.at Internet: www.keb.at

**Benelux | KEB Automation KG**

Bd Paapsemalaan 20 1070 Anderlecht Belgium  
 Tel: +32 2 447 8580  
 E-Mail: info.benelux@keb.de Internet: www.keb.be

**Brazil | KEB South America - Regional Manager**

Rua Dr. Omar Pacheco Souza Ribeiro, 70  
 CEP 13569-430 Portal do Sol, São Carlos Brazil  
 Tel: +55 16 31161294 E-Mail: roberto.arias@keb.de

**Czech Republic | KEB Automation GmbH**

Videnska 188/119d 61900 Brno Czech Republic  
 Tel: +420 544 212 008  
 E-Mail: info@keb.cz Internet: www.keb.cz

**France | Société Française KEB SASU**

Z.I. de la Croix St. Nicolas 14, rue Gustave Eiffel  
 94510 La Queue en Brie France  
 Tel: +33 149620101 Fax: +33 145767495  
 E-Mail: info@keb.fr Internet: www.keb.fr

**Germany | Geared Motors**

KEB Antriebstechnik GmbH  
 Wildbacher Straße 5 08289 Schneeberg Germany  
 Telefon +49 3772 67-0 Telefax +49 3772 67-281  
 Internet: www.keb-drive.de E-Mail: info@keb-drive.de

**Italy | KEB Italia S.r.l. Unipersonale**

Via Newton, 2 20019 Settimo Milanese (Milano) Italia  
 Tel: +39 02 3353531 Fax: +39 02 33500790  
 E-Mail: info@keb.it Internet: www.keb.it

**Japan | KEB Japan Ltd.**

15 - 16, 2 - Chome, Takanawa Minato-ku Tokyo 108 - 0074 Japan  
 Tel: +81 33 445-8515 Fax: +81 33 445-8215  
 E-Mail: info@keb.jp Internet: www.keb.jp

**P. R. China | KEB Power Transmission Technology (Shanghai) Co. Ltd.**

No. 435 QianPu Road Chedun Town Songjiang District  
 201611 Shanghai P.R. China  
 Tel: +86 21 37746688 Fax: +86 21 37746600  
 E-Mail: info@keb.cn Internet: www.keb.cn

**Poland | KEB Automation KG**

Tel: +48 60407727  
 E-Mail: roman.trinczek@keb.de Internet: www.keb.de

**Republic of Korea | KEB Automation KG**

Deoksan-Besttel 1132 ho Sangnam-ro 37  
 Seongsan-gu Changwon-si Gyeongsangnam-do Republic of Korea  
 Tel: +82 55 601 5505 Fax: +82 55 601 5506  
 E-Mail: jaeok.kim@keb.de Internet: www.keb.de

**Spain | KEB Automation KG**

c / Mitjer, Nave 8 - Pol. Ind. LA MASIA  
 08798 Sant Cugat Sesgarrigues (Barcelona) Spain  
 Tel: +34 93 8970268 Fax: +34 93 8992035 E-Mail: vb.espana@keb.de

**Switzerland | KEB Automation AG**

Witzbergstrasse 24 8330 Pfäffikon/ZH Switzerland  
 Tel: +41 43 2886060 Fax: +41 43 2886088  
 E-Mail: info@keb.ch Internet: www.keb.ch

**United Kingdom | KEB (UK) Ltd.**

5 Morris Close Park Farm Industrial Estate  
 Wellingborough, Northants, NN8 6 XF United Kingdom  
 Tel: +44 1933 402220 Fax: +44 1933 400724  
 E-Mail: info@keb.co.uk Internet: www.keb.co.uk

**United States | KEB America, Inc**

5100 Valley Industrial Blvd. South  
 Shakopee, MN 55379 United States  
 Tel: +1 952 2241400 Fax: +1 952 2241499  
 E-Mail: info@kebamerica.com Internet: www.kebamerica.com



**MORE KEB PARTNERS WORLDWIDE:**

[www.keb-automation.com/contact](http://www.keb-automation.com/contact)



**Automation with Drive**

**www.keb.de**

KEB Automation KG Suedstrasse 38 32683 Barntrup Tel. +49 5263 401-0 E-Mail: info@keb.de